



Partsn.	Description
505	Discharge elbow
506	Discharge flange
518**	Check valve
602.2	Switch + holder
603.3	Motor 12 DC.V.
604.3	Motor 24 DC.V.

Partsn.	Description
605.4	Control valve
606.10**	Impeller discharge
608.12	Pump house
609.13	Cutter
610.14**	Top seal

Partsn.	Description
613.18**	Impeller inlet
614.19**	Bearings
644**	Gasket
651	Pump housing complete
625**	Repairkit