

 
PARTS CATALOGUE

 
ODM1013 V. 0.9 2017-06-14

OXE DIESEL
PARTS CATALOGUE

CONTENT

1 OXE DIESEL 200	1
1.1 UPPER HOUSING ASSEMBLY	3
1.1.1 UPPER BELT HOUSING ASSEMBLY	5
1.1.2 DIPSTICK TUBE ASSEMBLY	7
1.2A LOWER LEG XL ASSEMBLY	9
1.2B LOWER LEG XXL ASSEMBLY	11
1.2.1 OIL PICKUP ASSEMBLY	13
1.2.2 LOWER HOUSING ASSEMBLY	15
1.2.3 GEARBOX HOUSING ASSEMBLY	17
1.2.4 GEARBOX HOUSING LID ASSEMBLY	19
1.2.5 BEARING HOUSING ASSEMBLY	21
1.2.6 XL ADAPTER ASSEMBLY	23
1.2.7 XXL ADAPTER ASSEMBLY	25
1.2.8 HYDRAULIC SYSTEM ASSEMBLY	27
1.3 GEARBOX ASSEMBLY	31
1.3.1 INPUT SHAFT ASSEMBLY	33
1.3.2 OUTPUT SHAFT ASSEMBLY	36
1.3.3 REVERSE GEAR ASSEMBLY	37
1.4 TRANSOM MOUNT ASSEMBLY	39
1.4.1 STEERING ARM ASSEMBLY	41
1.4.2 LOWER YOKE ASSEMBLY	43
1.4.3 SWIVEL BRACKET ASSEMBLY	45
1.4.4 CLAMP BRACKETS ASSEMBLY	47
1.5 MARINE ENGINE ASSEMBLY	49
1.5.1 TURBO ASSEMBLY	51
1.5.2 THERMOSTAT BYPASS ASSEMBLY	59
1.5.3 COOLERS ASSEMBLY	61
1.5.4 FUEL SYSTEM ASSEMBLY	77
1.5.4.1 EXTERNAL FUEL PUMP KIT	79
1.5.5 DRY SUMP ASSEMBLY	81
1.5.6 STARTER MOTOR ASSEMBLY	83
1.5.7 ALTERNATOR ASSEMBLY	85
1.5.8 ENGINE BLOCK ASSEMBLY	87
1.5.9 FLYWHEEL ASSEMBLY	89
1.5.10 EXHAUST MANIFOLD ASSEMBLY	91
1.5.11 CRANKCASE VENTILATION ASSEMBLY	93
1.6 ELECTRIC SYSTEM	95
1.6.1 ECU ASSEMBLY	97
1.7 COWLING ASSEMBLY	99
1.7.1 COWL SET	101
1.8 ENGINE INTERNAL PARTS	103
1.8.1 CAMSHAFT ASSEMBLY	105
1.8.2 CRANKSHAFT ASSEMBLY	107
1.8.3 CYLINDER HEAD ASSEMBLY	109
1.8.4 TIMING BELT ASSEMBLY	112
1.8.5 ENGINE OIL SYSTEM ASSEMBLY	113
1.8.5.1 ENGINE OIL FILTER ASSEMBLY	114
1.8.6 OIL PUMP ASSEMBLY	115
1.8.7 GLOW PLUGS AND INJECTORS	116
1.9 SERVICE/REPAIR KITS	117
1.9.1 SERVICE KIT 1 / 50H.....	119
1.9.2 SERVICE KIT 2 / 200H	121
1.9.3A SERVICE KIT 3 XL/ 800H	123
1.9.3B SERVICE KIT 3 XXL/800H	125
1.9.4 HEAT EXCHANGER BUNDLE KIT	127
1.9.5 HYDRAULIC COOLER CORE KIT	129
1.9.6 SEA WATER IMPELLER KIT	131
1.9.7 TURBOCHARGER SERVICE KIT	133
1.9.8 UPPER BELT SERVICE KIT	135
1.9.9 UPPER BELT BEARING KIT	136
1.9.10 LOWER BELT SERVICE KIT XL/XXL	137
1.9.11 LOWER BELT BEARING KIT	139
1.9.12 LOWER HOUSING ASSEMBLY KIT	141
1.9.13 HYDRAULIC OIL FILTER KIT	143
1.9.14 HYDRAULIC PUMP SERVICE KIT	144
1.9.15 PTT SERVICE KIT	145
1.9.16 GEARBOX REPAIR KIT	147
1.9.17 GEARBOX SERVICE KIT	149
1.9.18 GEARBOX BEARING KIT	150
1.9.19 PROPELLER SHAFT REPAIR KIT	151
1.9.20 PROPELLER SHAFT BEARING KIT	152
1.9.21 ANODE KIT	153
1.9.22 SENSOR KIT	154
1.9.23 FUEL PUMP KIT	155
2 NOTES	157

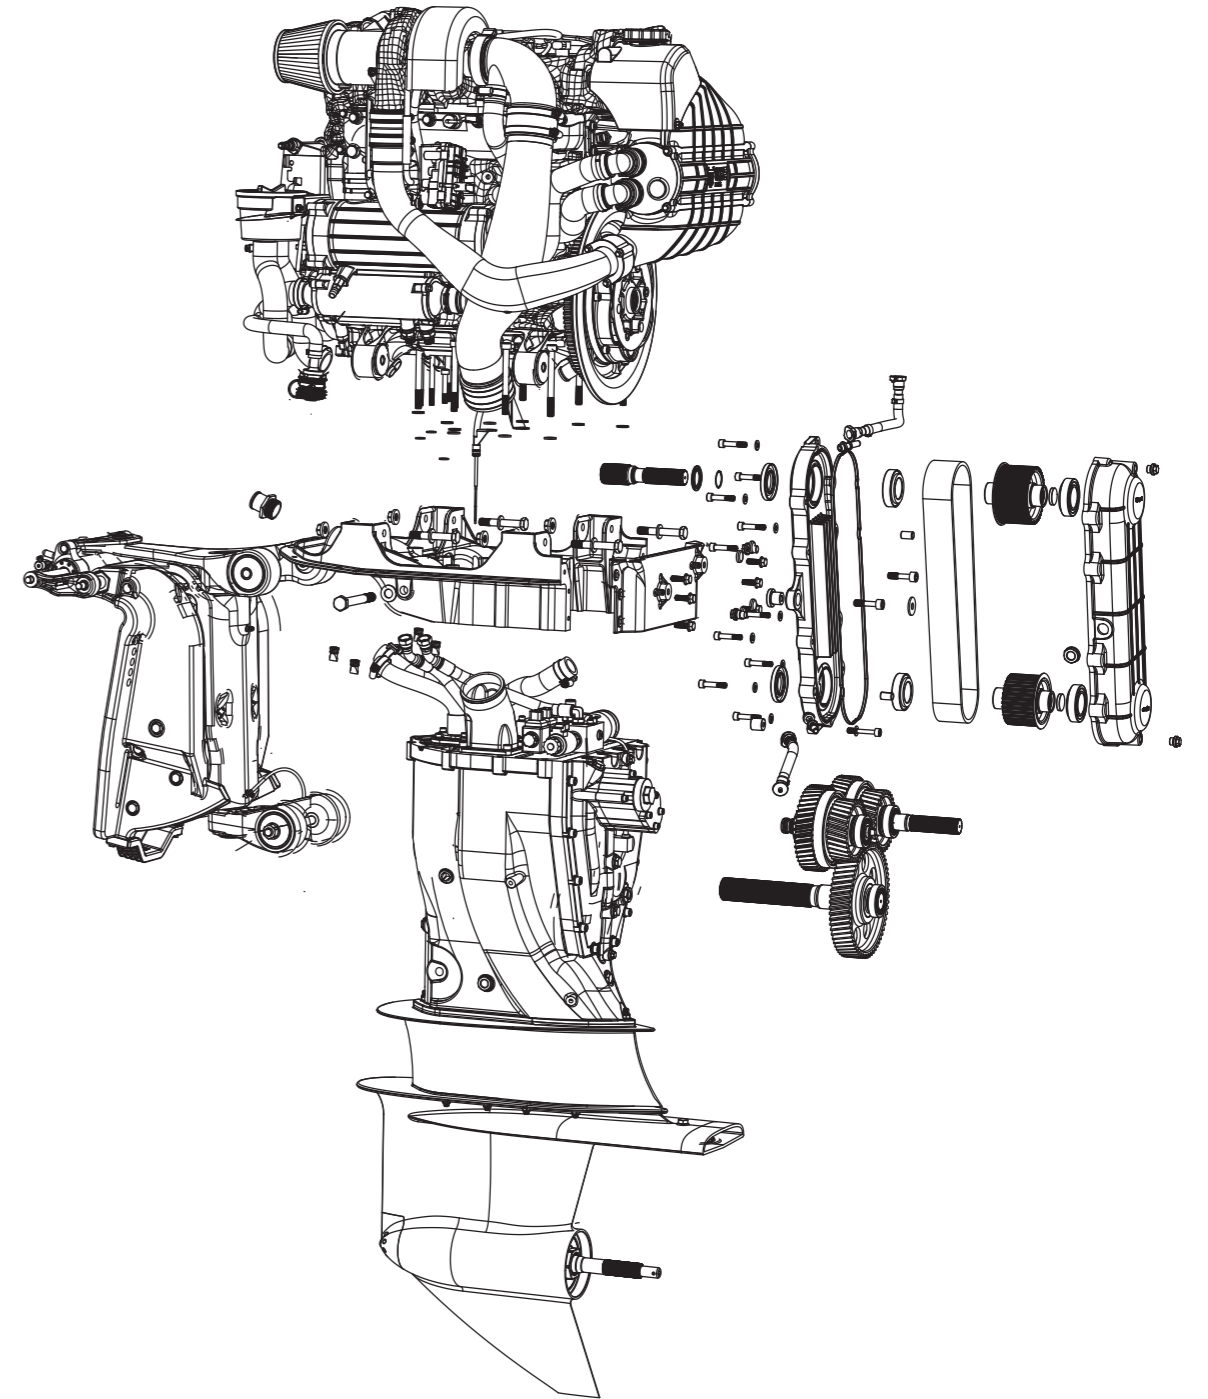

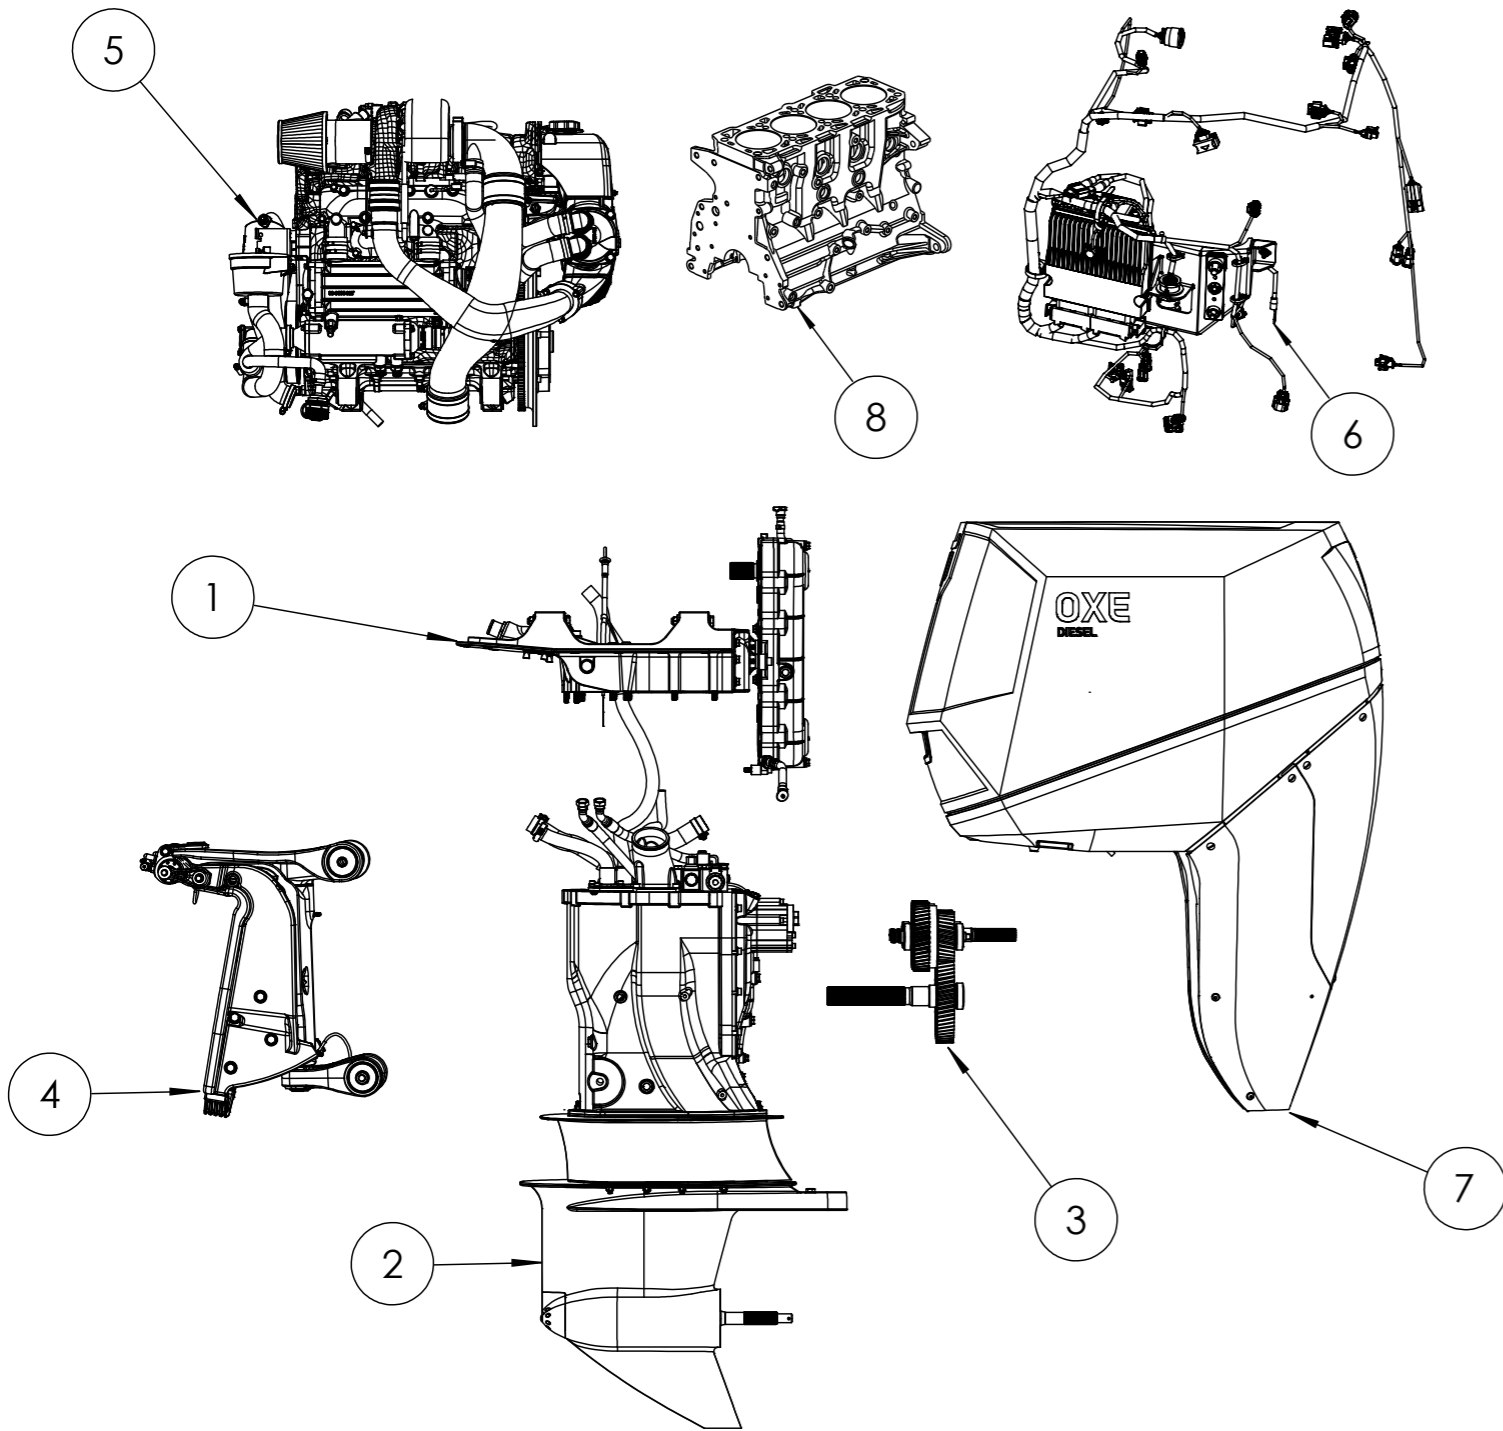


PART LIST		
ITEM NO.	PART NUMBER	DESCRIPTION
1	30-0110-001	Upper housing assembly
2	30-0111-001 / 30-0111-200	Lower leg assembly XL / XXL
3	30-0112-001	Gearbox assembly
4	30-0113-001	Transom mount assembly
5	30-0114-001	Marine engine assembly
6	30-0116-001	Electric system
7	30-0117-001	Cowling assembly
8	30-0170-001	Internal engine parts
9		Service/repair kits

1.1 UPPER HOUSING ASSEMBLY

30-0110-001
OXE DIESEL PARTS CATALOGUE

1.1 UPPER HOUSING ASSEMBLY

 30-0110-001
OXE DIESEL PARTS CATALOGUE

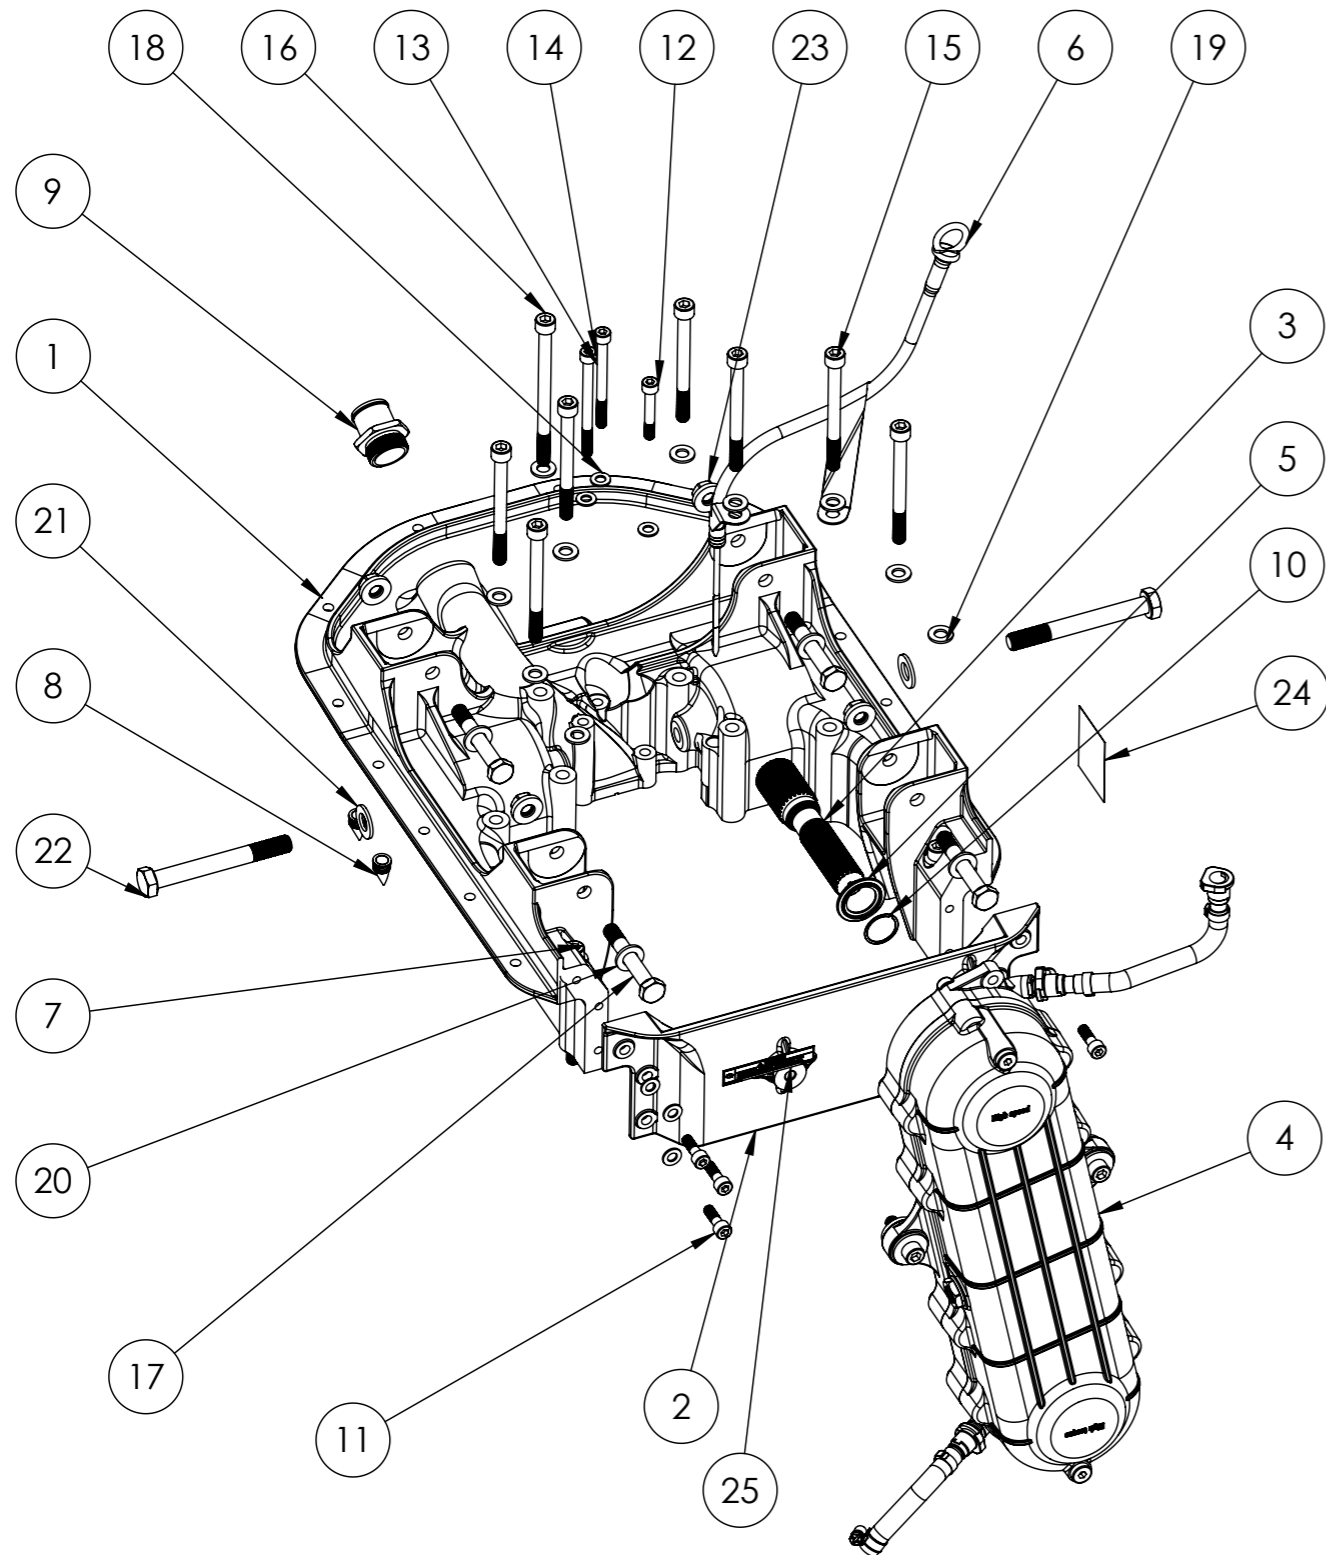

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0110-020	Adapter plate	1
2	30-0110-021	Adapter back plate	1
3	30-0110-023	Engine adapter shaft	1
4	30-0110-056	Belt housing assembly	1
5	30-0110-068	Engine adaptor shaft ring	1
6	30-0110-079	Dipstick tube assembly	1
7	30-0110-085	Guiding screw	2
8	30-0122-042	Duck bill	4
9	30-0122-064	Connector	1
10	30-0122-108	Clip	1
11	30-0130-042	Bolt	6
12	30-0130-047	Bolt	1
13	30-0130-054	Bolt	1
14	30-0130-055	Bolt	1
15	30-0130-072	Bolt	7
16	30-0130-075	Bolt	1
17	30-0130-169	Bolt	4
18	30-0130-192	Washer	9
19	30-0130-193	Washer	10
20	30-0130-194	Washer	4
21	30-0130-199	Washer	2
22	30-0130-290	Bolt	2
23	30-0130-312	Washer	4
24	30-0300-001	Identification label	1
25	30-0300-004	Rotation warning label	1

1.1.1 UPPER BELT HOUSING ASSEMBLY

 
30-0110-056

OXE DIESEL PARTS CATALOGUE

1.1.1 UPPER BELT HOUSING ASSEMBLY

30-0110-056

OXE DIESEL PARTS CATALOGUE

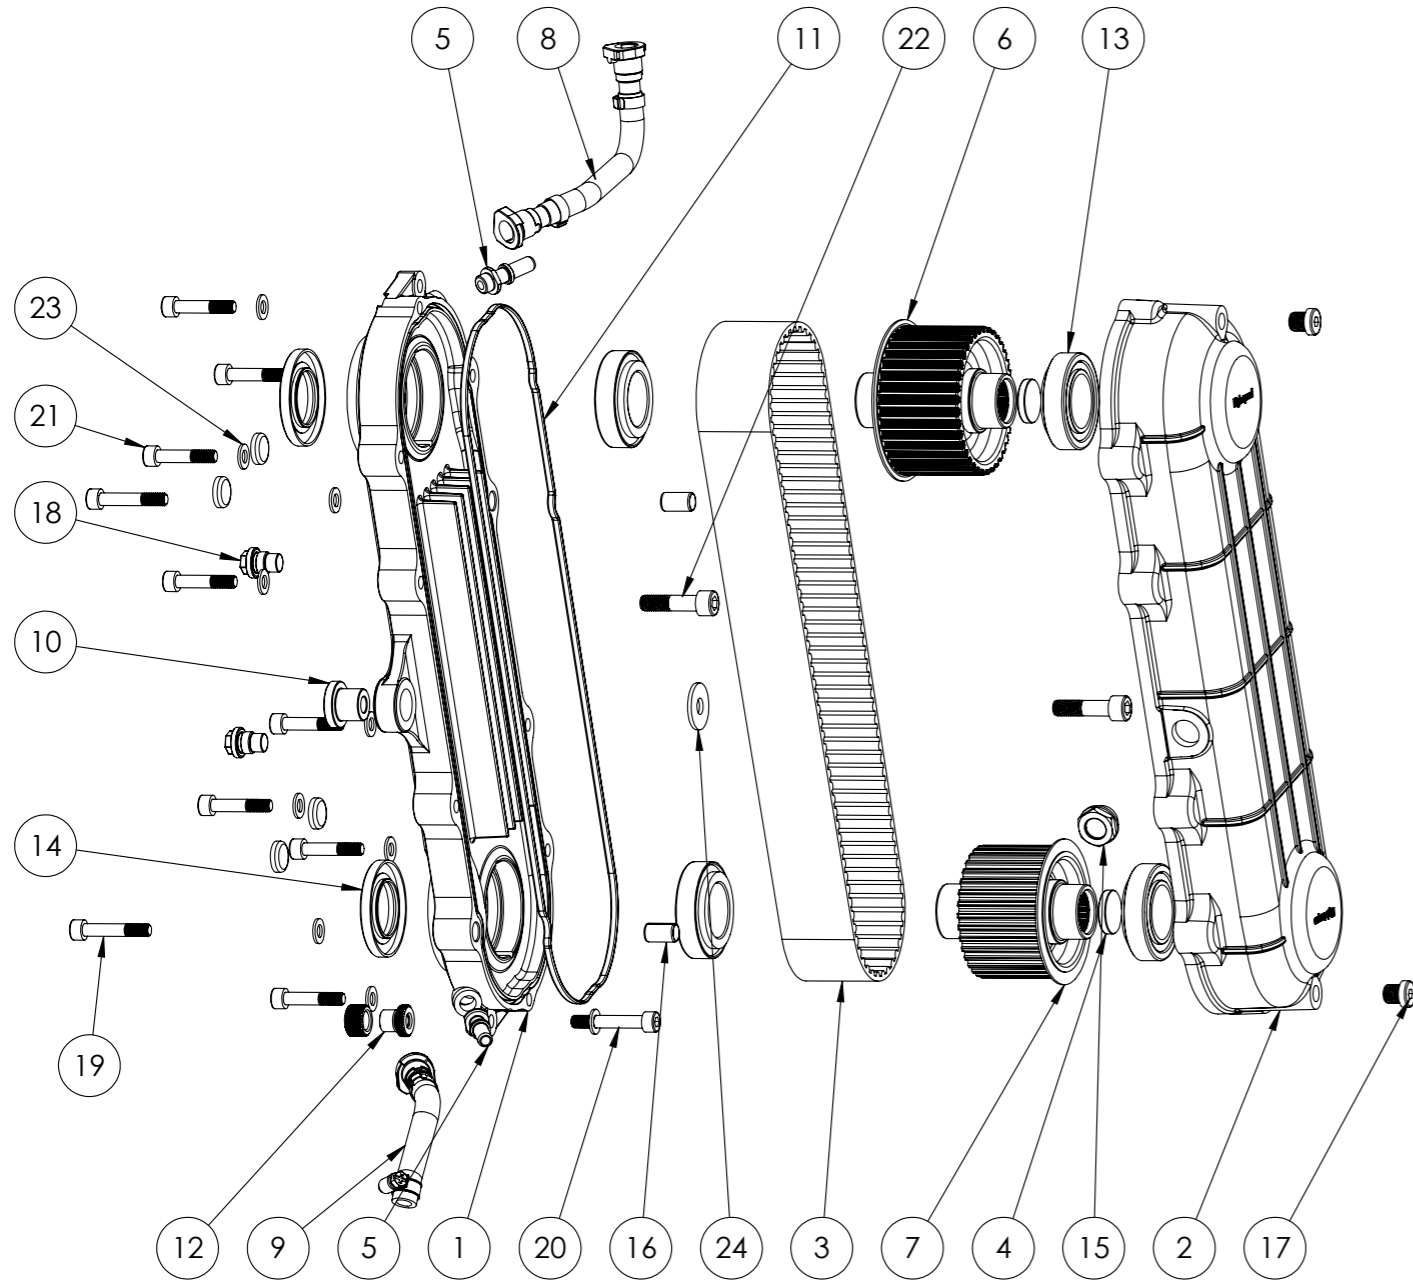


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0110-057	Belt housing bracket	1
2	30-0110-058	Belt housing lid	1
3	30-0110-062	Upper belt	1
4	30-0110-063	Pulley plug	2
5	30-0110-066	Connector	2
6	30-0110-072	Belt pulley 38 assembly	1
7	30-0110-073	Belt pulley 34 assembly	1
8	30-0110-075	Belt housing in hose cpl	1
9	30-0110-076	Belt housing hose out cpl	1
10	30-0110-077	Bushing belt housing	2
11	30-0110-083	Belt housing seal	1
12	30-0110-087	Adjustment screw cpl	1
13	30-0120-019	Bearing	4
14	30-0121-031	Radial seal	2
15	30-0122-018	Sight glass	1
16	30-0122-112	Guide pin	2
17	30-0122-135	Plug	2
18	30-0122-234	Anode	2
19	30-0130-046	Bolt	2
20	30-0130-047	Bolt	1
21	30-0130-057	Bolt	8
22	30-0130-064	Bolt	2
23	30-0130-192	Washer	11
24	30-0130-198	Washer	2

1.1.2 DIPSTICK TUBE ASSEMBLY

30-0110-079

 OXE DIESEL PARTS CATALOGUE

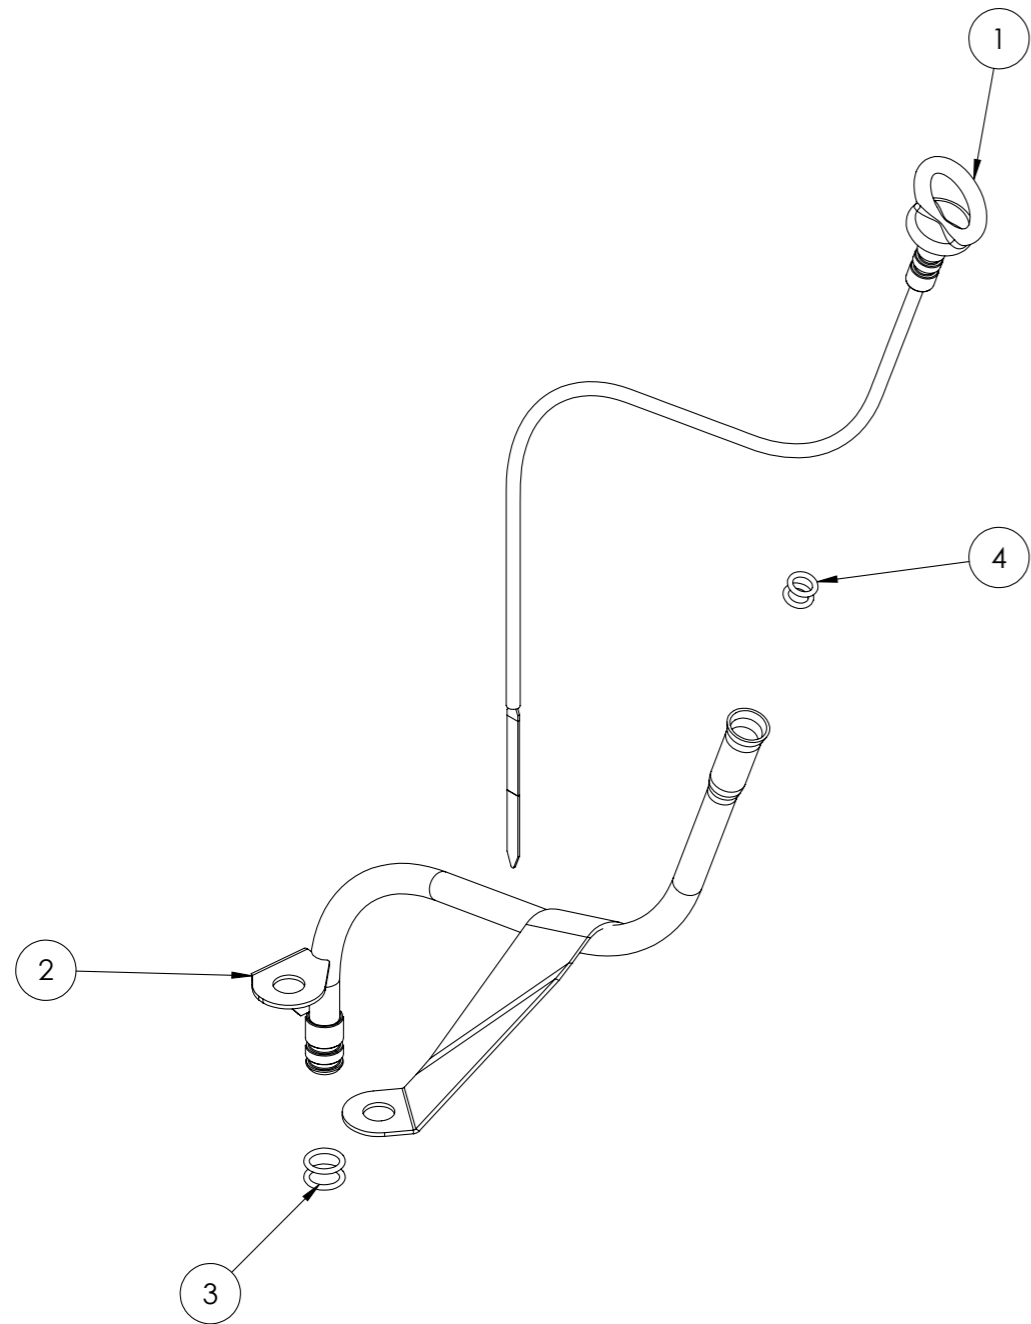

1.1.2 DIPSTICK TUBE ASSEMBLY


30-0110-079

OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0110-041	Dipstick	1
2	30-0110-037	Dipstick tube	1
3	30-0121-034	O-ring	2
4	30-0121-065	O-ring	2

**1.2A LOWER LEG XL
ASSEMBLY**

 30-0111-001
OXE DIESEL PARTS CATALOGUE

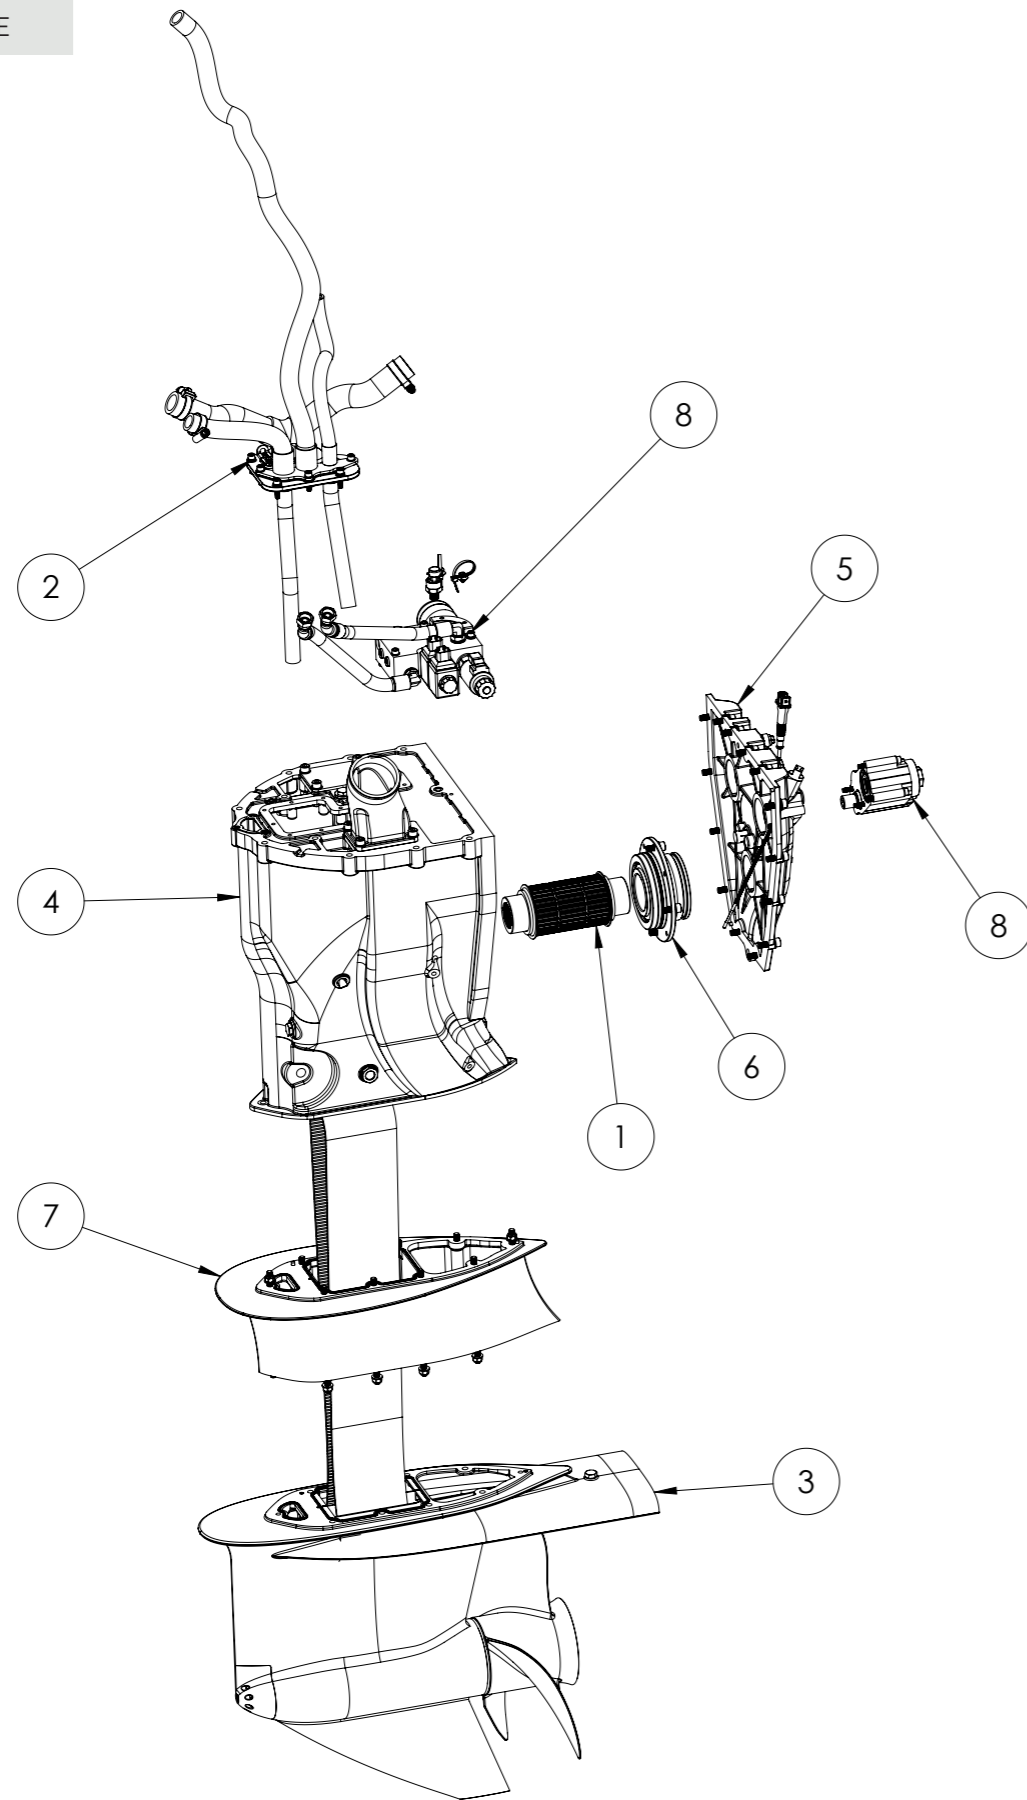


**1.2A LOWER LEG XL
ASSEMBLY**

30-0111-001
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-095	Upper pulley 30 assembly	1
2	30-0111-101	Oil pickup assembly	1
3	30-0111-131	Lower Housing assembly	1
4	30-0111-132	Gearbox housing assembly	1
5	30-0111-133	Gearbox housing lid assembly	1
6	30-0111-134	Bearing housing assembly	1
7	30-0111-135	XL adapter assembly	1
8	30-0115-001	Hydraulic system assembly	1

**1.2B LOWER LEG XXL
ASSEMBLY**

 30-0111-200
OXE DIESEL PARTS CATALOGUE

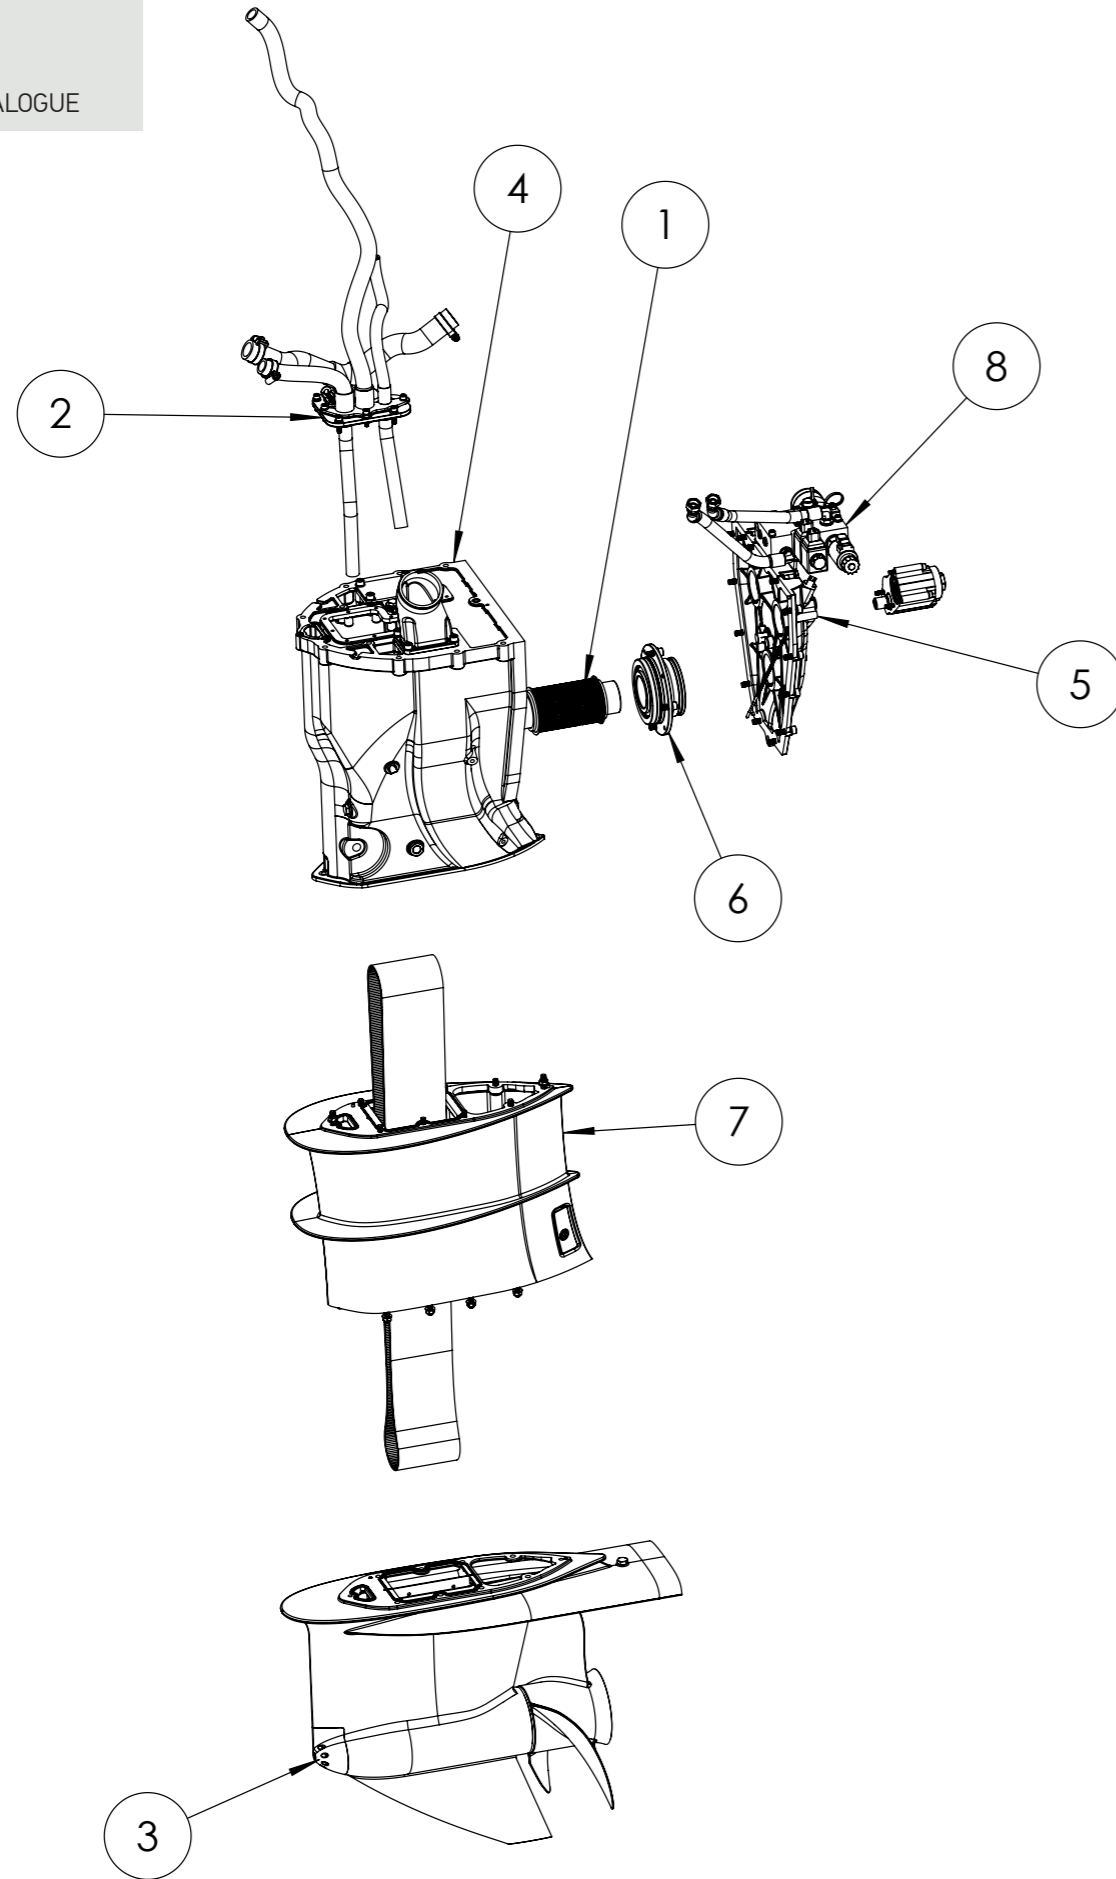


**1.2B LOWER LEG XXL
ASSEMBLY**

30-0111-200
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-095	Upper pulley 30 assembly	1
2	30-0111-101	Oil pickup assembly	1
3	30-0111-131	Lower Housing assembly	1
4	30-0111-132	Gearbox housing assembly	1
5	30-0111-133	Gearbox housing lid assembly	1
6	30-0111-134	Bearing housing assembly	1
7	30-0111-140	XXL adapter assembly	1
8	30-0115-001	Hydraulic system assembly	1

**1.2.1 OIL PICKUP
ASSEMBLY**

 30-0111-101
OXE DIESEL PARTS CATALOGUE

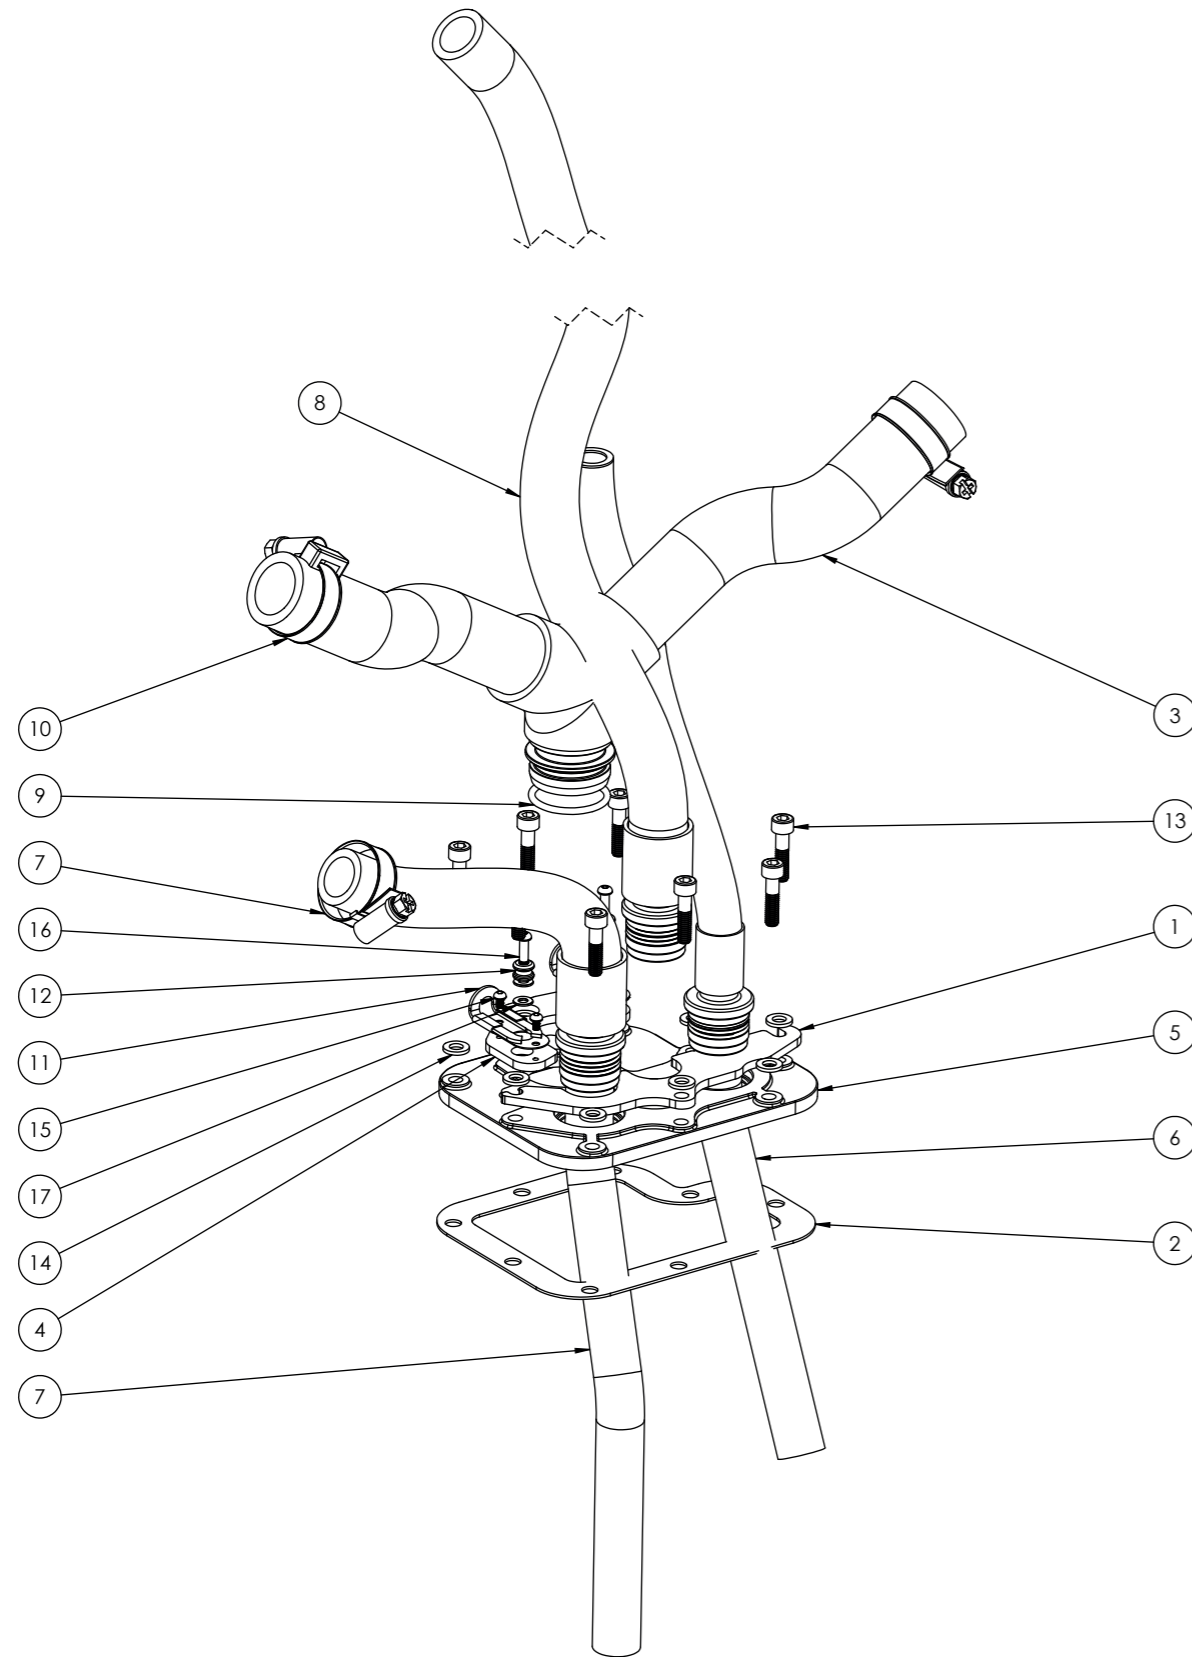


**1.2.1 OIL PICKUP
ASSEMBLY**

30-0111-101
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-086	Oil hose locator	1
2	30-0111-098	Gasket, oil sump lid	1
3	30-0111-102	Hose assembly, oil return	1
4	30-0111-107	Clamp, oil return	1
5	30-0111-108	Lid, oil sump	1
6	30-0111-110	Return pipe, oil sump	1
7	30-0111-111	Pipe, oil pickup	1
8	30-0111-114	Hose oil sump deaeration	1
9	30-0121-046	O-ring	1
10	30-0122-050	Hose clamp	2
11	30-0122-121	Pipe flange clip	2
12	30-0122-122	Spacer	2
13	30-0130-022	Bolt	9
14	30-0130-191	Washer	9
15	30-0130-313	Bolt	4
16	30-0130-314	Bolt	2
17	30-0130-343	Washer	4

1.2.2 LOWER HOUSING ASSEMBLY

 30-0111-131
OXE DIESEL PARTS CATALOGUE

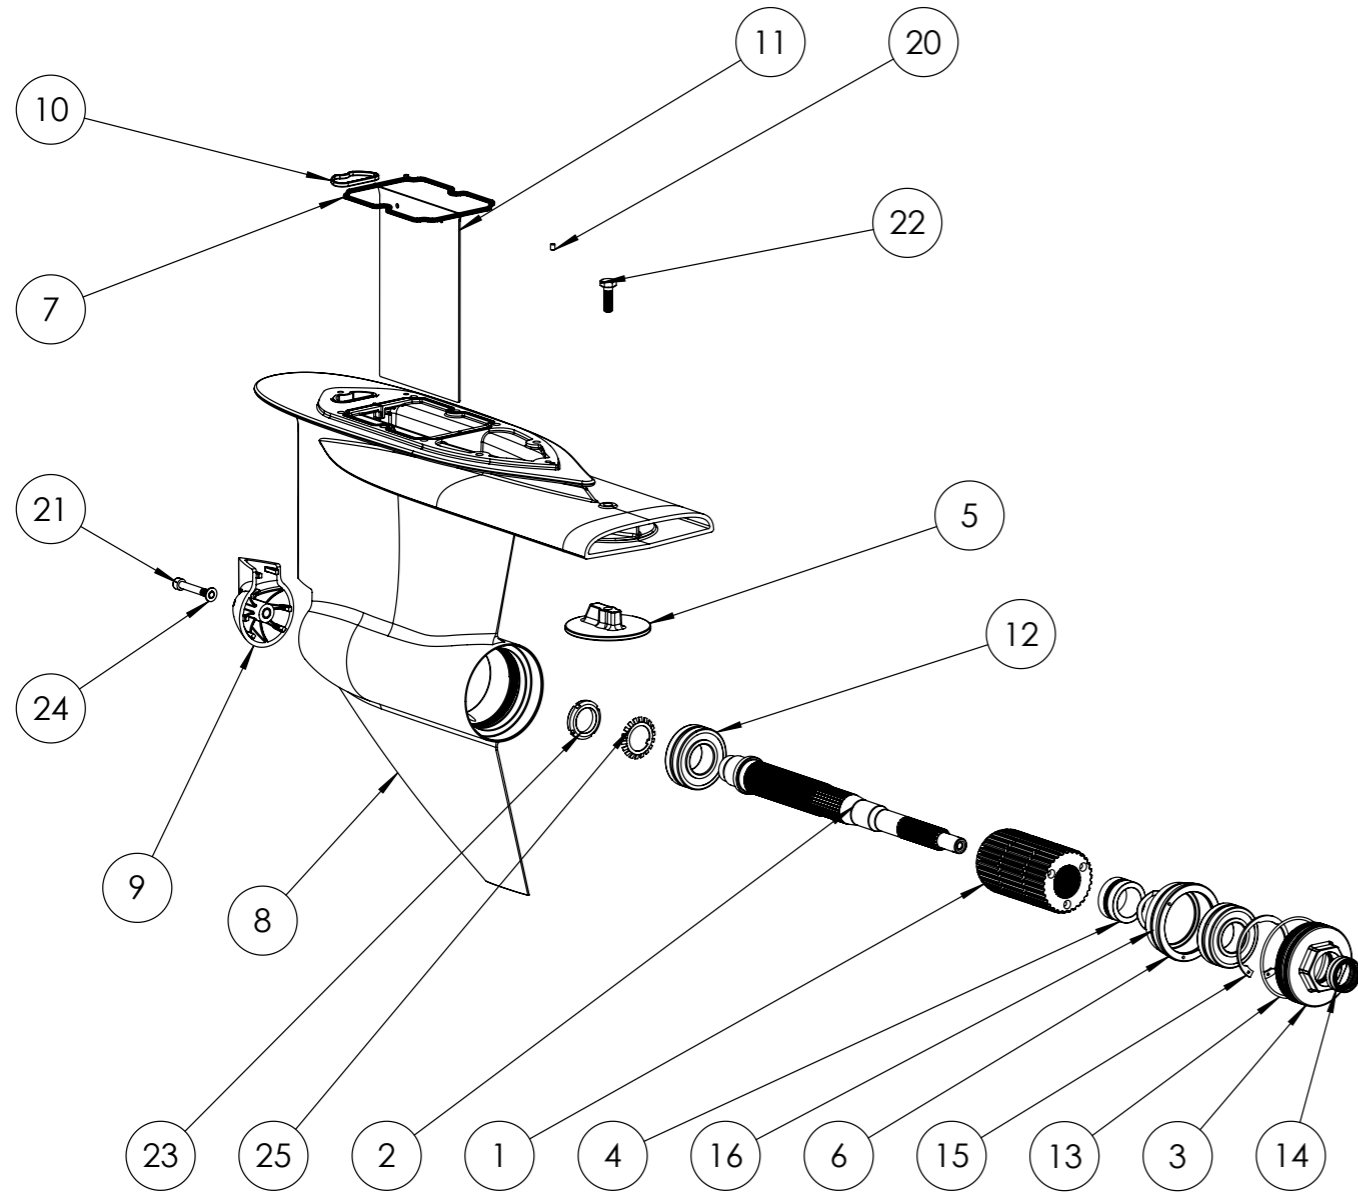

1.2.2 LOWER HOUSING ASSEMBLY

30-0111-131
OXE DIESEL PARTS CATALOGUE


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-003	Lower pulley 30	1
2	30-0111-005	Propeller shaft	1
3	30-0111-006	Retainer	1
4	30-0111-048	Spacer	1
5	30-0111-066	Anode	1
6	30-0111-081	Bearing holder	1
7	30-0111-121	Seal	1
8	30-0111-122	Lower Housing	1
9	30-0111-123	Lower water intake	1
10	30-0111-124	Seal	1
11	30-0111-145	Divider plate	1
12	30-0120-001	Bearing	2
13	30-0121-008	O-ring	1
14	30-0121-071	Radial seal	2
15	30-0122-005	Locking ring	1
16	30-0122-071	Washer	1
17	30-0122-215	Drain plug	1
18	30-0122-217	Drain magnet plug	1
19	30-0122-218	Seal	2
20	30-0122-230	Guide pin	2
21	30-0130-048	Bolt	1
22	30-0130-143	Bolt	1
23	30-0130-186	Nut	1
24	30-0130-192	Washer	1
25	30-0130-195	Locking ring	1

1.2.3 GEARBOX HOUSING ASSEMBLY

30-0111-132
OXE DIESEL PARTS CATALOGUE

1.2.3 GEARBOX HOUSING ASSEMBLY

 
30-0111-132
OXE DIESEL PARTS CATALOGUE

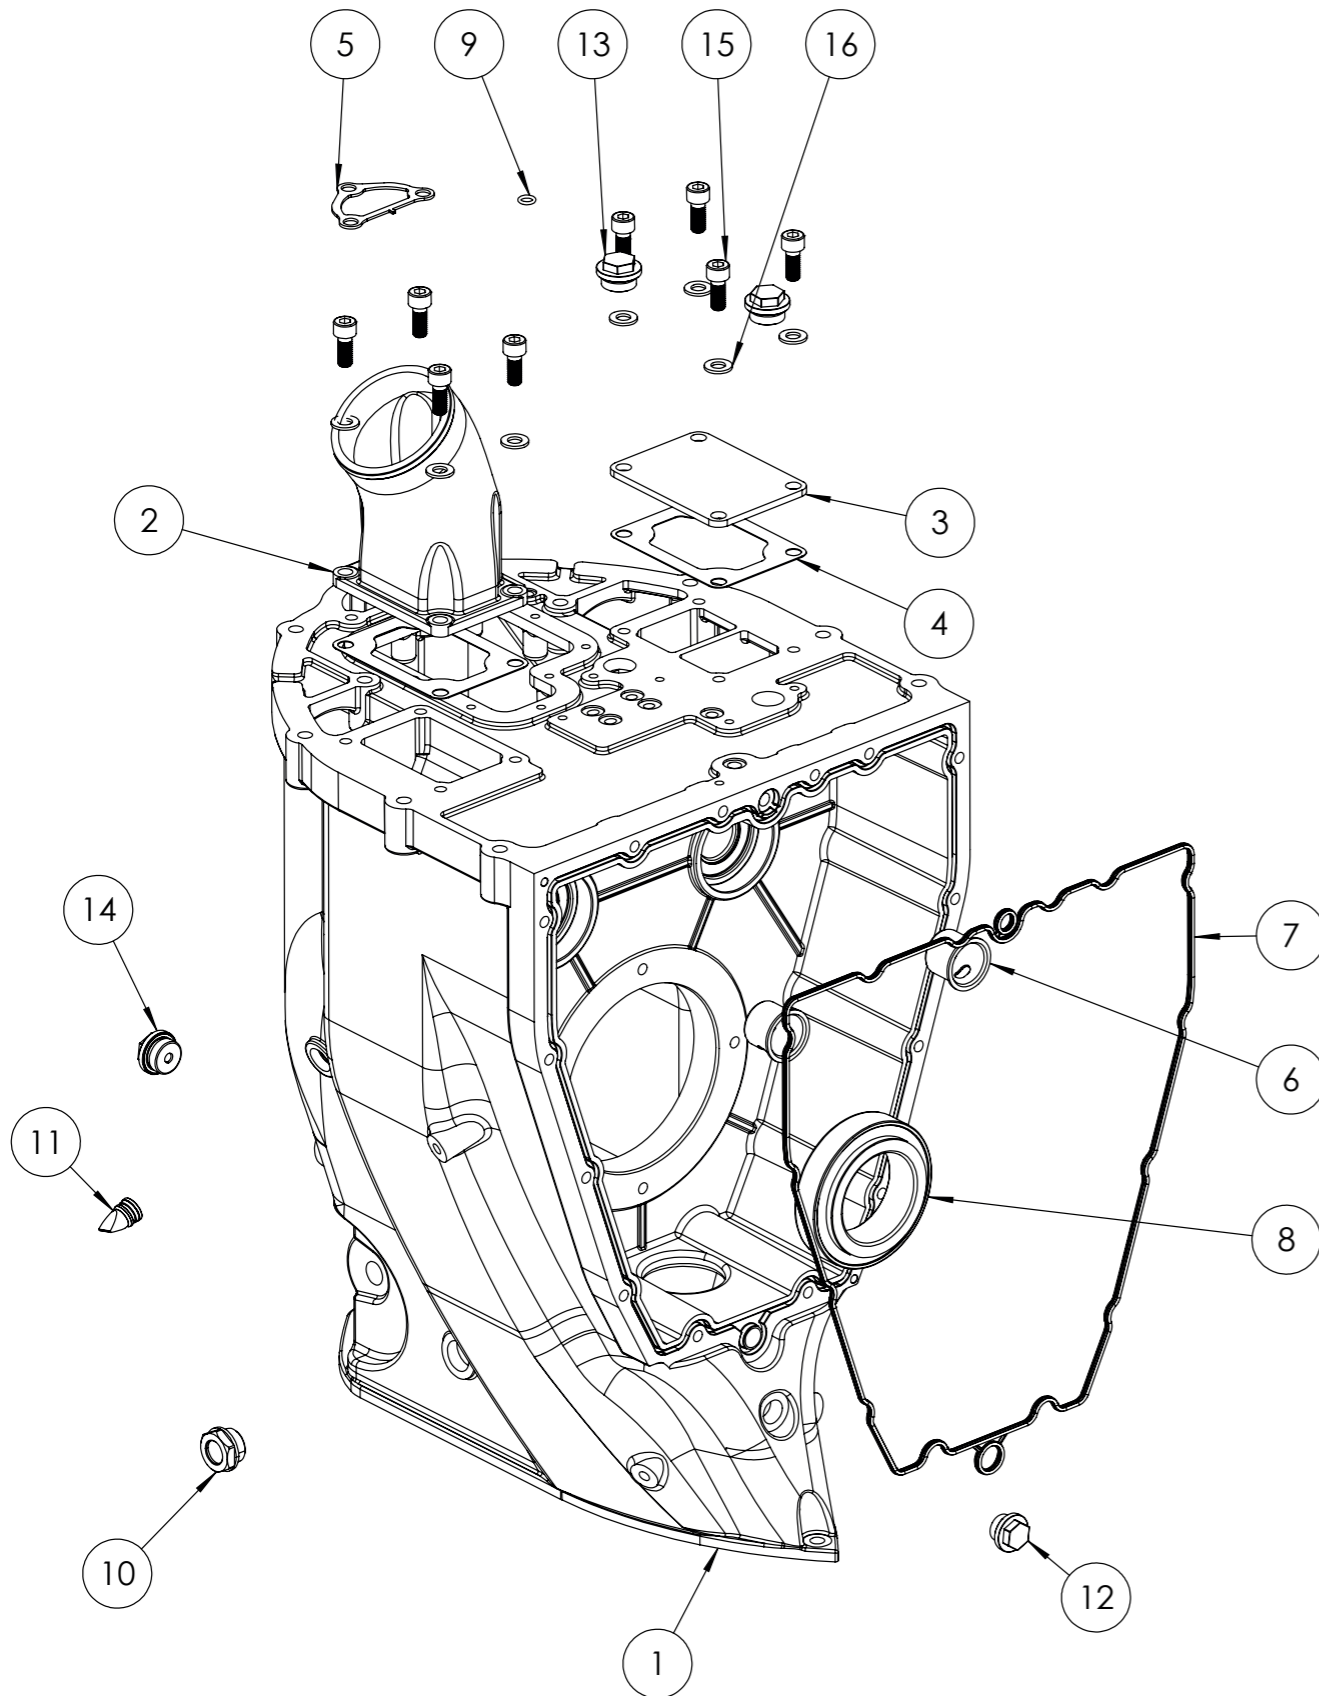

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-020	Gearbox housing	1
2	30-0111-023	Exhaust connector	1
3	30-0111-076	Exhaust block plate	1
4	30-0111-077	Gasket	2
5	30-0111-080	Gasket	1
6	30-0111-099	Axle sleeve	2
7	30-0111-125	Seal	1
8	30-0120-008	Bearing	1
9	30-0121-065	O-ring	1
10	30-0122-018	Sight glass	1
11	30-0122-042	Duck bill	2
12	30-0122-189	Magnet plug	1
13	30-0122-191	Plug	2
14	30-0122-192	Magnet plug	2
15	30-0130-041	Bolt	8
16	30-0130-192	Washer	8

1.2.4 GEARBOX HOUSING LID ASSEMBLY

 30-0111-133
OXE DIESEL PARTS CATALOGUE

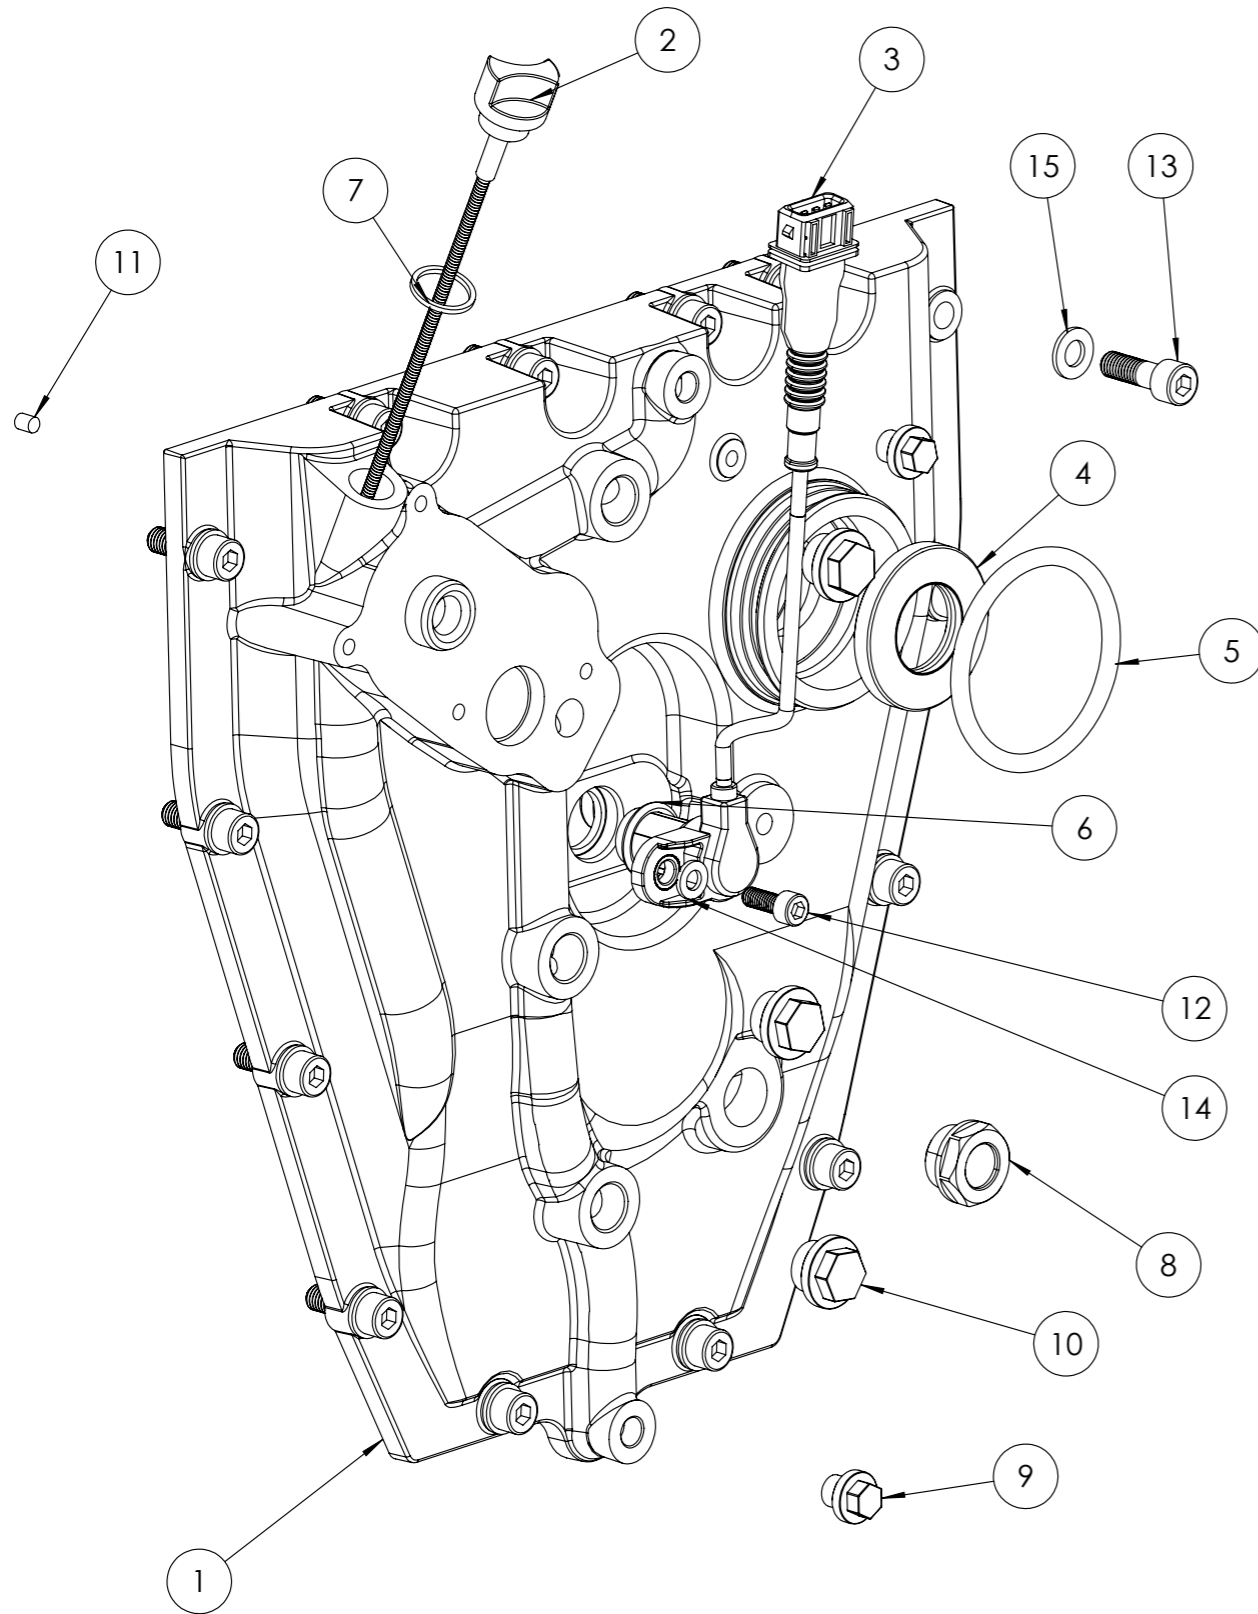


1.2.2 GEARBOX HOUSING LID ASSEMBLY

30-0111-133
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-109	Gearbox housing lid	1
2	30-0111-150	Dipstick	1
3	30-0116-034	Sensor	1
4	30-0121-014	Radial seal	1
5	30-0121-029	O-ring	1
6	30-0121-064	O-ring	1
7	30-0121-079	Seal	1
8	30-0122-018	Sight glass	1
9	30-0122-184	Plug	2
10	30-0122-188	Plug	3
11	30-0122-230	Guide pin	2
12	30-0130-020	Bolt	1
13	30-0130-042	Bolt	14
14	30-0130-191	Washer	1
15	30-0130-192	Washer	14

1.2.5 BEARING HOUSING ASSEMBLY

 30-0111-134
OXE DIESEL PARTS CATALOGUE

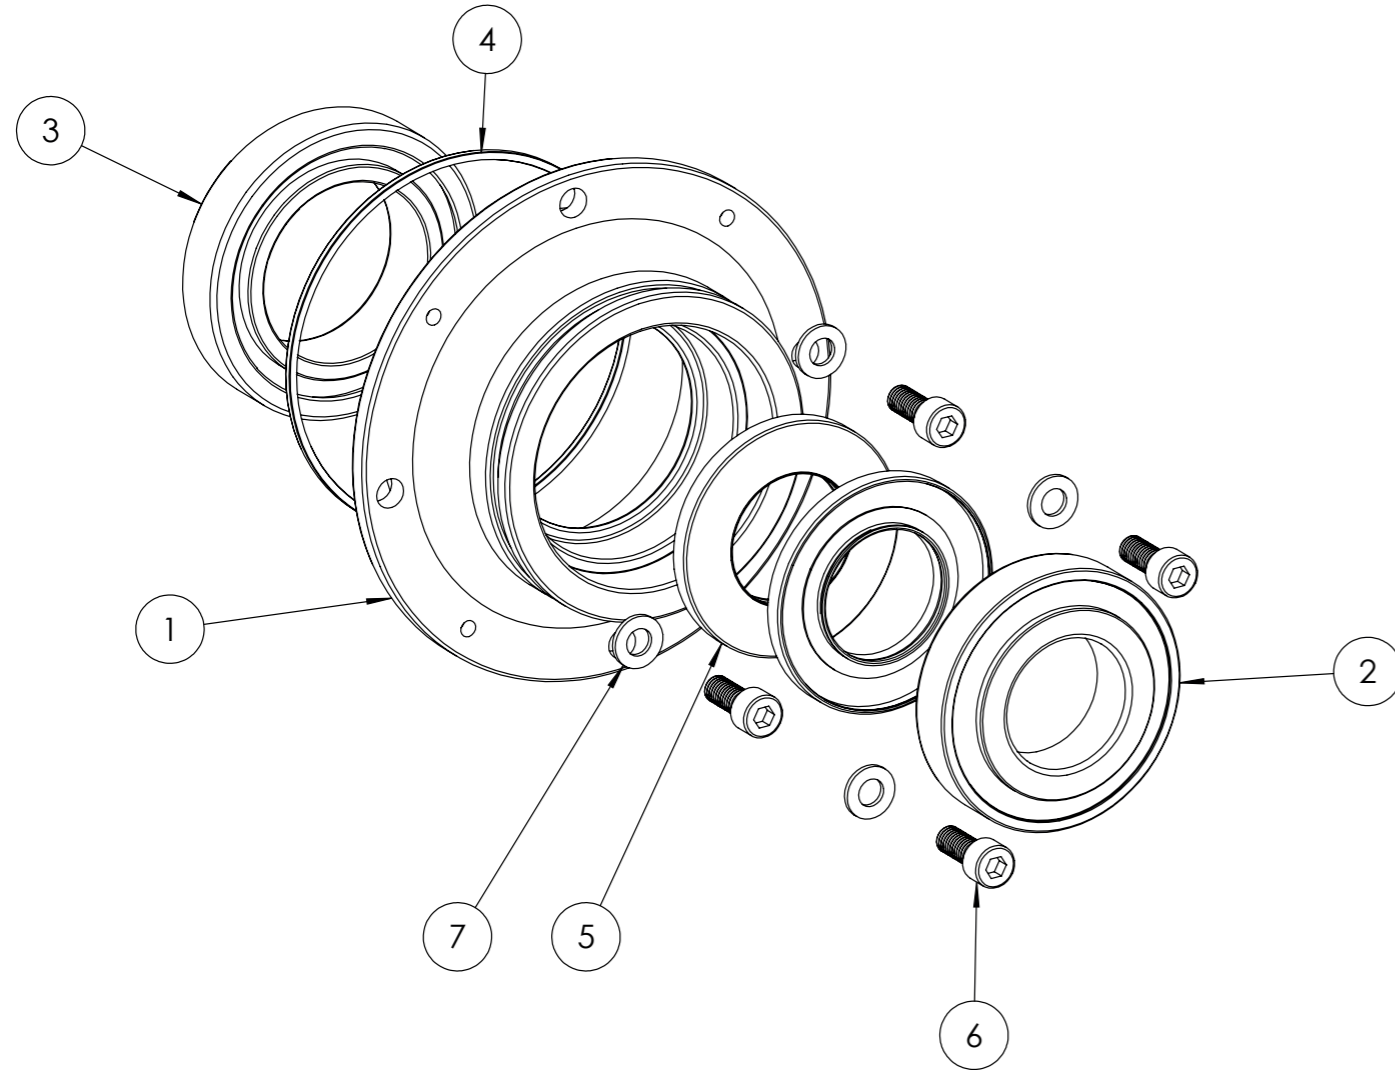


1.2.5 BEARING HOUSING ASSEMBLY

30-0111-134
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-015	Bearing housing	1
2	30-0120-006	Bearing	1
3	30-0120-008	Bearing	1
4	30-0121-009	O-ring	1
5	30-0121-018	Radial seal	2
6	30-0130-041	Bolt	4
7	30-0130-192	Washer	4

**1.2.6 XL ADAPTER
ASSEMBLY**

 30-0111-135
OXE DIESEL PARTS CATALOGUE

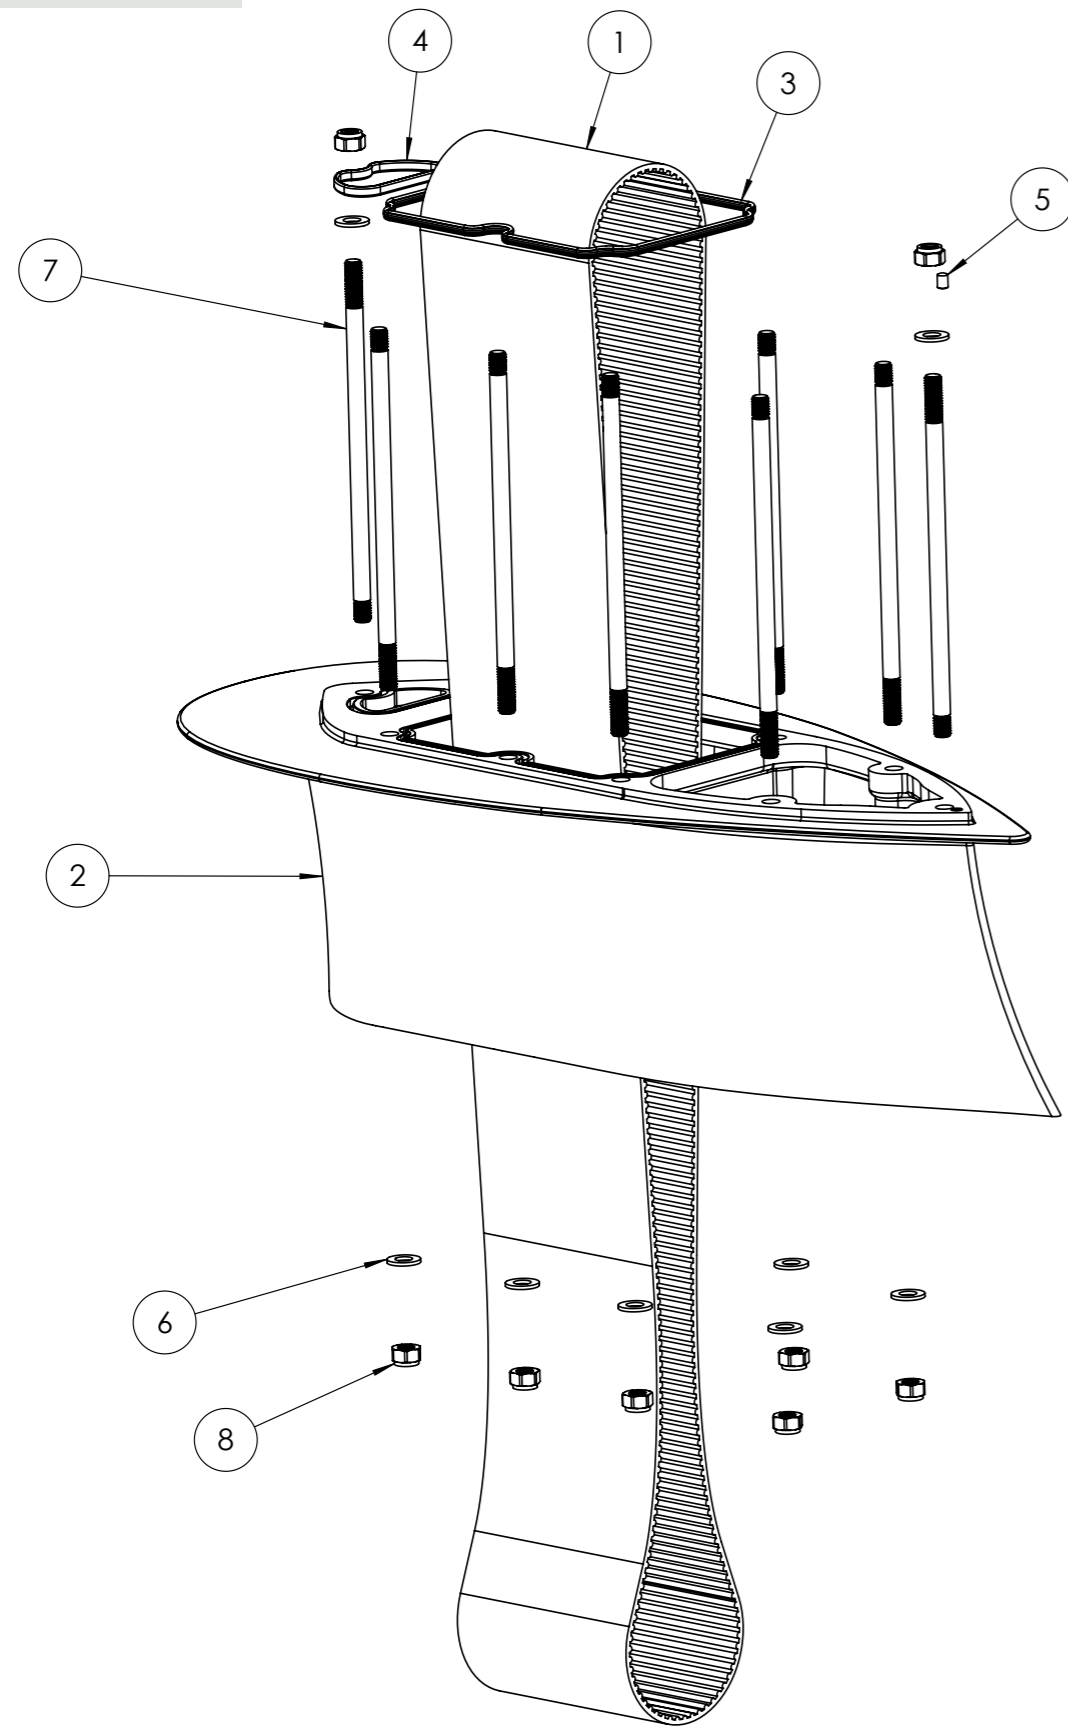


**1.2.6 XL ADAPTER
ASSEMBLY**

30-0111-135
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-002	Lower belt	1
2	30-0111-032	Adapter 25 inch	1
3	30-0111-121	Sseal	1
4	30-0111-124	Seal	1
5	30-0122-230	Guide pin	2
6	30-0130-192	Washer	10
7	30-0130-203	Bolt	10
8	30-0130-262	Nut	10

**1.2.7 XXL ADAPTER
ASSEMBLY**

 30-0111-140
OXE DIESEL PARTS CATALOGUE

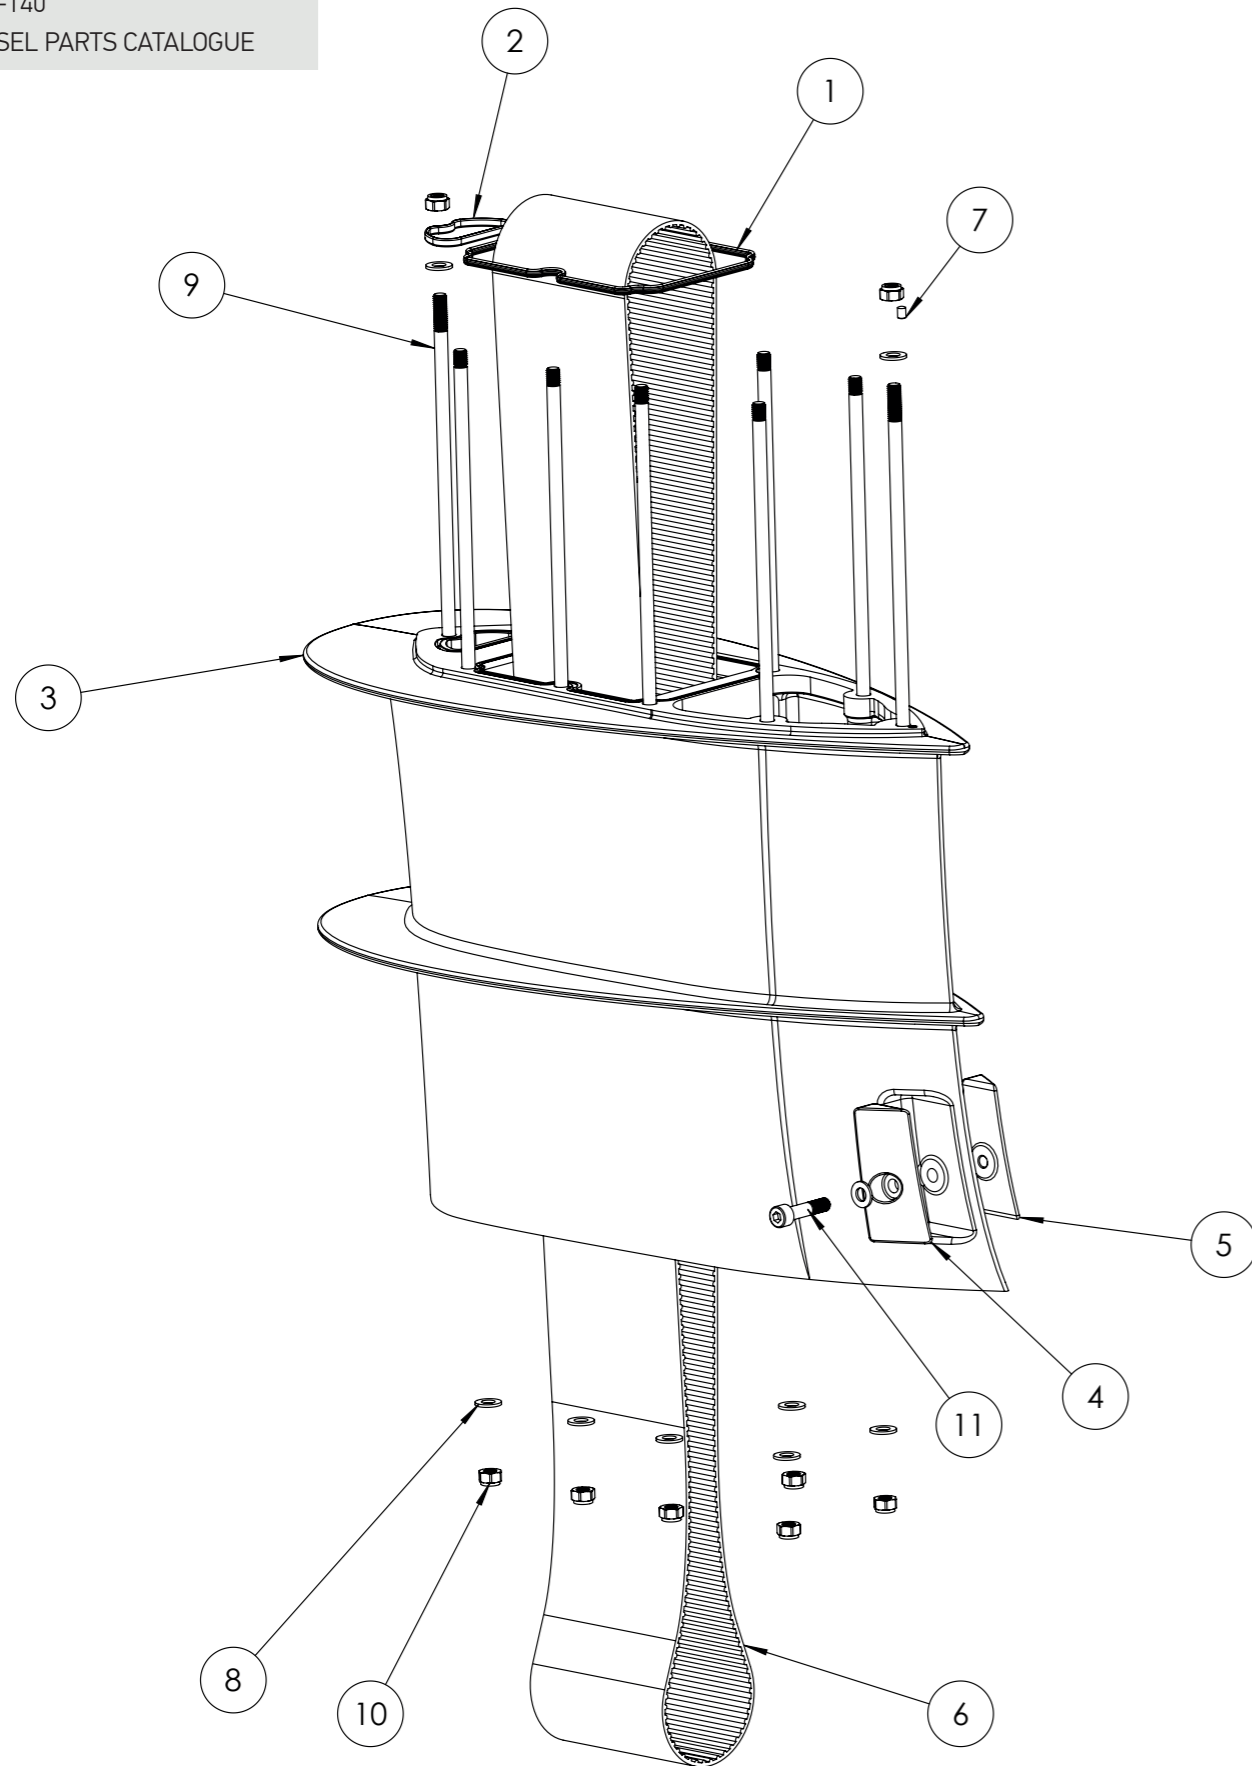


**1.2.7 XXL ADAPTER
ASSEMBLY**

30-0111-140
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-121	Seal	1
2	30-0111-124	Seal	1
3	30-0111-126	Adapter 30 inch	1
4	30-0111-141	Anode port	1
5	30-0111-142	Anode starboard	1
6	30-0111-143	Lower belt - long rig	1
7	30-0122-230	Guide pin	2
8	30-0130-192	Washer	11
9	30-0130-254	Stud bolt	10
10	30-0130-262	Nut	10
11	30-0130-266	Bolt	1

1.2.8 HYDRAULIC SYSTEM ASSEMBLY

 
30-0115-001
OXE DIESEL PARTS CATALOGUE

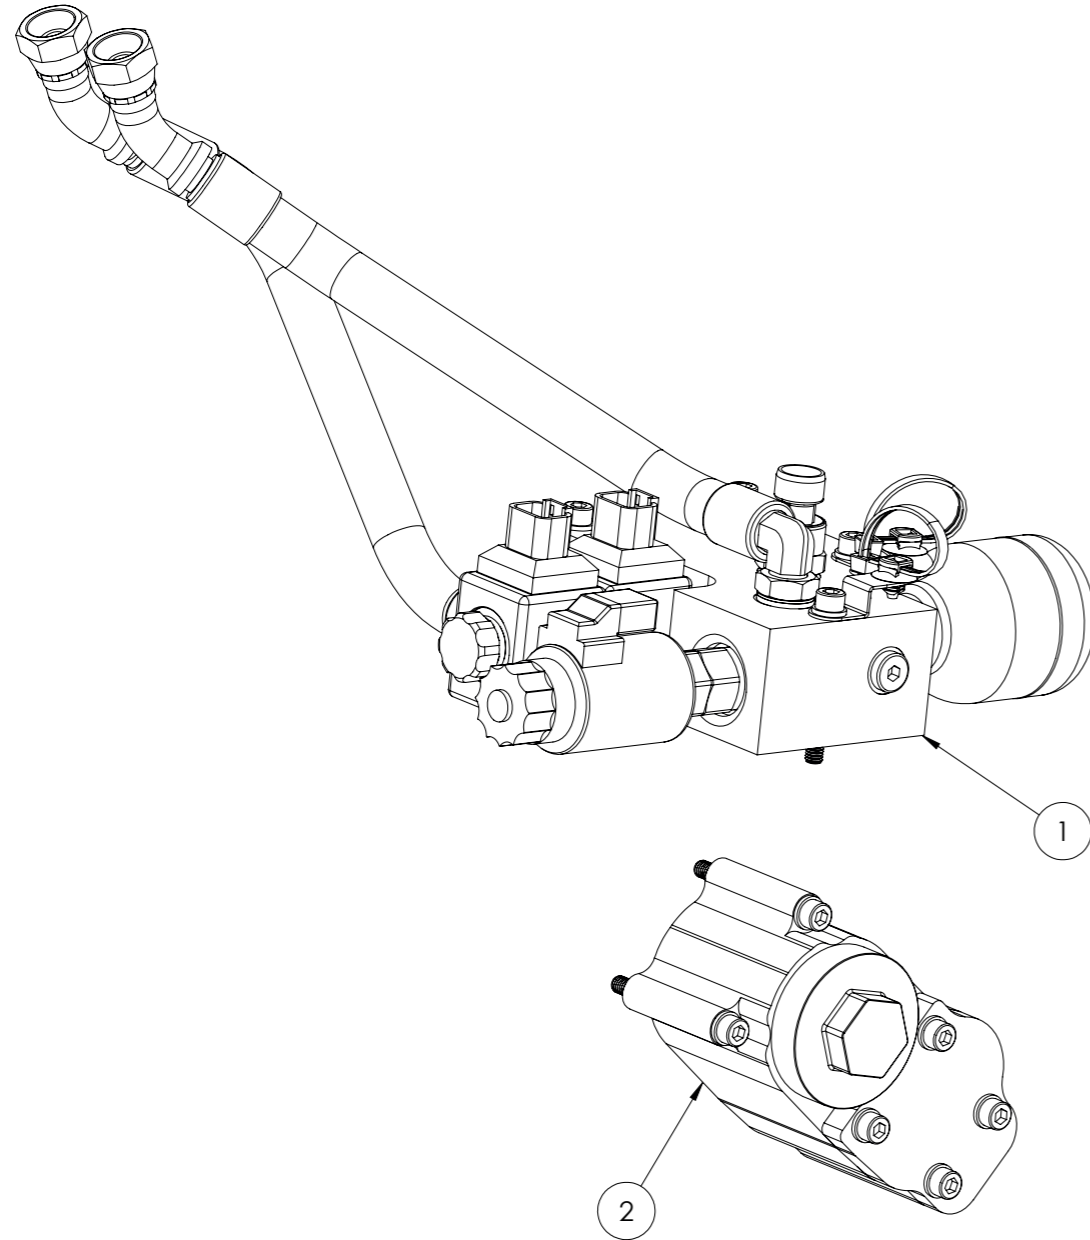

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0115-002	Valve block assembly, hydraulic	1
2	30-0115-032	Hydraulic pump assembly	1

1.2.8.1 VALVE BLOCK ASSEMBLY

 
30-0115-001
OXE DIESEL PARTS CATALOGUE

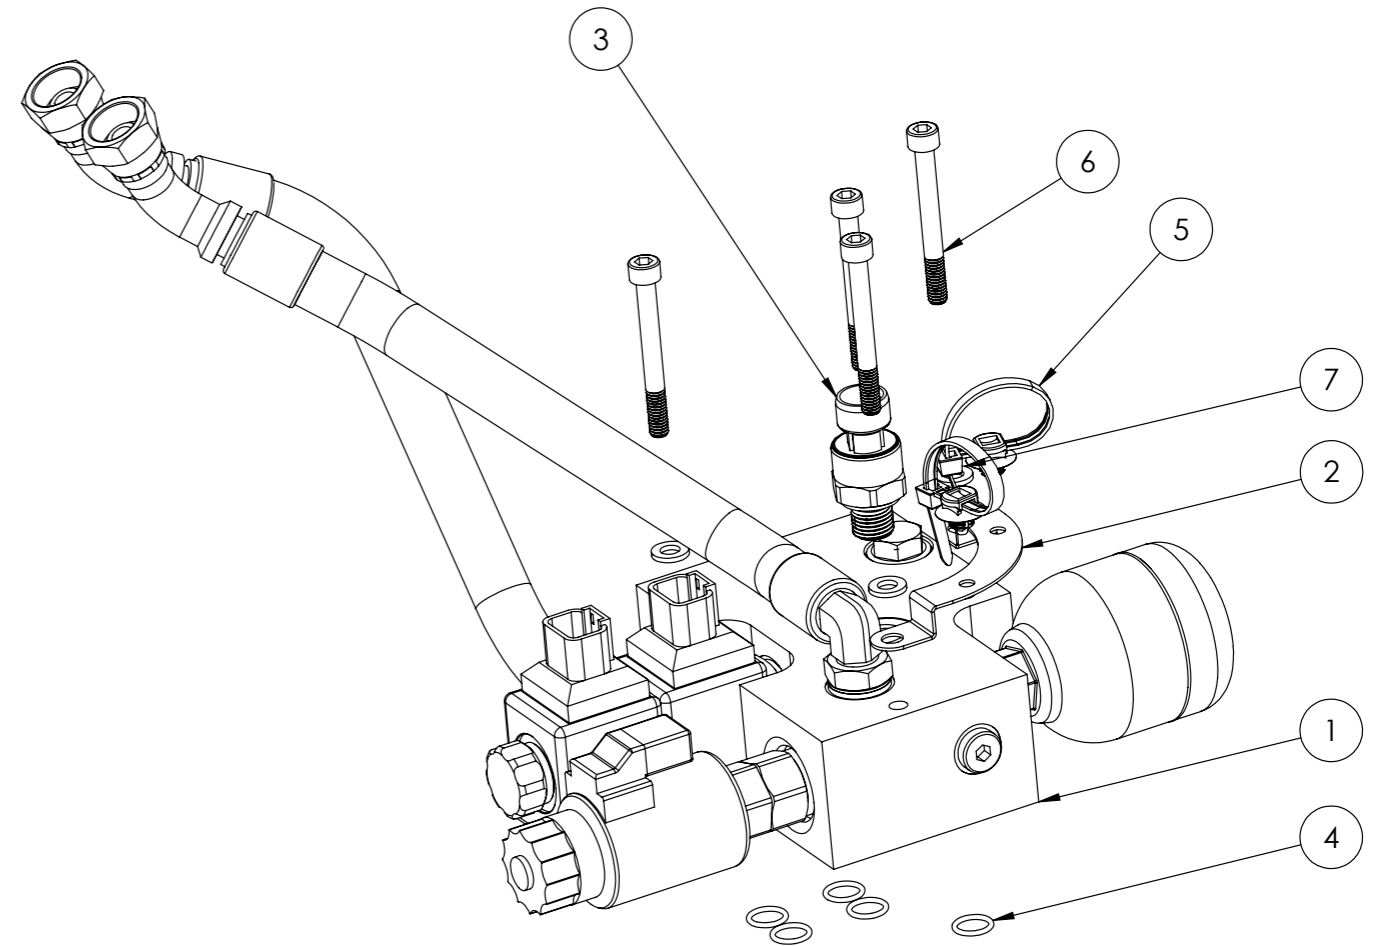

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0115-037	Valve block cpl	1
2	30-0115-047	Cable anchor hydraulic block	1
3	30-0116-052	Gearbox oil pressure sensor	1
4	30-0121-001	O-ring	6
5	30-0122-248	Pine clip	2
6	30-0130-028	Bolt	4
7	30-0130-191	Washer	4

1.2.8.2 HYDRAULIC PUMP ASSEMBLY

 30-0115-002
OXE DIESEL PARTS CATALOGUE

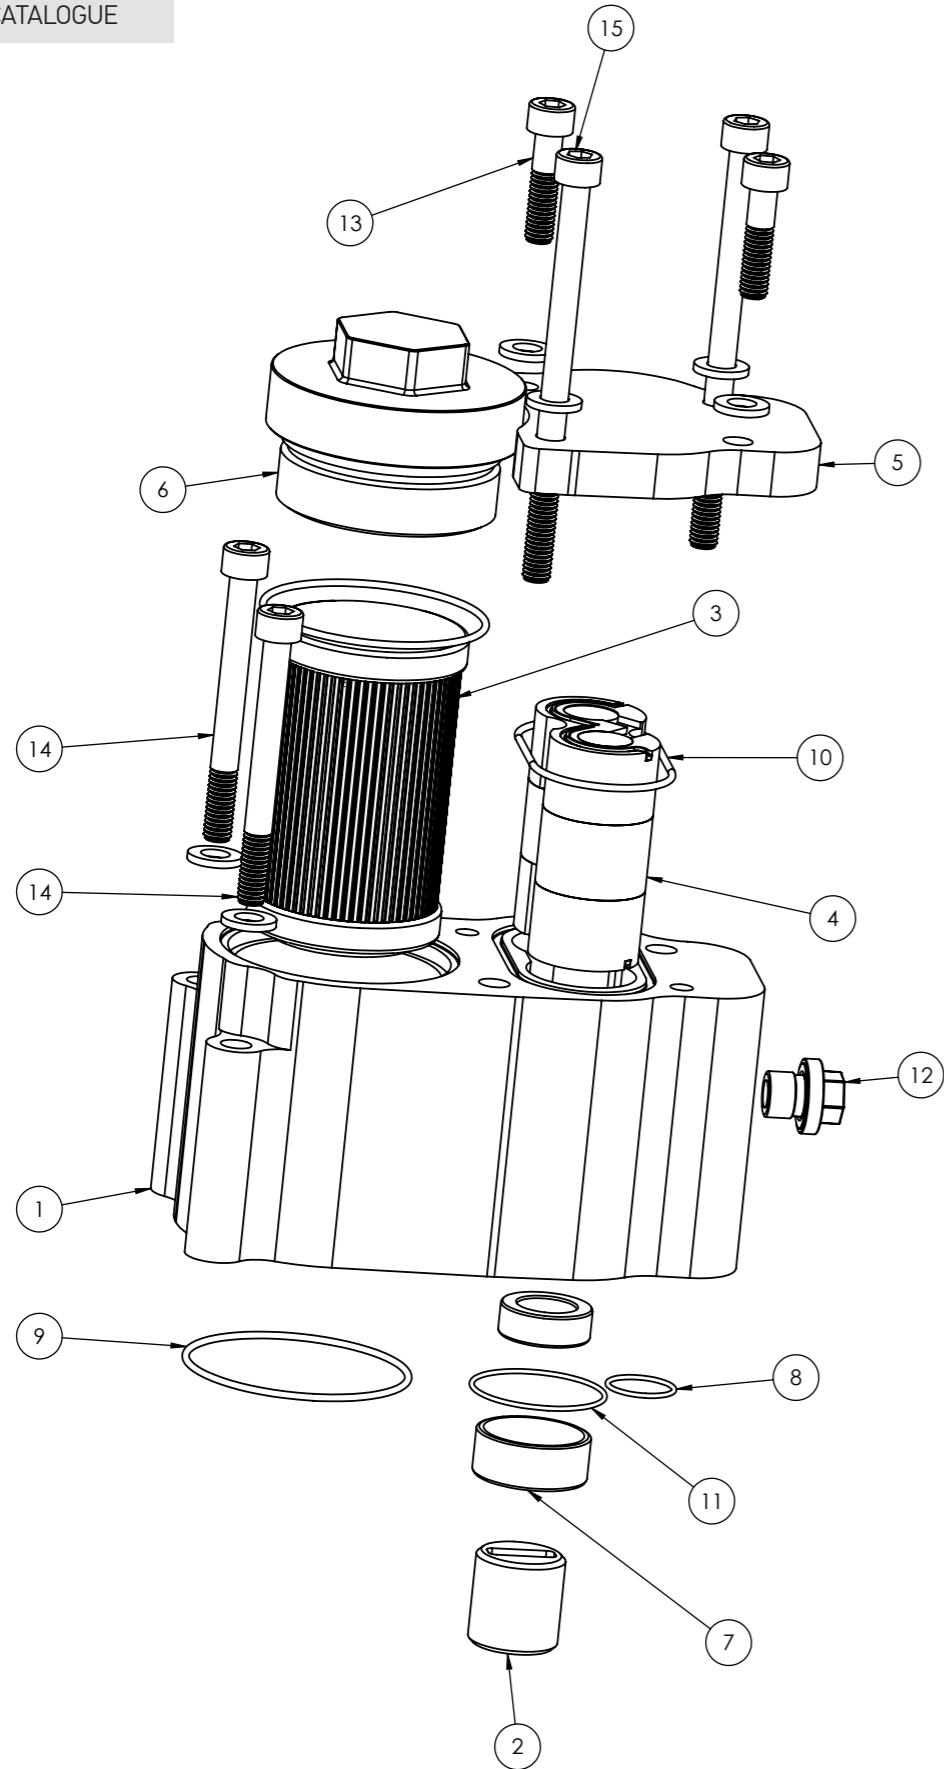

1.2.8.2 HYDRAULIC PUMP HOUSING ASSEMBLY


30-0115-032
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0115-026	Hydraulic pump housing	1
2	30-0115-027	Adapter, pumpdrive	1
3	30-0115-028	Hydraulic filter	1
4	30-0115-029	Hydraulic pump	1
5	30-0115-030	Pump cover	1
6	30-0115-031	Filter end cover	1
7	30-0120-037	Bushing	1
8	30-0121-002	O-ring	1
9	30-0121-042	O-ring	2
10	30-0121-043	O-ring	1
11	30-0121-044	O-ring	1
12	30-0122-184	Plug	1
13	30-0130-022	Bolt	2
14	30-0130-029	Bolt	2
15	30-0130-034	Bolt	2
16	30-0130-191	Washer	6

1.3 GEARBOX ASSEMBLY

30-0112-001

 OXE DIESEL PARTS CATALOGUE

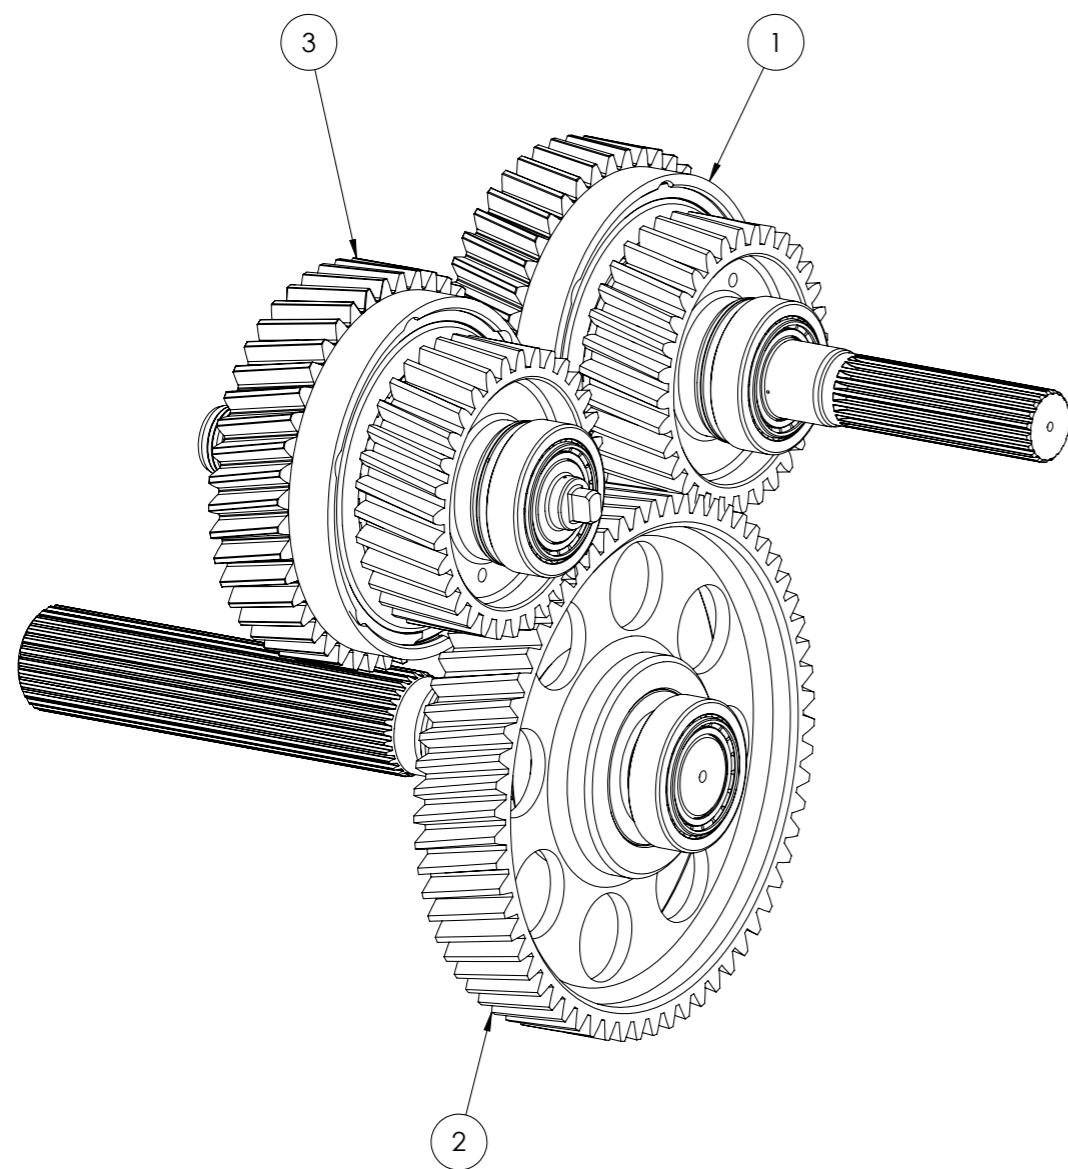

1.3 GEARBOX ASSEMBLY

30-0112-001


OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0112-002	Input shaft assembly	1
2	30-0112-005	Output shaft assembly	1
3	30-0112-004	Reverse gear assembly	1

**1.3.1 INPUT SHAFT
ASSEMBLY**

30-0112-002

 OXE DIESEL PARTS CATALOGUE

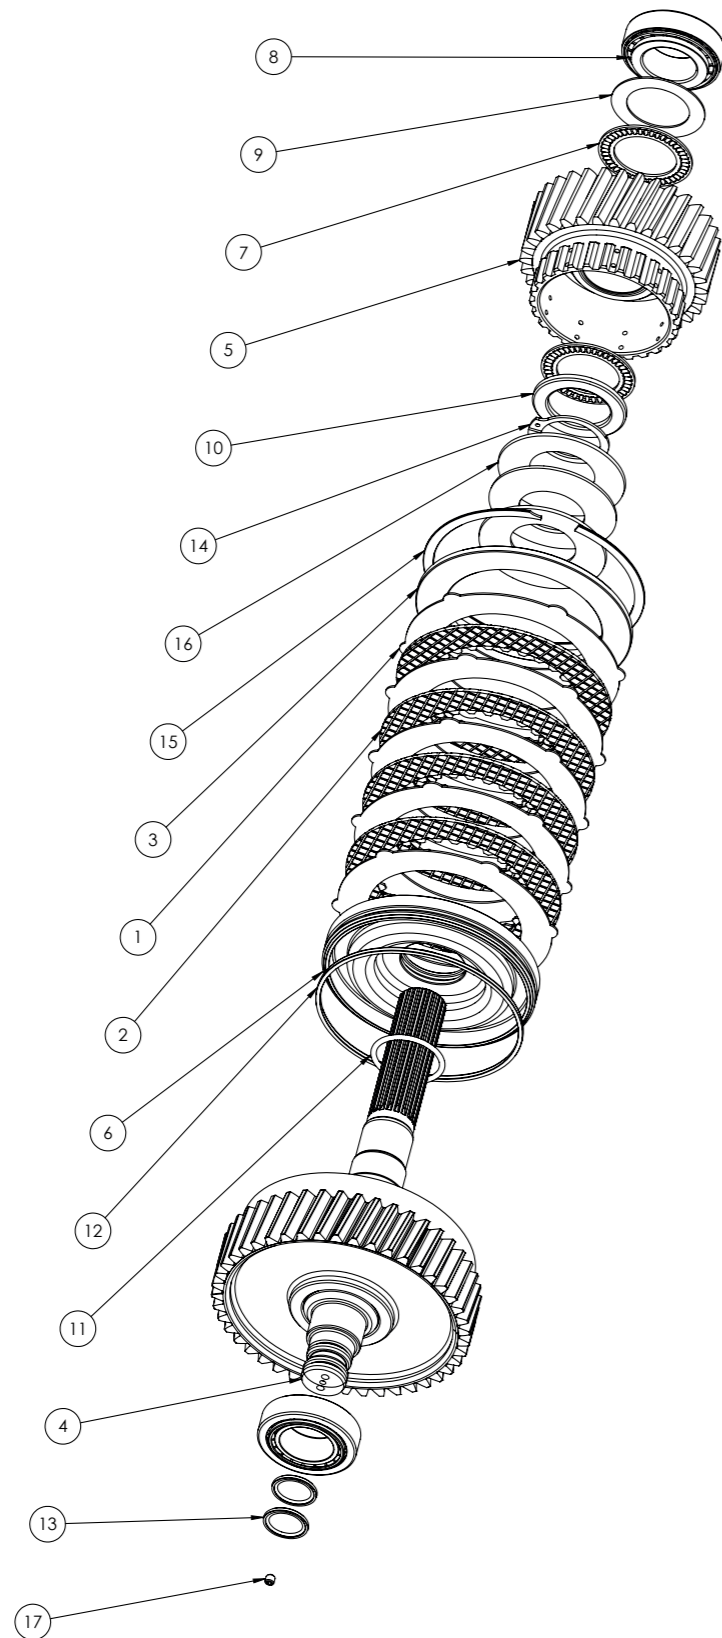

**1.3.1 INPUT SHAFT
ASSEMBLY**


30-0112-002

OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0112-012	Steel friction disc	5
2	30-0112-013	Sintered friction disc	4
3	30-0112-029	Clutch support disc	1
4	30-0112-039	Clutch input shaft assembly	1
5	30-0112-041	Drive gear assembly	1
6	30-0112-042	Clutch piston	1
7	30-0120-003	Bearing	2
8	30-0120-007	Bearing	2
9	30-0120-009	Washer	1
10	30-0120-010	Washer	1
11	30-0121-006	O-ring	1
12	30-0121-009	O-ring	1
13	30-0121-021	Shaft seal	2
14	30-0122-003	Lock ring	1
15	30-0122-006	Lock ring	1
16	30-0122-039	Disc spring	3
17	30-0122-046	Screw	1

1.3.1.1 DRIVE GEAR ASSEMBLY

 
30-0112-041
OXE DIESEL PARTS CATALOGUE

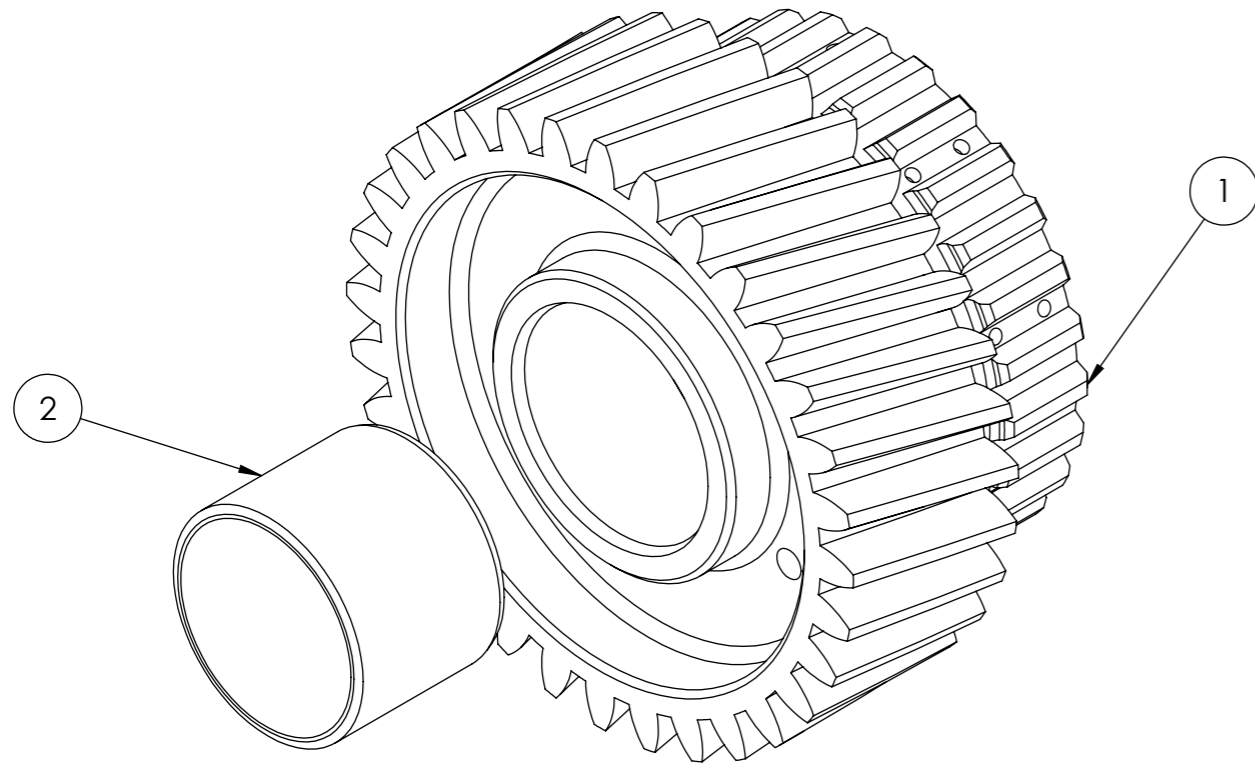

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0112-021	Pulley, drive gear	1
2	30-0120-011	Bushing, drive gear	1

1.3.2 OUTPUT SHAFT ASSEMBLY

 30-0112-041
OXE DIESEL PARTS CATALOGUE

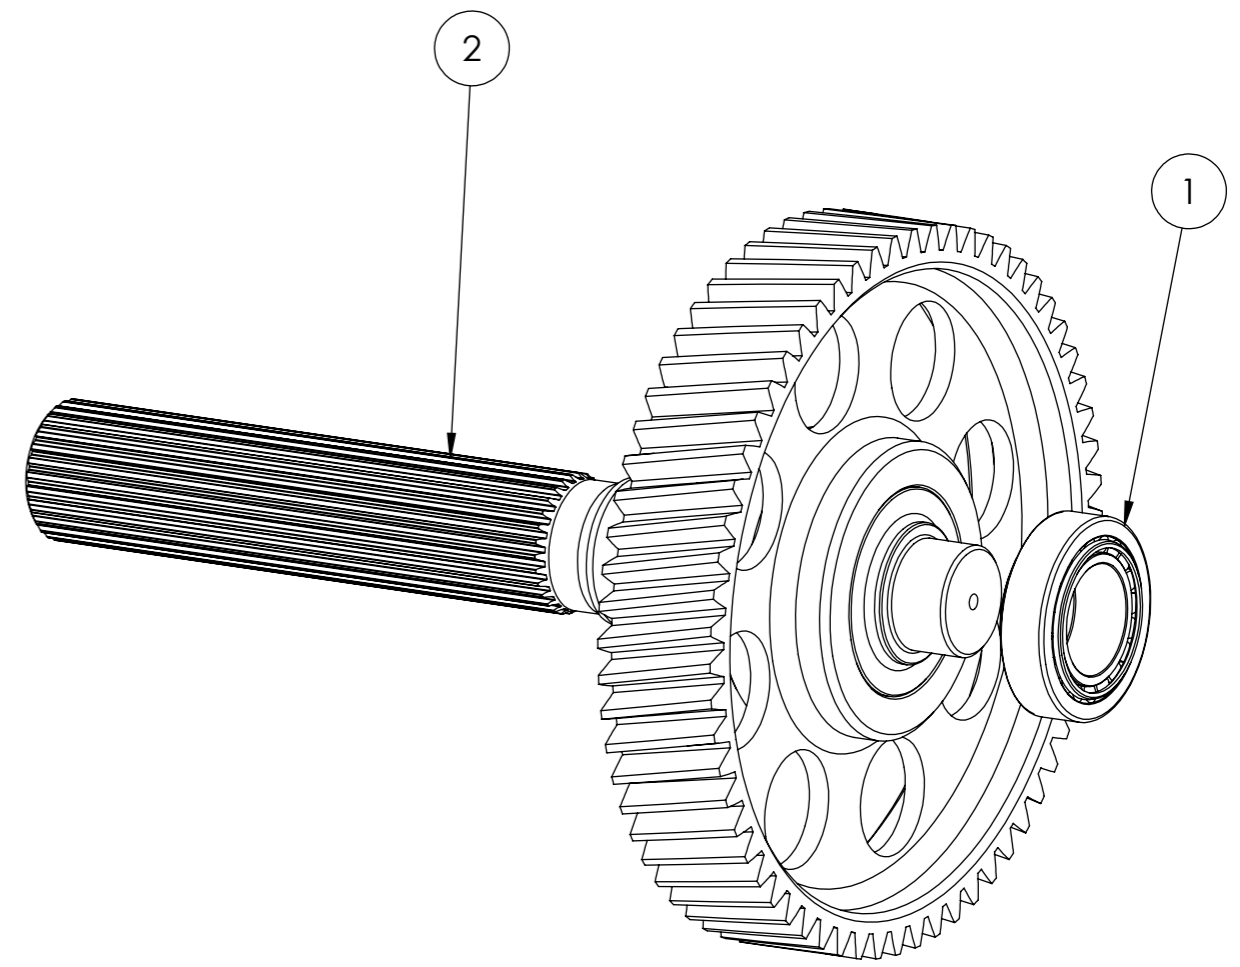


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0120-007	Bearing	1
2	30-0112-038	Output shaft assembly	1

1.3.3 REVERSE GEAR ASSEMBLY

30-0112-004

 OXE DIESEL PARTS CATALOGUE

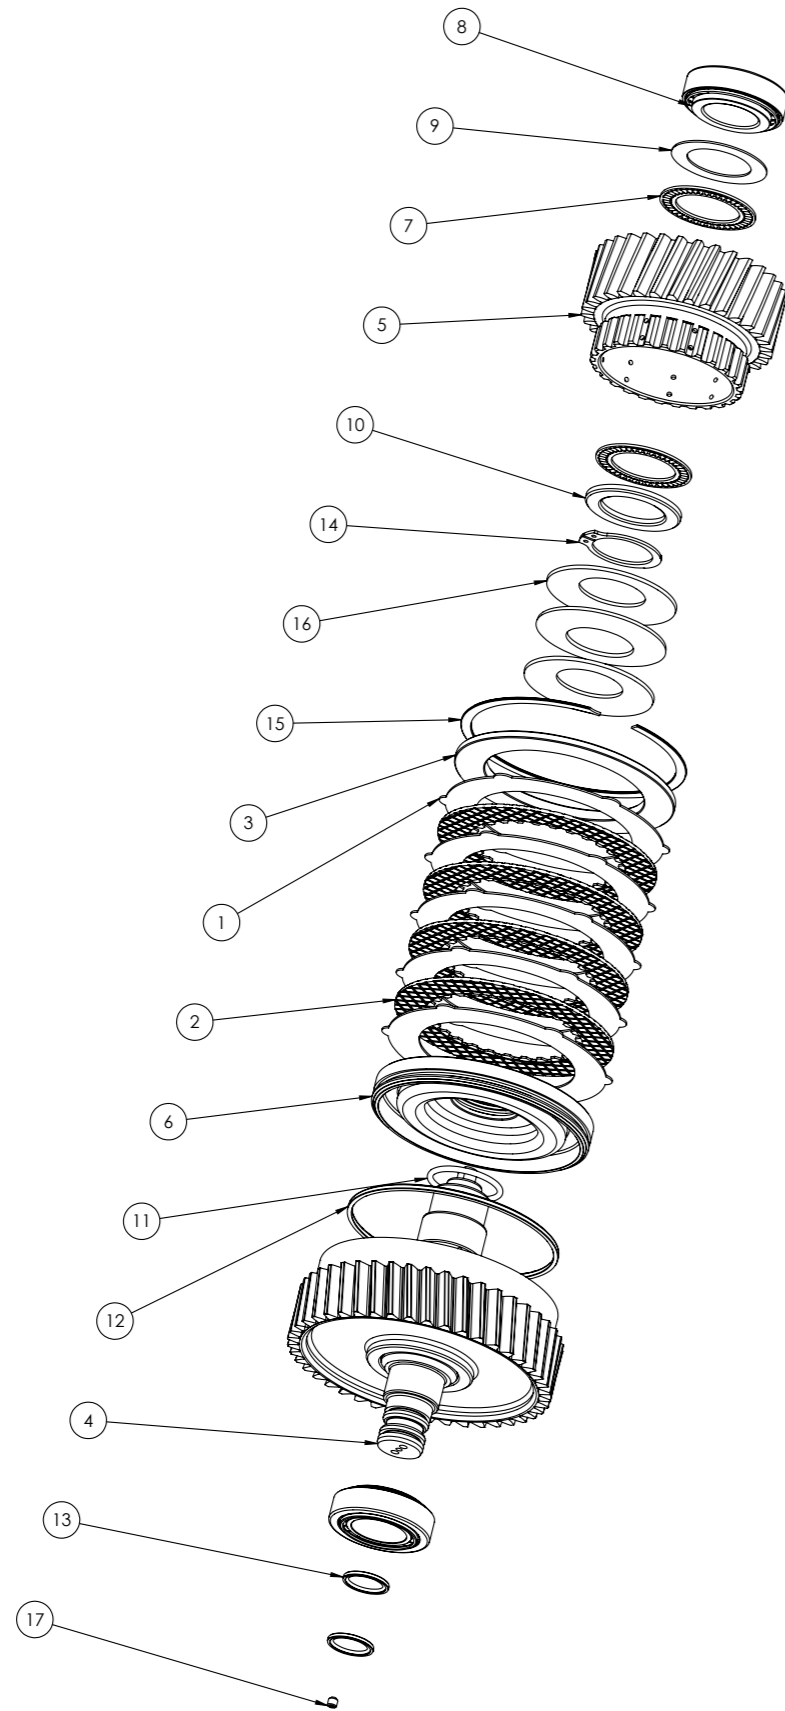

1.3.3 REVERSE GEAR ASSEMBLY


30-0112-004

OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0112-012	Steel friction disc	5
2	30-0112-013	Sintered friction disc	4
3	30-0112-029	Clutch support disc	1
4	30-0112-040	Reverse gear clutch assembly	1
5	30-0112-041	Drive gear assembly	1
6	30-0112-042	Clutch piston	1
7	30-0120-003	Bearing	2
8	30-0120-007	Bearing	2
9	30-0120-009	Washer	1
10	30-0120-010	Washer	1
11	30-0121-006	O-ring	1
12	30-0121-009	O-ring	1
13	30-0121-021	Shaft seal	2
14	30-0122-003	Lock ring	1
15	30-0122-006	Lock ring	1
16	30-0122-039	Disc spring	3
17	30-0122-046	Screw	1

1.4 TRANSOM MOUNT ASSEMBLY

 30-0113-001
OXE DIESEL PARTS CATALOGUE

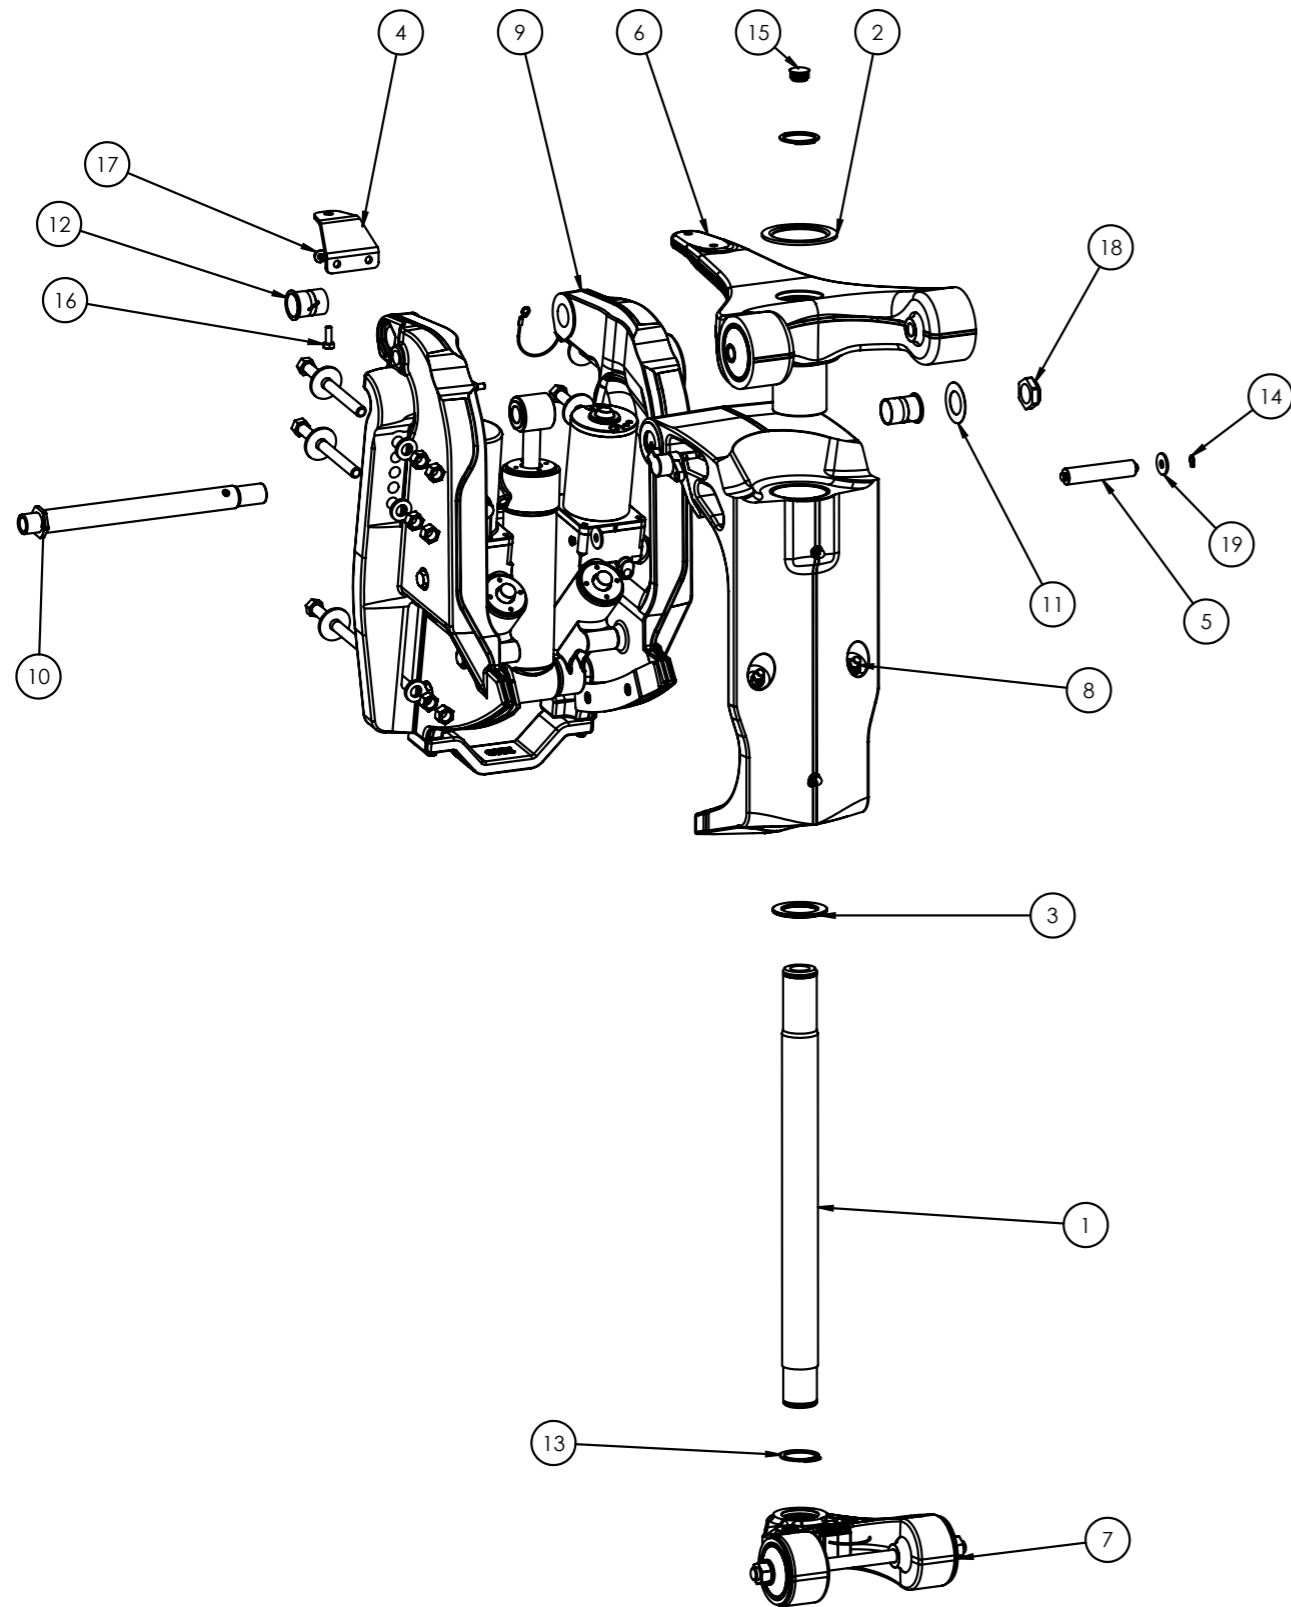

1.4 TRANSOM MOUNT ASSEMBLY

30-0113-001
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0113-004	Steering shaft	1
2	30-0113-009	Upper axial bearing	1
3	30-0113-011	Lower axial bearing	1
4	30-0113-045	Transportation bracket	1
5	30-0113-054	Tilt piston rod	1
6	30-0113-059	Steering arm assembly	1
7	30-0113-060	Lower yoke assembly	1
8	30-0113-061	Swivel bracket assembly	1
9	30-0113-062	Clamp brackets assembly	1
10	30-0113-081	Bolt	1
11	30-0113-082	Swivel shim	2
12	30-0113-083	Swivel bush	2
13	30-0122-004	Locking ring	2
14	30-0122-160	Locking ring	2
15	30-0122-253	Plug	1
16	30-0130-189	Bolt	1
17	30-0130-251	Nut	2
18	30-0130-274	Nut	1
19	30-0130-345	Washer	2

1.4.1 STEERING ARM ASSEMBLY

 
30-0113-059

OXE DIESEL PARTS CATALOGUE

1.4.1 STEERING ARM ASSEMBLY

30-0113-059


OXE DIESEL PARTS CATALOGUE

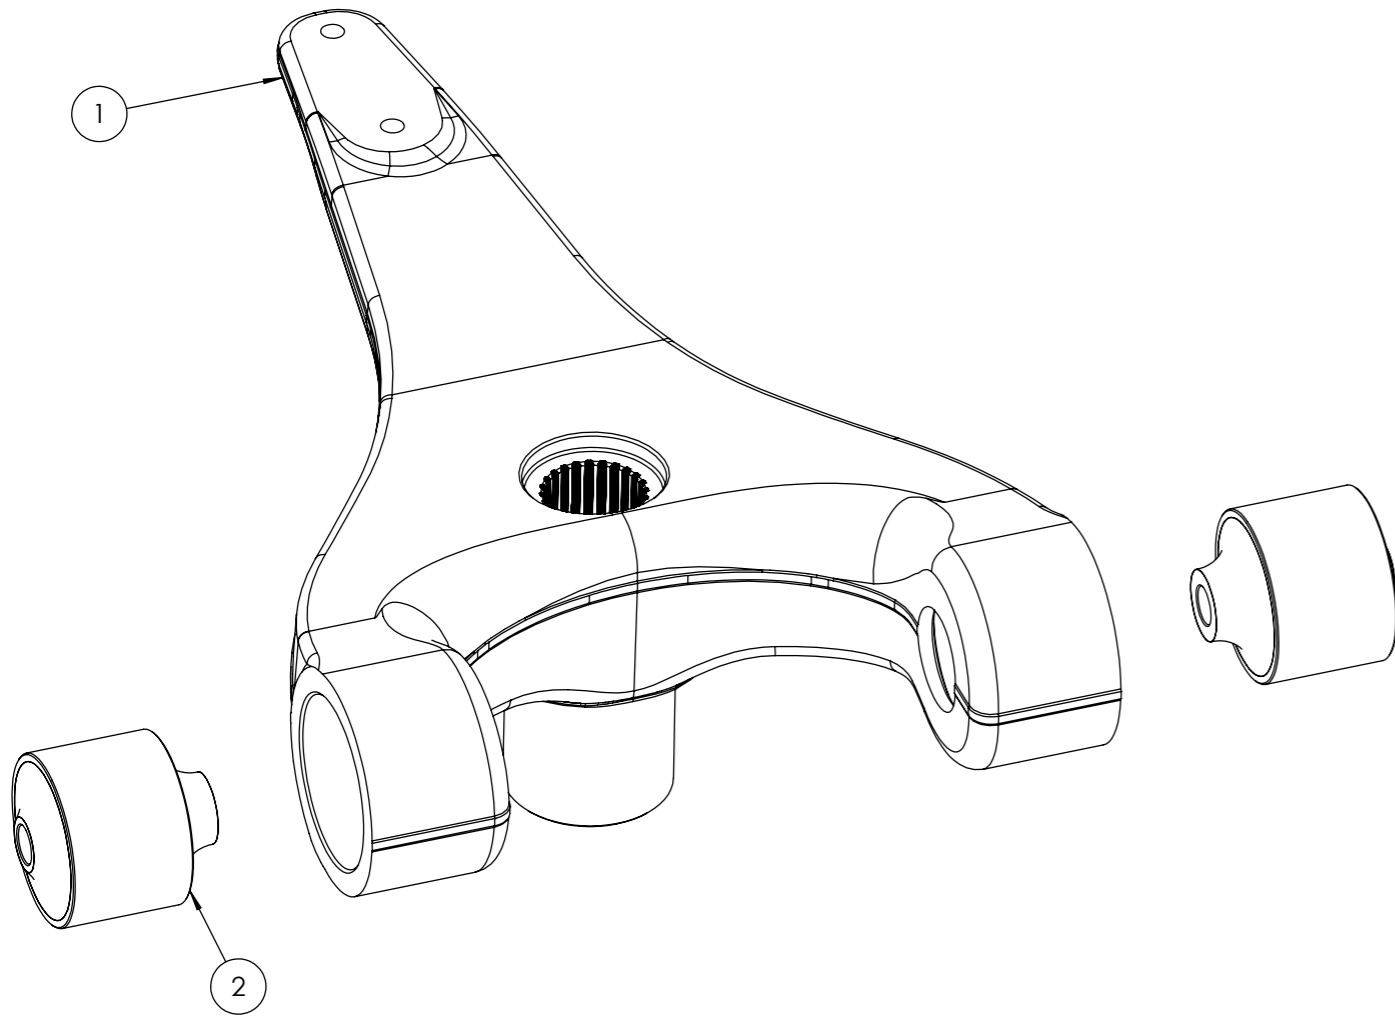

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0113-074	Steering arm	1
2	30-0113-020	Bushing, steering arm	2

**1.4.2 LOWER YOKE
ASSEMBLY**

 30-0113-060
OXE DIESEL PARTS CATALOGUE

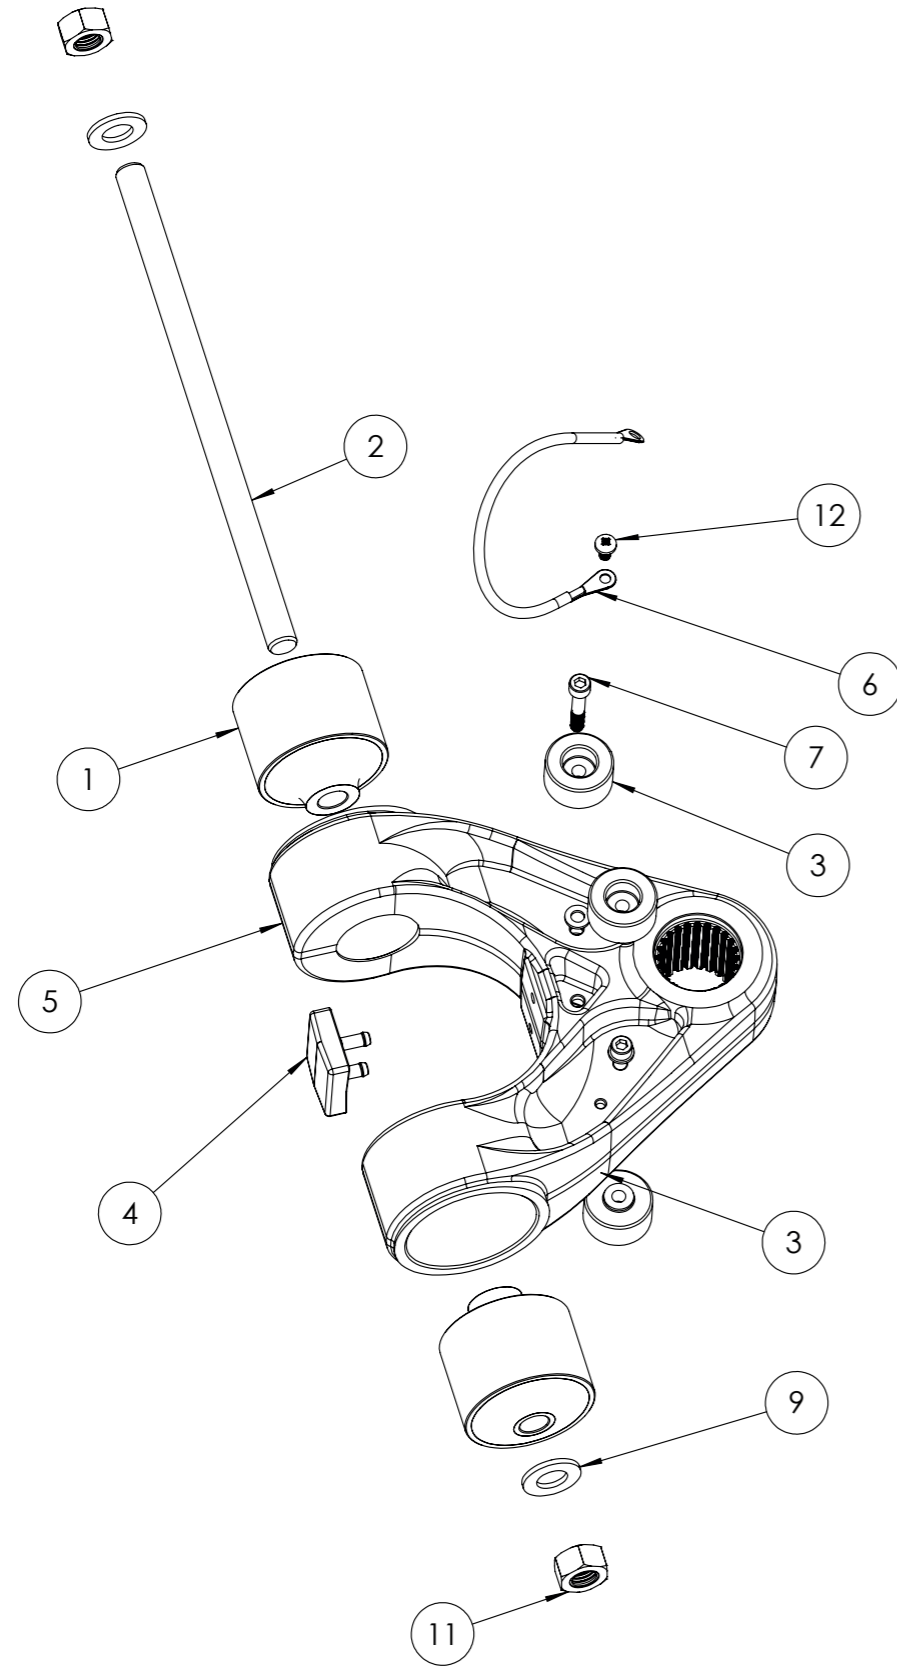


**1.4.2 LOWER YOKE
ASSEMBLY**

30-0113-060
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0113-020	Bushing	2
2	30-0113-033	Transom rod	1
3	30-0113-044	Anode lower yoke	4
4	30-0113-057	Thrust bushing	1
5	30-0113-075	Lower yoke	1
6	30-0122-202	Ground wire	1
7	30-0130-024	Bolt	2
8	30-0130-191	Washer	4
9	30-0130-199	Washer	2
10	30-0130-261	Nut	2
11	30-0130-275	Nut	2
12	30-0130-346	Screw	1

1.4.3 SWIVEL BRACKET ASSEMBLY

 30-0113-061
OXE DIESEL PARTS CATALOGUE

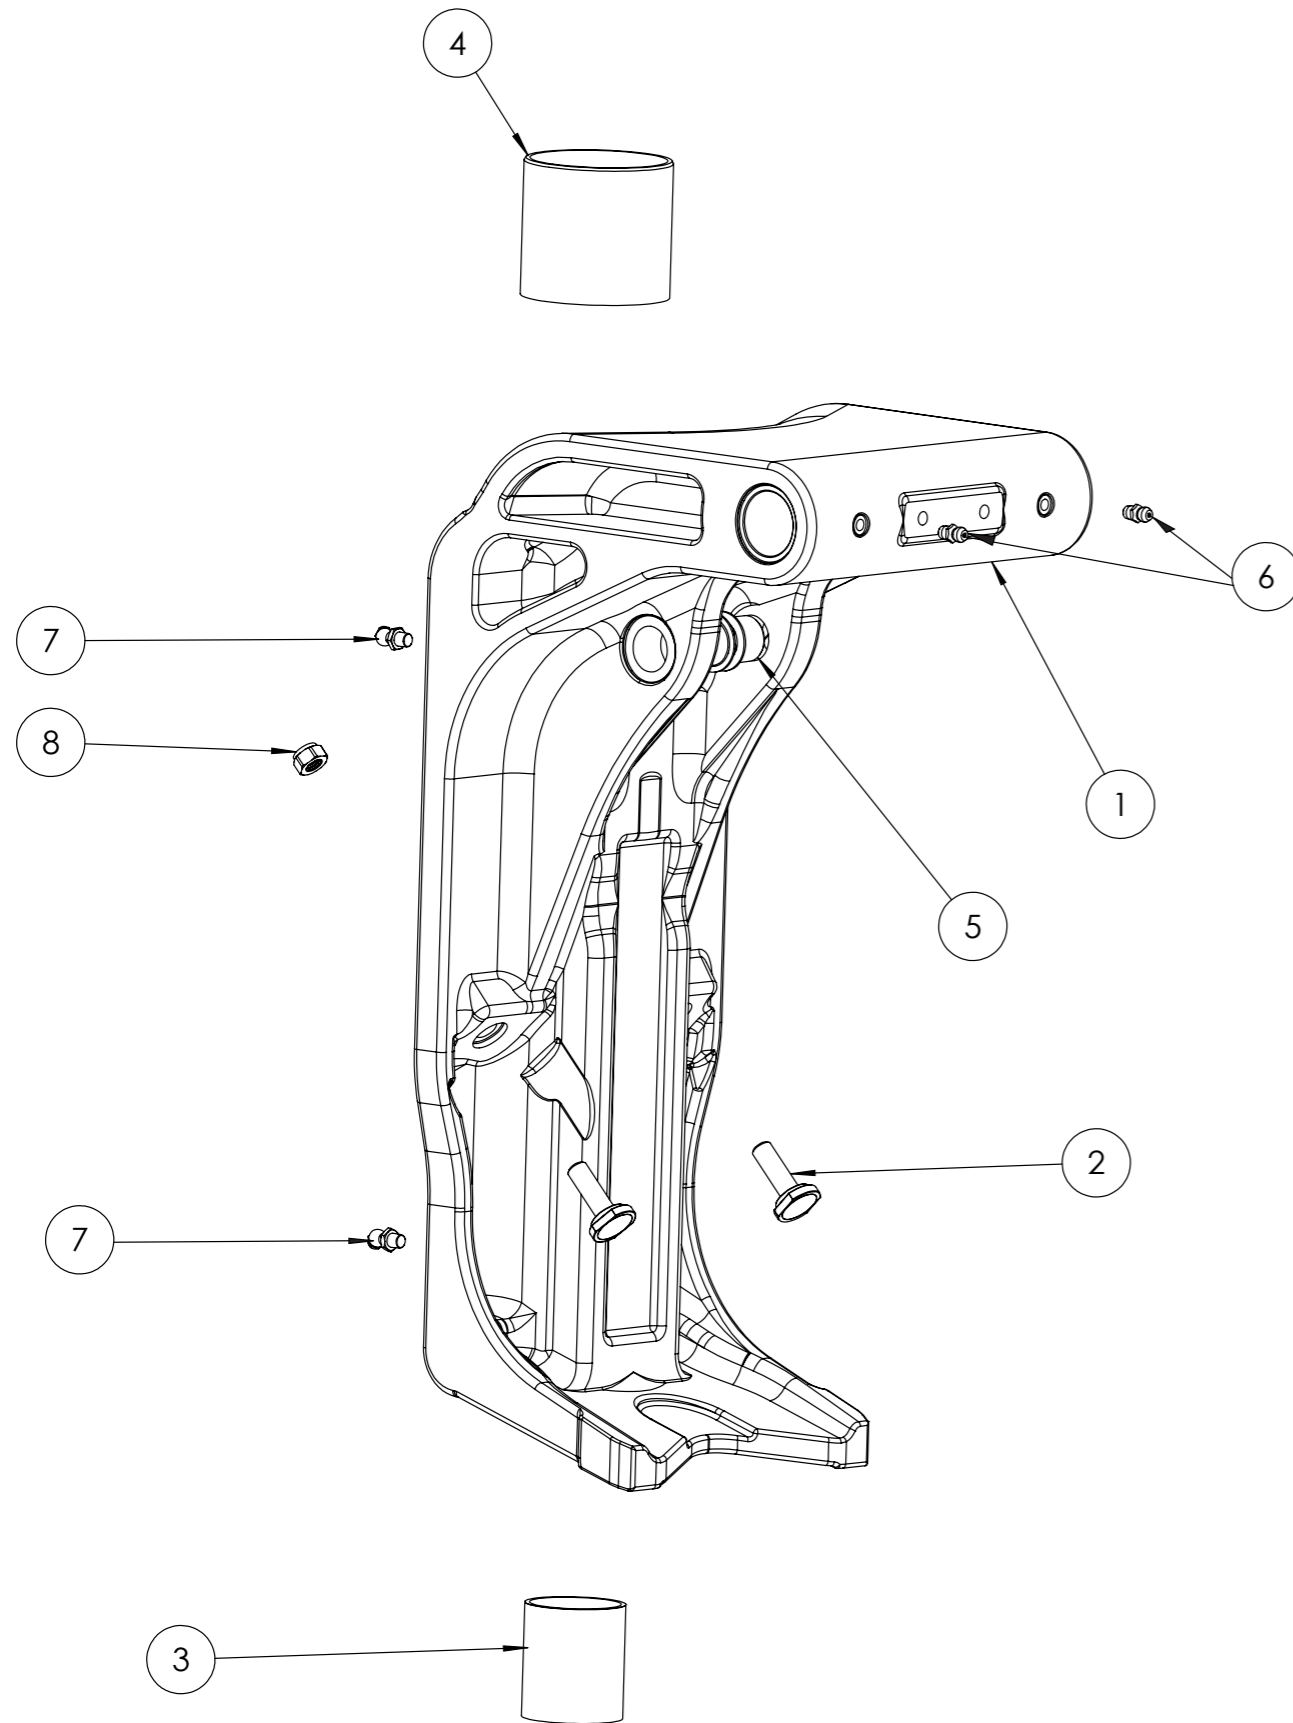


1.4.3 SWIVEL BRACKET ASSEMBLY

30-0113-061
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0113-073	Swivel bracket	1
2	30-0113-031	Bolt thrust receiver	2
3	30-0120-014	Bushing	1
4	30-0120-015	Bushing	1
5	30-0120-018	Bushing	2
6	30-0122-047	Grease point, front	2
7	30-0122-220	Grease point, rear	2
8	30-0130-262	Nut	2

**1.4.4 CLAMP BRACKETS
ASSEMBLY**

 30-0113-062
OXE DIESEL PARTS CATALOGUE

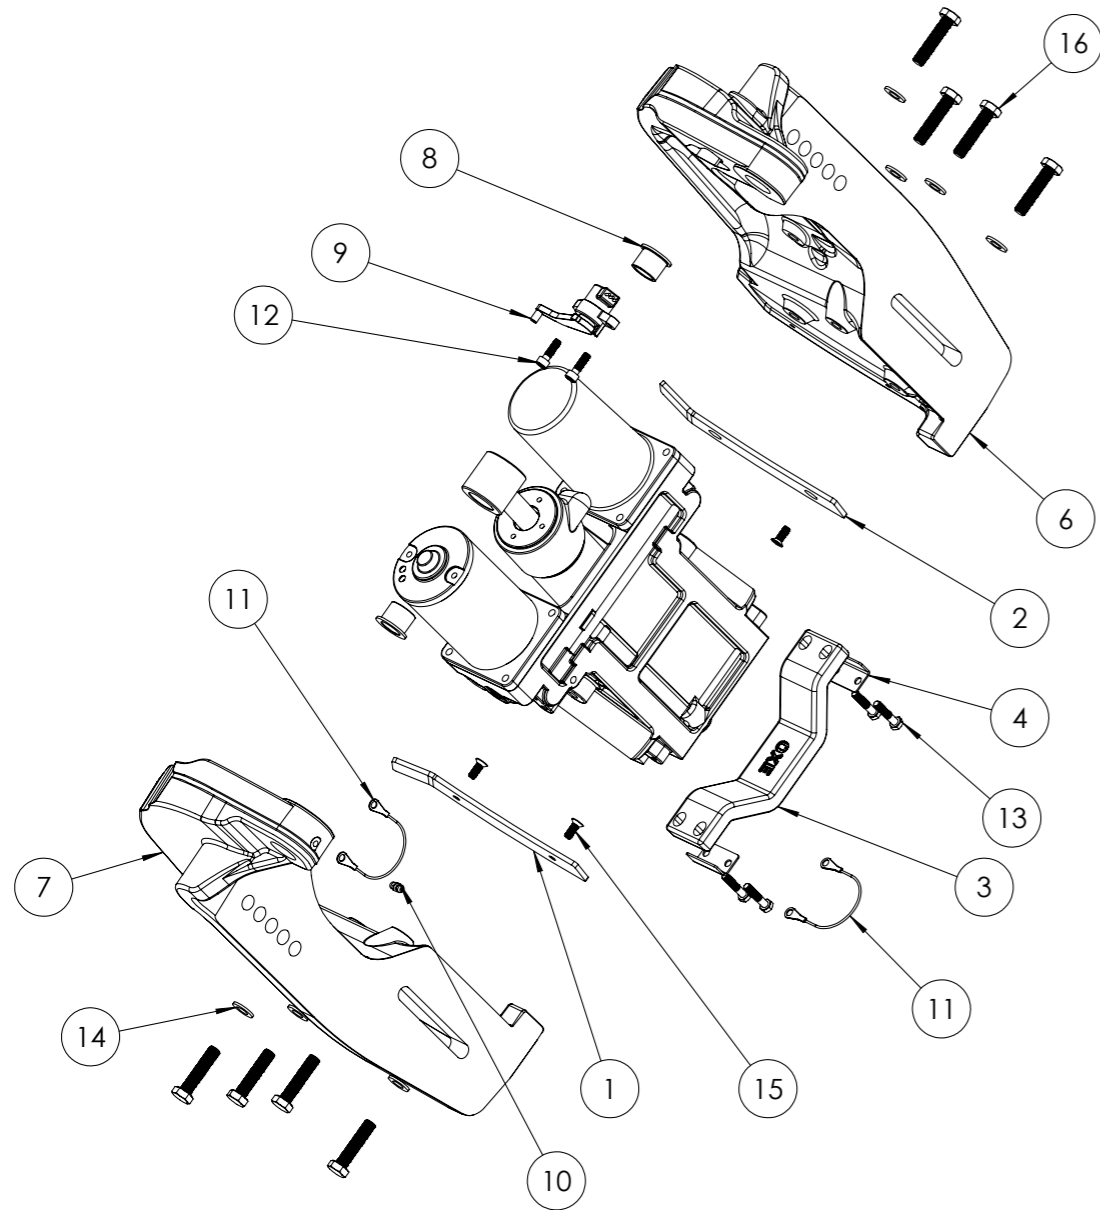


**1.4.4 CLAMP BRACKETS
ASSEMBLY**

300113-062
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0113-049	Swivel side bushing right	1
2	30-0113-050	Swivel side bushing left	1
3	30-0113-052	Transom anode	1
4	30-0113-053	Plate transom anode	2
5	30-0113-068	Transom hydraulics	1
6	30-0113-076	Clamp bracket port	1
7	30-0113-077	Clamp bracket starboard	1
8	30-0113-084	Tilt piston bearing	2
9	30-0116-950	Trim sensor	1
10	30-0122-047	Nipple	1
11	30-0122-199	Ground wire	2
12	30-0130-021	Bolt	2
13	30-0130-103	Bolt	4
14	30-0130-193	Washer	8
15	30-0130-204	Bolt	4
16	30-0130-232	Bolt	8

**1.5 MARINE ENGINE
ASSEMBLY**

 30-0114-001
OXE DIESEL PARTS CATALOGUE

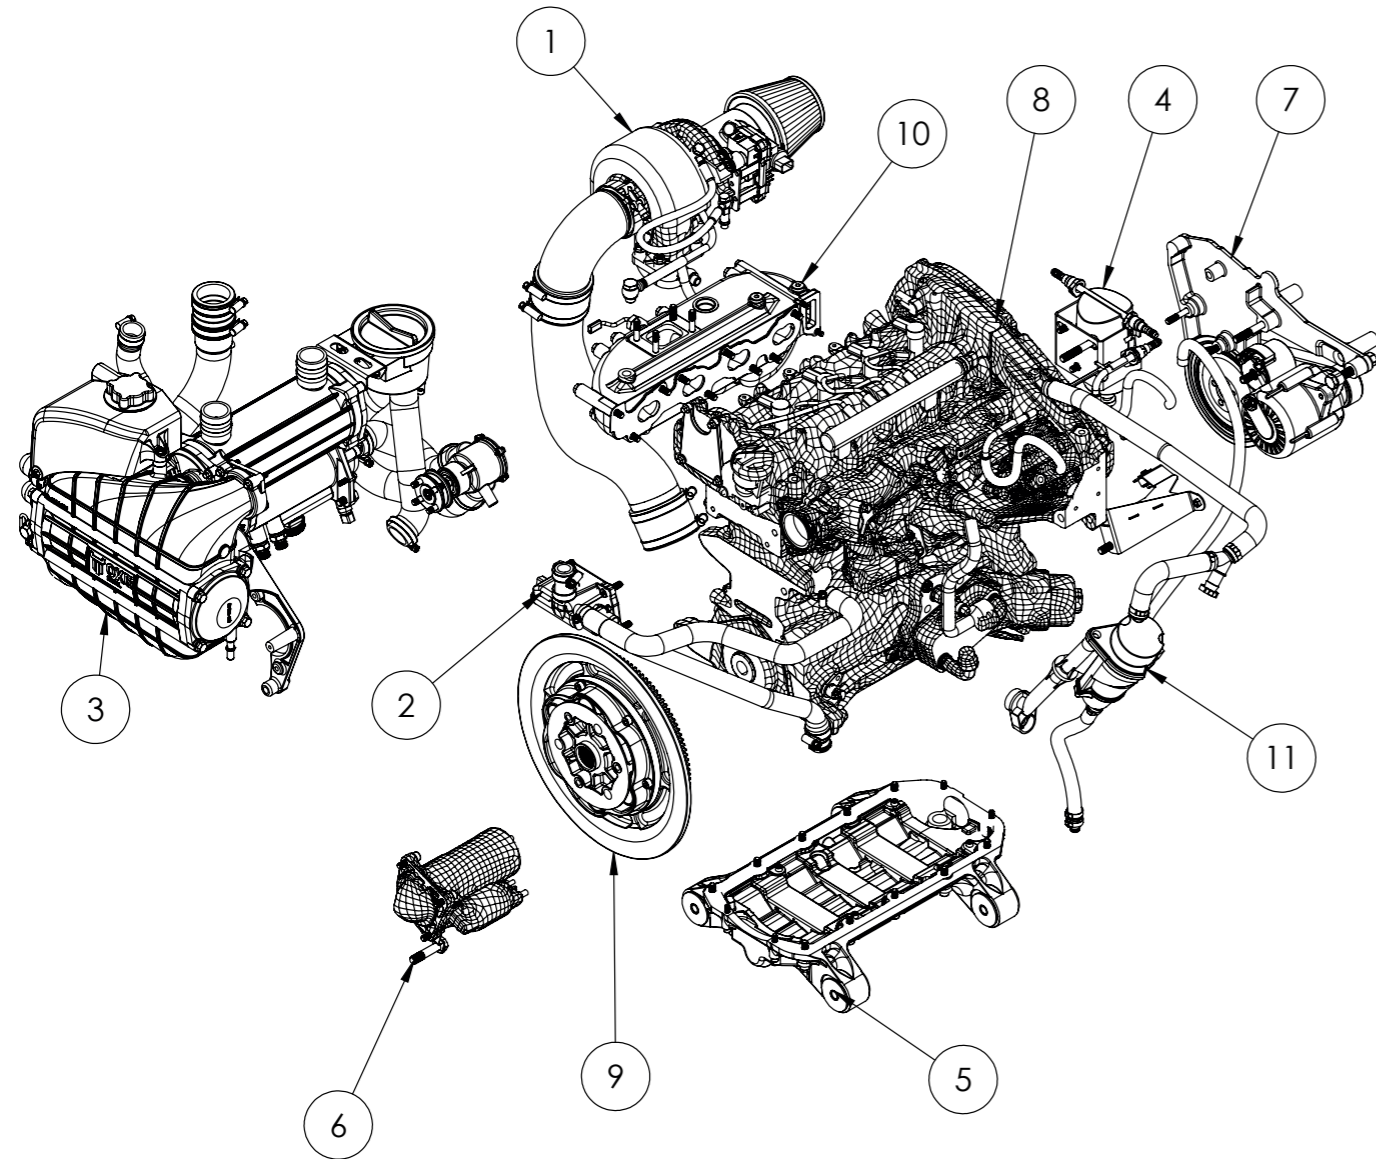

**1.5 MARINE ENGINE
ASSEMBLY**


30-0114-001
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-079	Turbo assembly	1
2	30-0114-080	Thermostat bypass assembly	1
3	30-0114-082	Coolers assembly	1
4	30-0114-088	Fuel system assembly	1
5	30-0114-090	Dry sump assembly	1
6	30-0114-094	Starter motor assembly	1
7	30-0114-095	Alternator assembly	1
8	30-0114-100	Engine block assembly	1
9	30-0114-101	Flywheel assembly	1
10	30-0114-103	Exhaust manifold assembly	1
11	30-0114-117	Crankcase ventilation assembly	1

1.5.1 TURBO ASSEMBLY

30-0114-079

 OXE DIESEL PARTS CATALOGUE

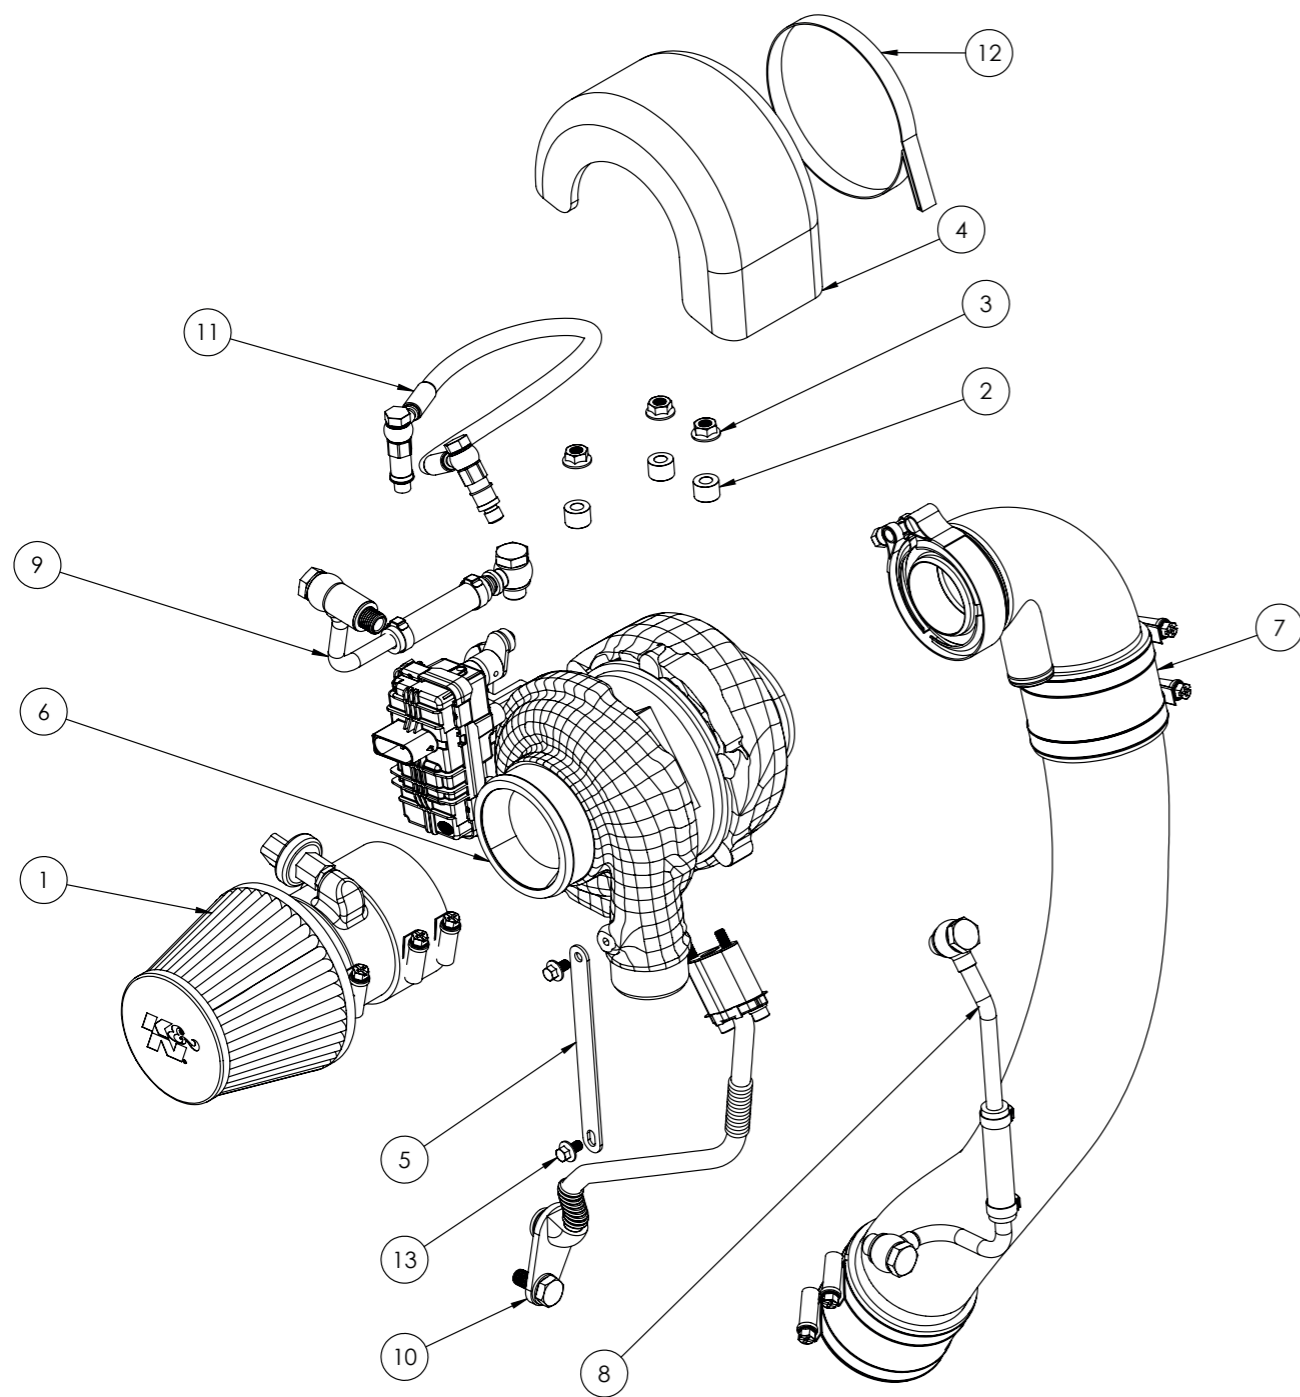

1.5.1 TURBO ASSEMBLY


30-0114-079

OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-081	Air intake assembly	1
2	30-0114-297	Distance	3
3	30-0114-298	Nut	3
4	30-0114-340	Turbo heat cover	1
5	30-0114-387	Retainer	1
6	30-0114-395	Turbocharger	1
7	30-0114-421	Exhaust pipe assembly	1
8	30-0114-422	Turbo water out assembly	1
9	30-0114-423	Turbo water in assembly	1
10	30-0114-424	Turbo oil out assembly	1
11	30-0114-425	Turbo oil in assembly	1
12	30-0114-441	Cable tie Turbo heat cover	2
13	30-0130-229	Bolt	2

1.5.1.1 AIR INTAKE ASSEMBLY

 
30-0114-081
OXE DIESEL PARTS CATALOGUE

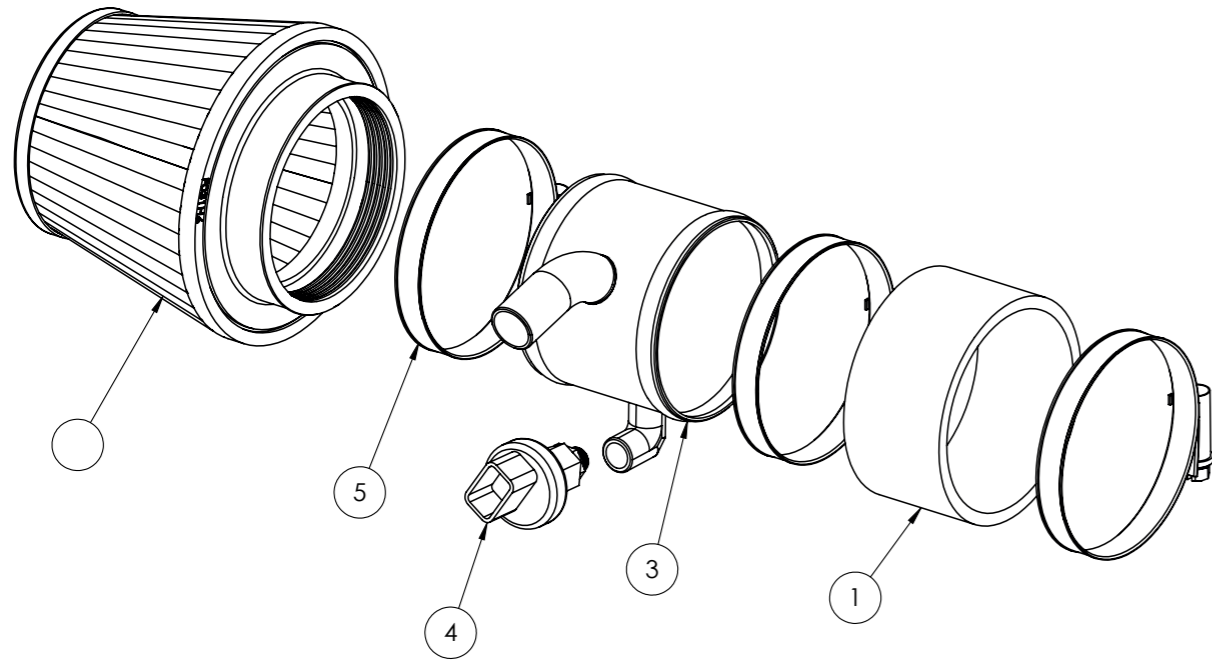

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-219	Air filter hose	1
2	30-0114-427	Air filter	1
3	30-0114-434	Air filter adapter	1
4	30-0116-020	Sensor	1
5	30-0122-056	Hose clamp	3

1.5.1.2 EXHAUST PIPE ASSEMBLY

 30-0114-421
OXE DIESEL PARTS CATALOGUE

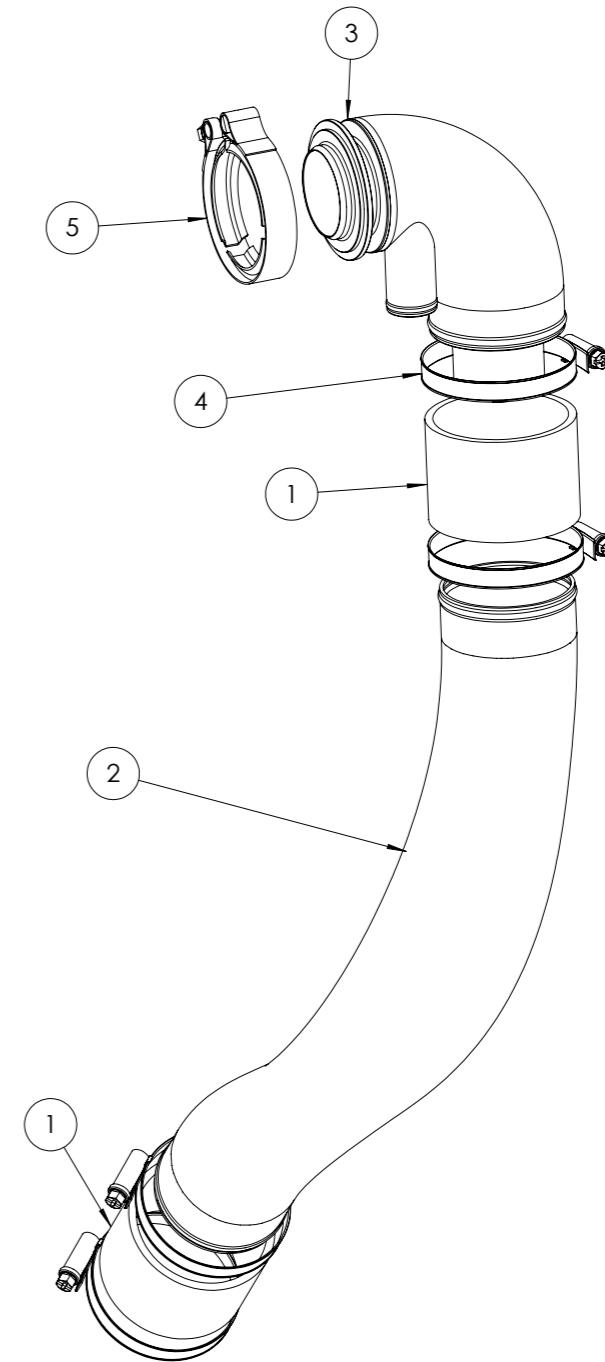


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-087	Flex hose, high temp exhaust	2
2	30-0114-225	Exhaust pipe	1
3	30-0114-234	Exhaust Elbow	1
4	30-0122-056	Hose clamp	4
5	30-0122-102	Clamp, v-band	1

**1.5.1.3 TURBO WATER
OUTLET ASSEMBLY**

30-0114-422

 OXE DIESEL PARTS CATALOGUE

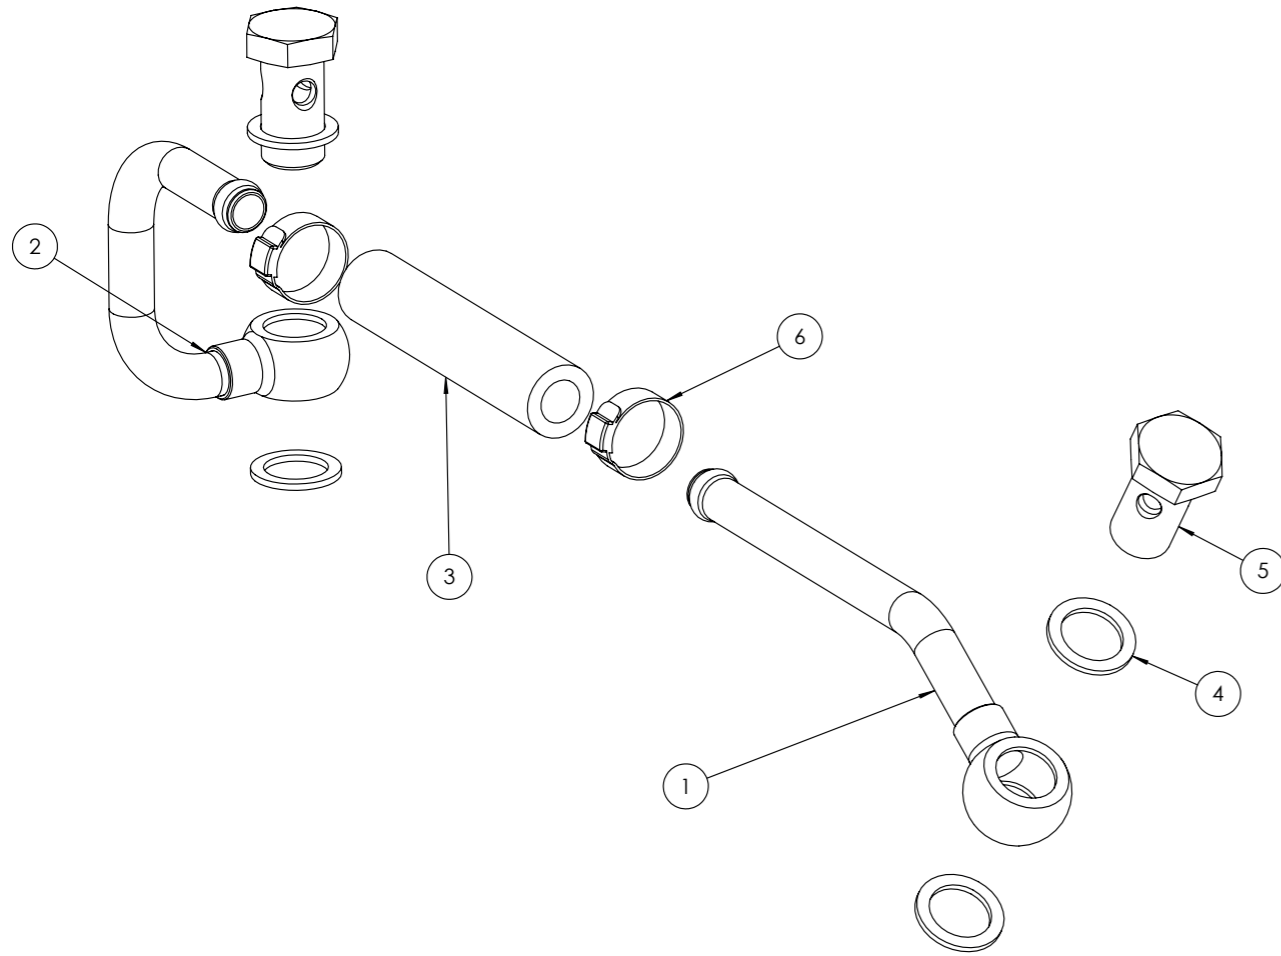


PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-250	Turbo cooling outlet, upper	1
2	30-0114-392	Turbo cooling outlet, lower	1
3	30-0114-393	Hose, turbo cooling	1
4	30-0121-040	Washer	4
5	30-0122-103	Banjo bolt	2
6	30-0122-156	Hose clamp	2

**1.5.1.4 TURBO WATER
INLET ASSEMBLY**

30-0114-423

 OXE DIESEL PARTS CATALOGUE

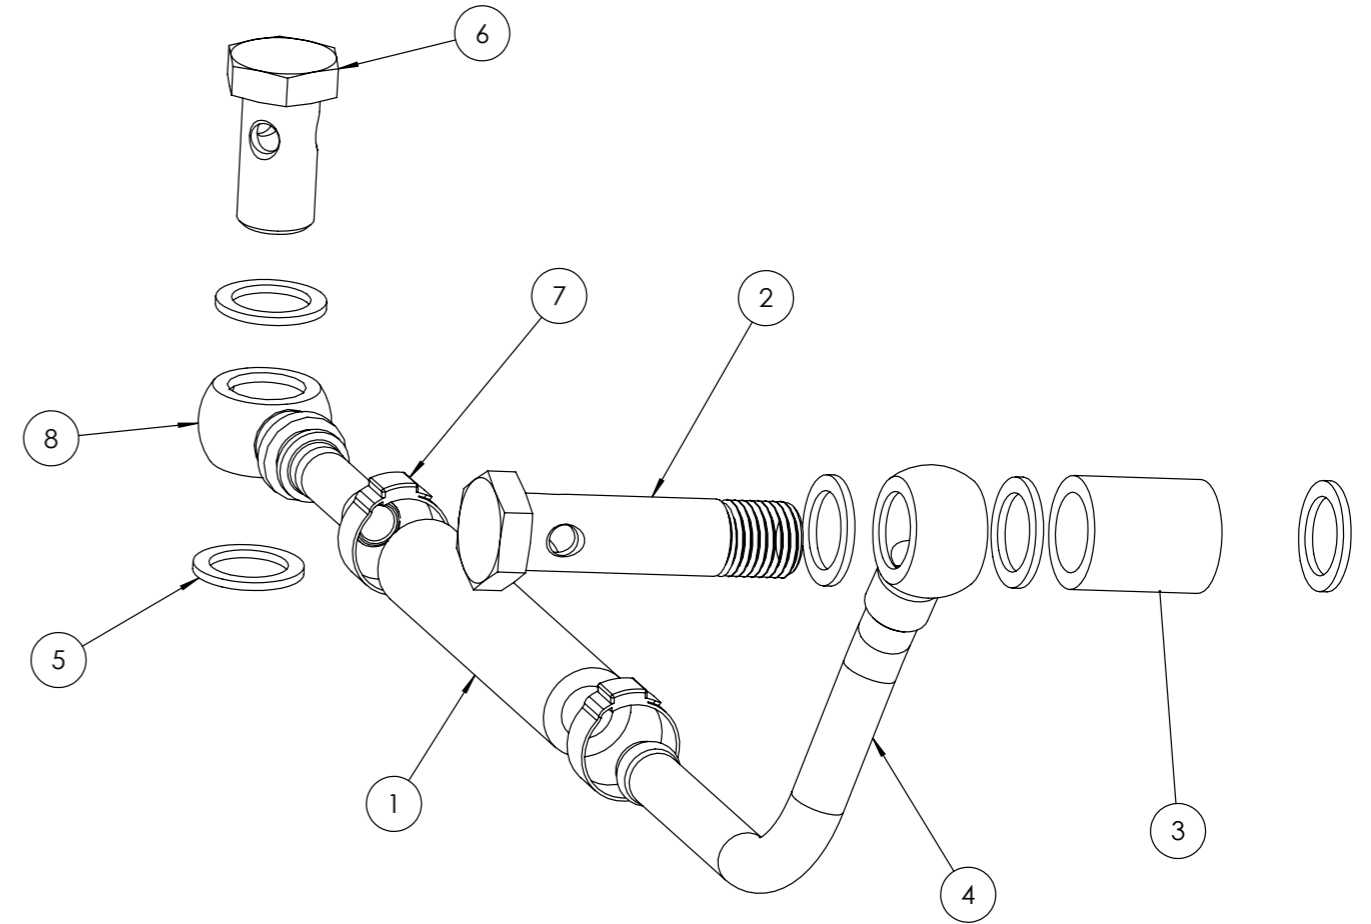


PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-393	Hose	1
2	30-0114-430	Banjo bolt	1
3	30-0114-431	Adaptor	1
4	30-0114-432	Pipe	1
5	30-0121-040	Washer	5
6	30-0122-103	Banjo Bolt	1
7	30-0122-156	Hose clamp	2
8	30-0122-222	Banjo	1

1.5.1.5 TURBO OIL OUTLET ASSEMBLY

30-0114-424

 OXE DIESEL PARTS CATALOGUE

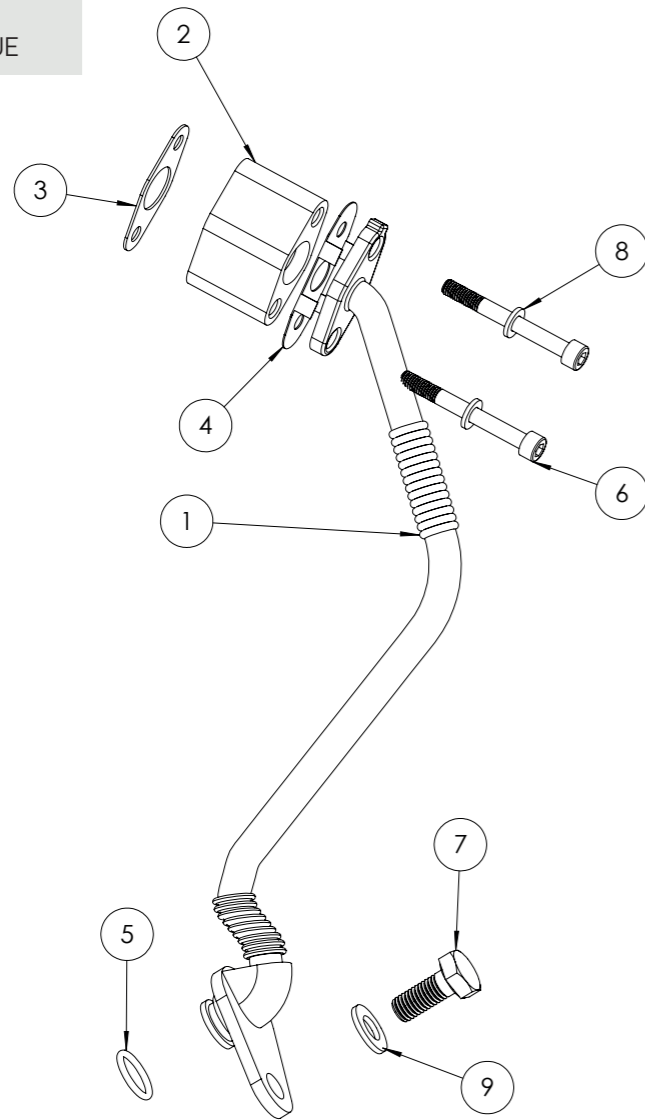


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0170-110	Oil pipe assy	1
2	30-0114-292	Spacer, turbo oil return	1
3	30-0114-428	Gasket	1
4	30-0114-429 , 30-0170-102	Gasket	1
5	30-0170-100	O-ring, turbo	1
6	30-0130-028	Screw	2
7	30-0130-153, 30-0170-014	Screw	1
8	30-0130-191	Washer	2
9	30-0130-193, 30-0170-103	Washer	1

1.5.1.6 TURBO OIL INLET ASSEMBLY

30-0114-425

 
OXE DIESEL PARTS CATALOGUE

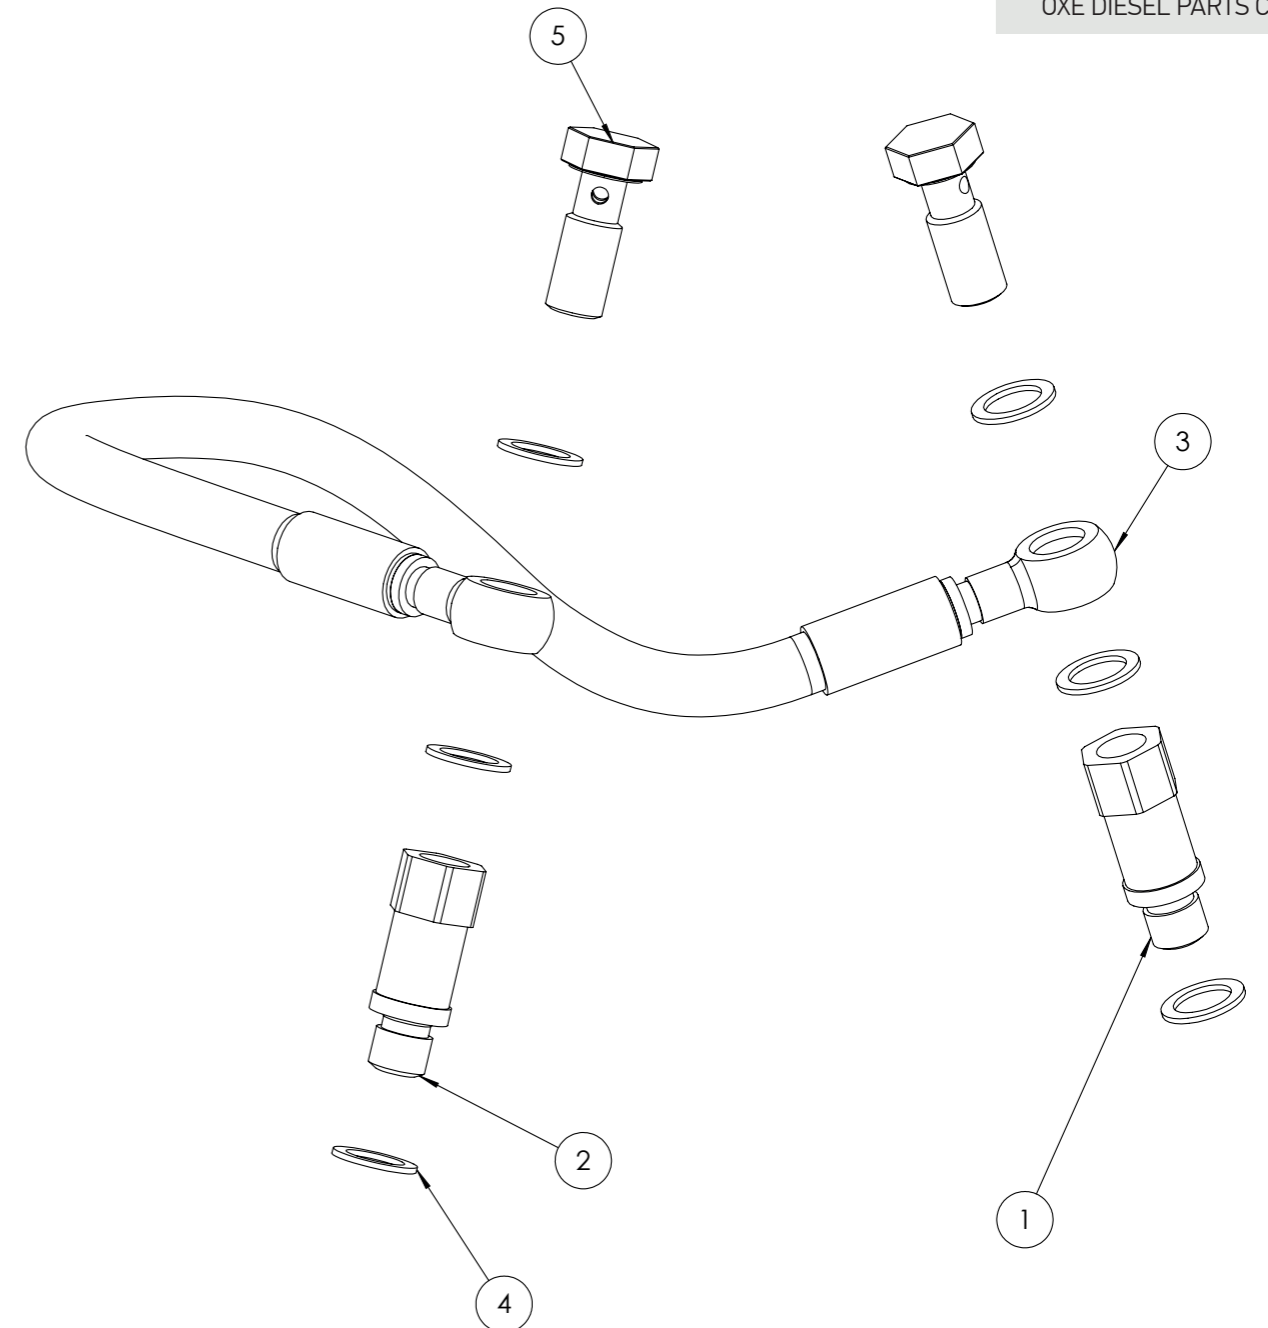

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-312	Adaptor, turbo oil inlet	1
2	30-0114-313	Adapter	1
3	30-0114-323	Hose, turbo oil feed	1
4	30-0121-052	Washer	6
5	30-0122-141	Banjo screw	2

1.5.2 THERMOSTAT BYPASS ASSEMBLY

 30-0114-080
OXE DIESEL PARTS CATALOGUE

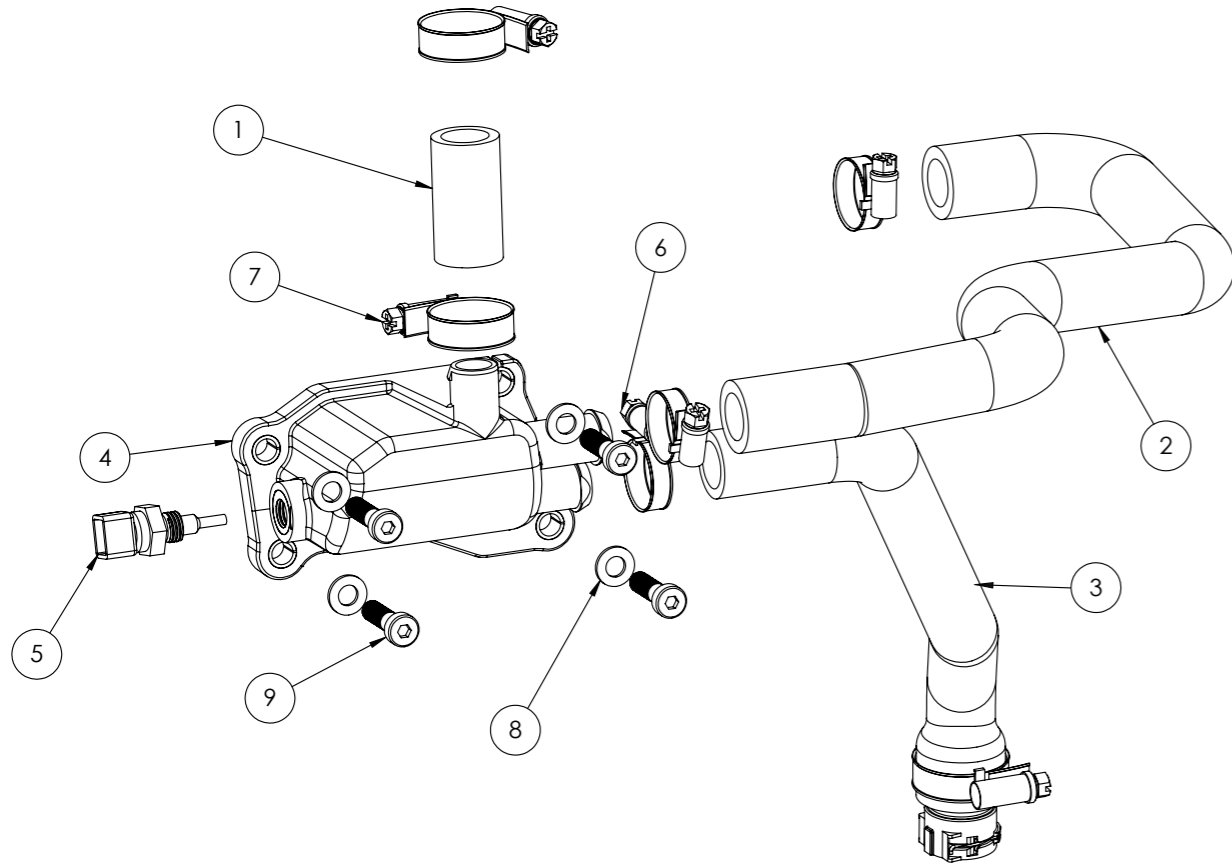


PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-084	Hose, expansion tank	1
2	30-0114-124	Hose, oil cooler outlet	1
3	30-0114-412	Hose , oil cooler inlet	1
4	30-0114-414	Thermostat bypass housing	1
5	30-0116-080	Sensor, coolant temp	1
6	30-0122-049	Hose clamp	3
7	30-0122-055	Hose clamp	2
8	30-0130-192	Washer	4
9	30-0130-228	Bolt	4

1.5.2.1 THERMOSTAT BYPASS HOUSING ASSEMBLY

 30-0114-414
OXE DIESEL PARTS CATALOGUE

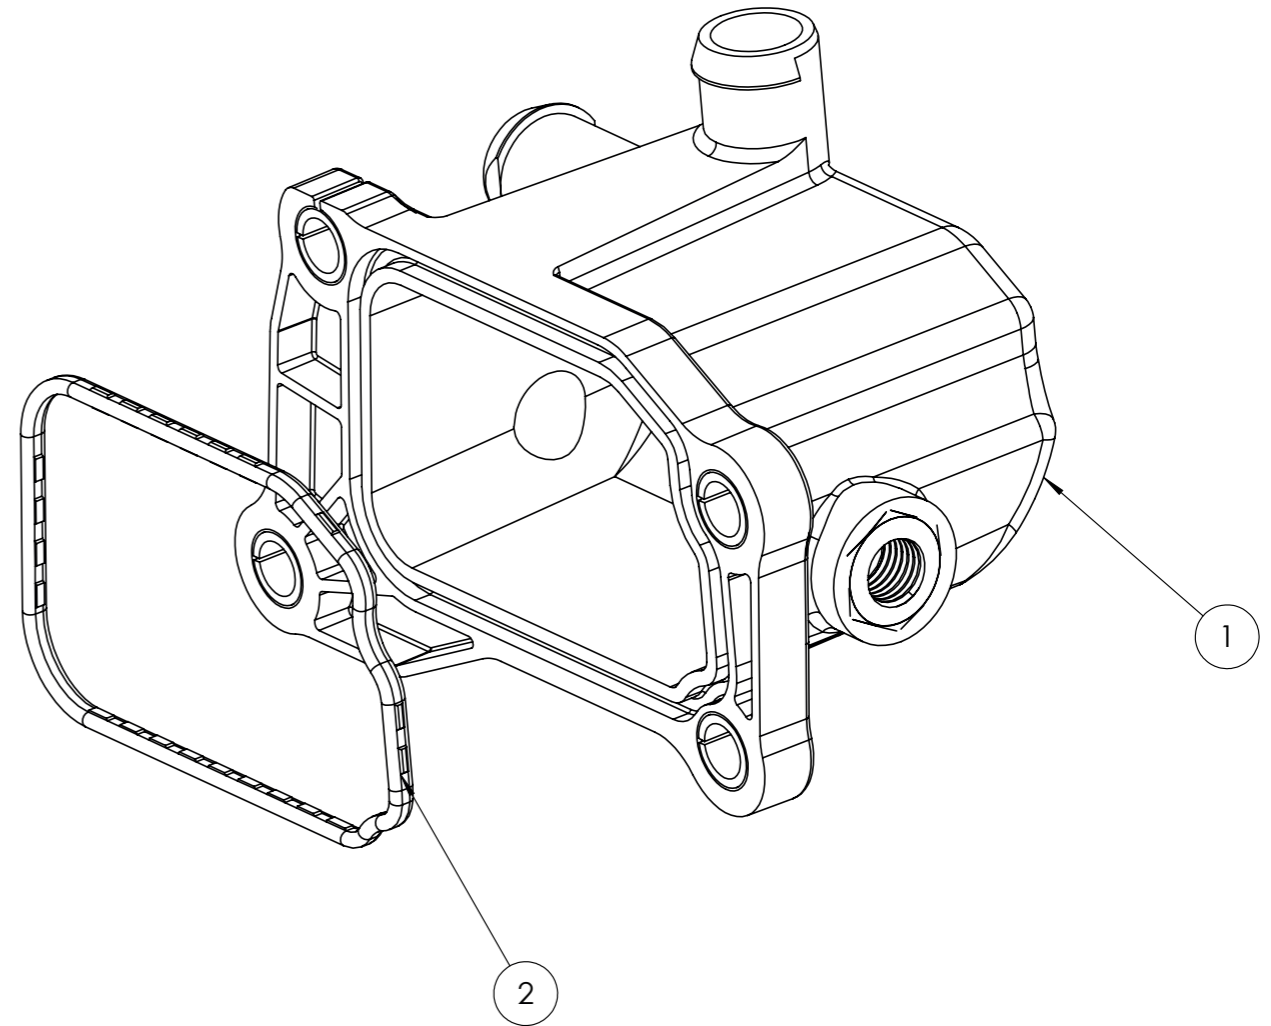

PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-417	Thermostat bypass	1
2	30-0114-418	Seal	1

1.5.3 COOLERS ASSEMBLY

 
30-0114-082

OXE DIESEL PARTS CATALOGUE

1.5.3 COOLERS ASSEMBLY

30-0114-082

OXE DIESEL PARTS CATALOGUE

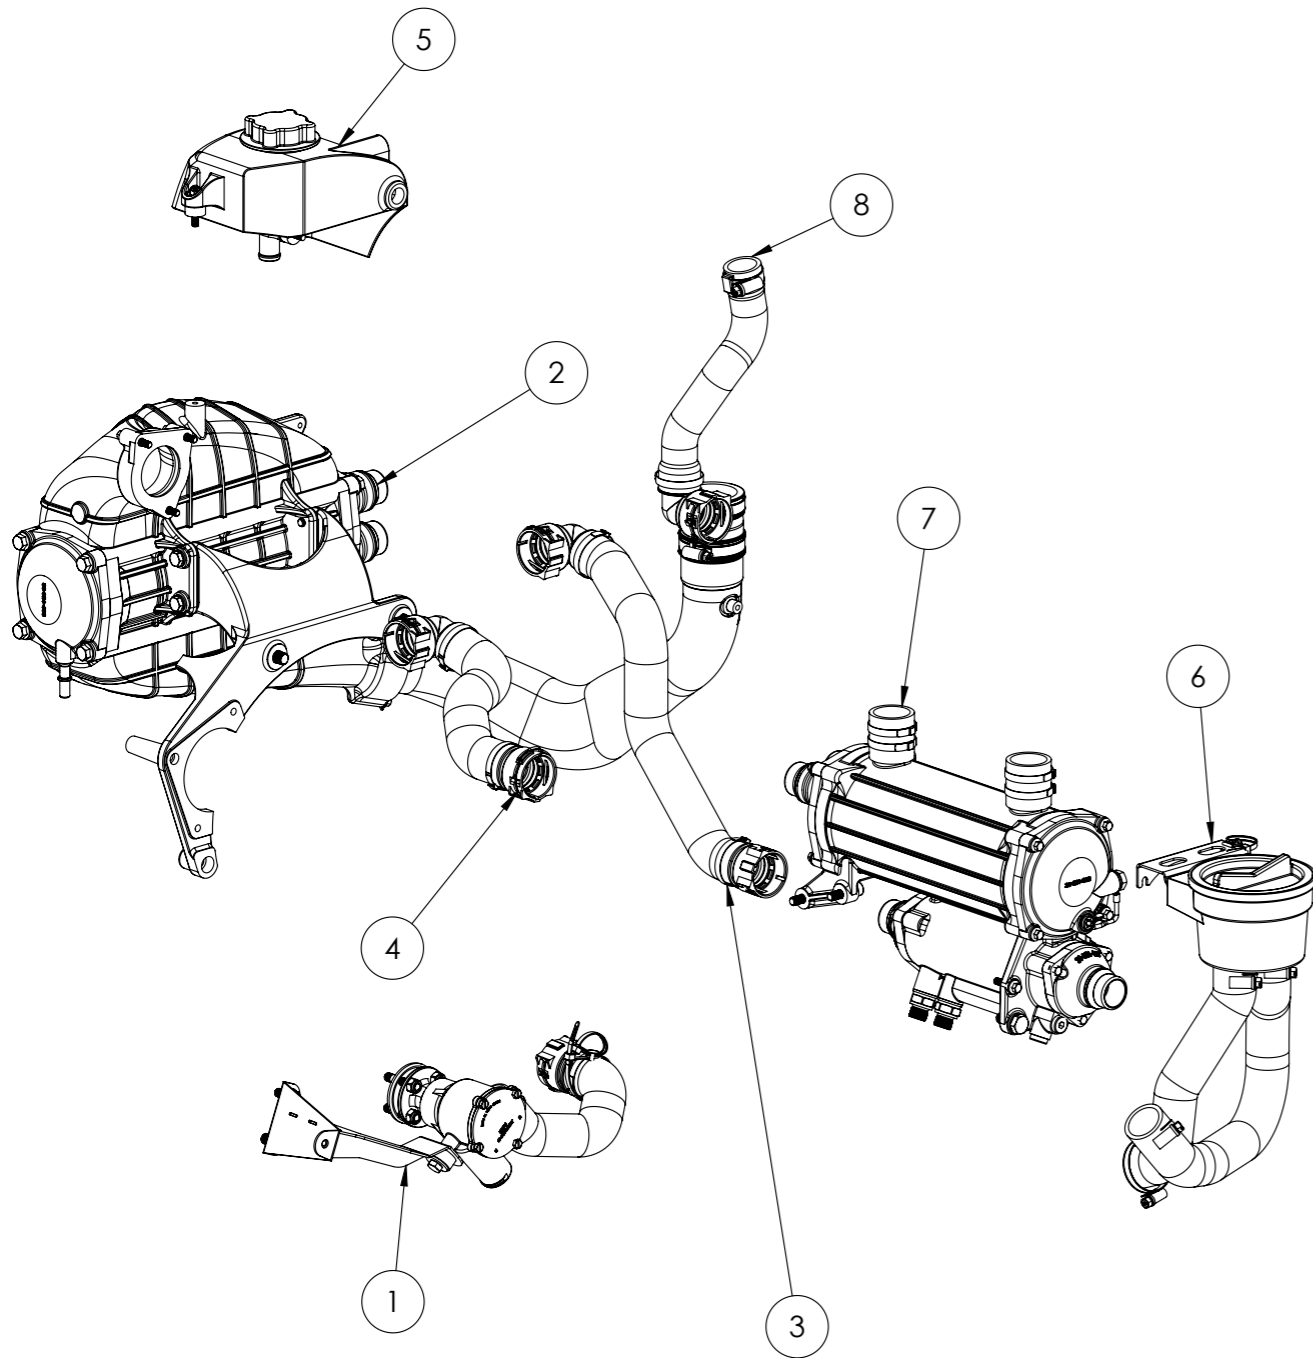


PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-085	Water pump assembly	1
2	30-0114-148	Intercooler assembly	1
3	30-0114-177	Intercooler in hose cpl	1
4	30-0114-178	intercooler out hose cpl	1
5	30-0114-188	Expansion tank assembly	1
6	30-0114-196	Sea water filter assembly	1
7	30-0114-199	Heat exchanger assembly	1
8	30-0114-245	HX out hose cpl	1

1.5.3.1 SEA WATER PUMP ASSEMBLY

30-0114-085

 OXE DIESEL PARTS CATALOGUE

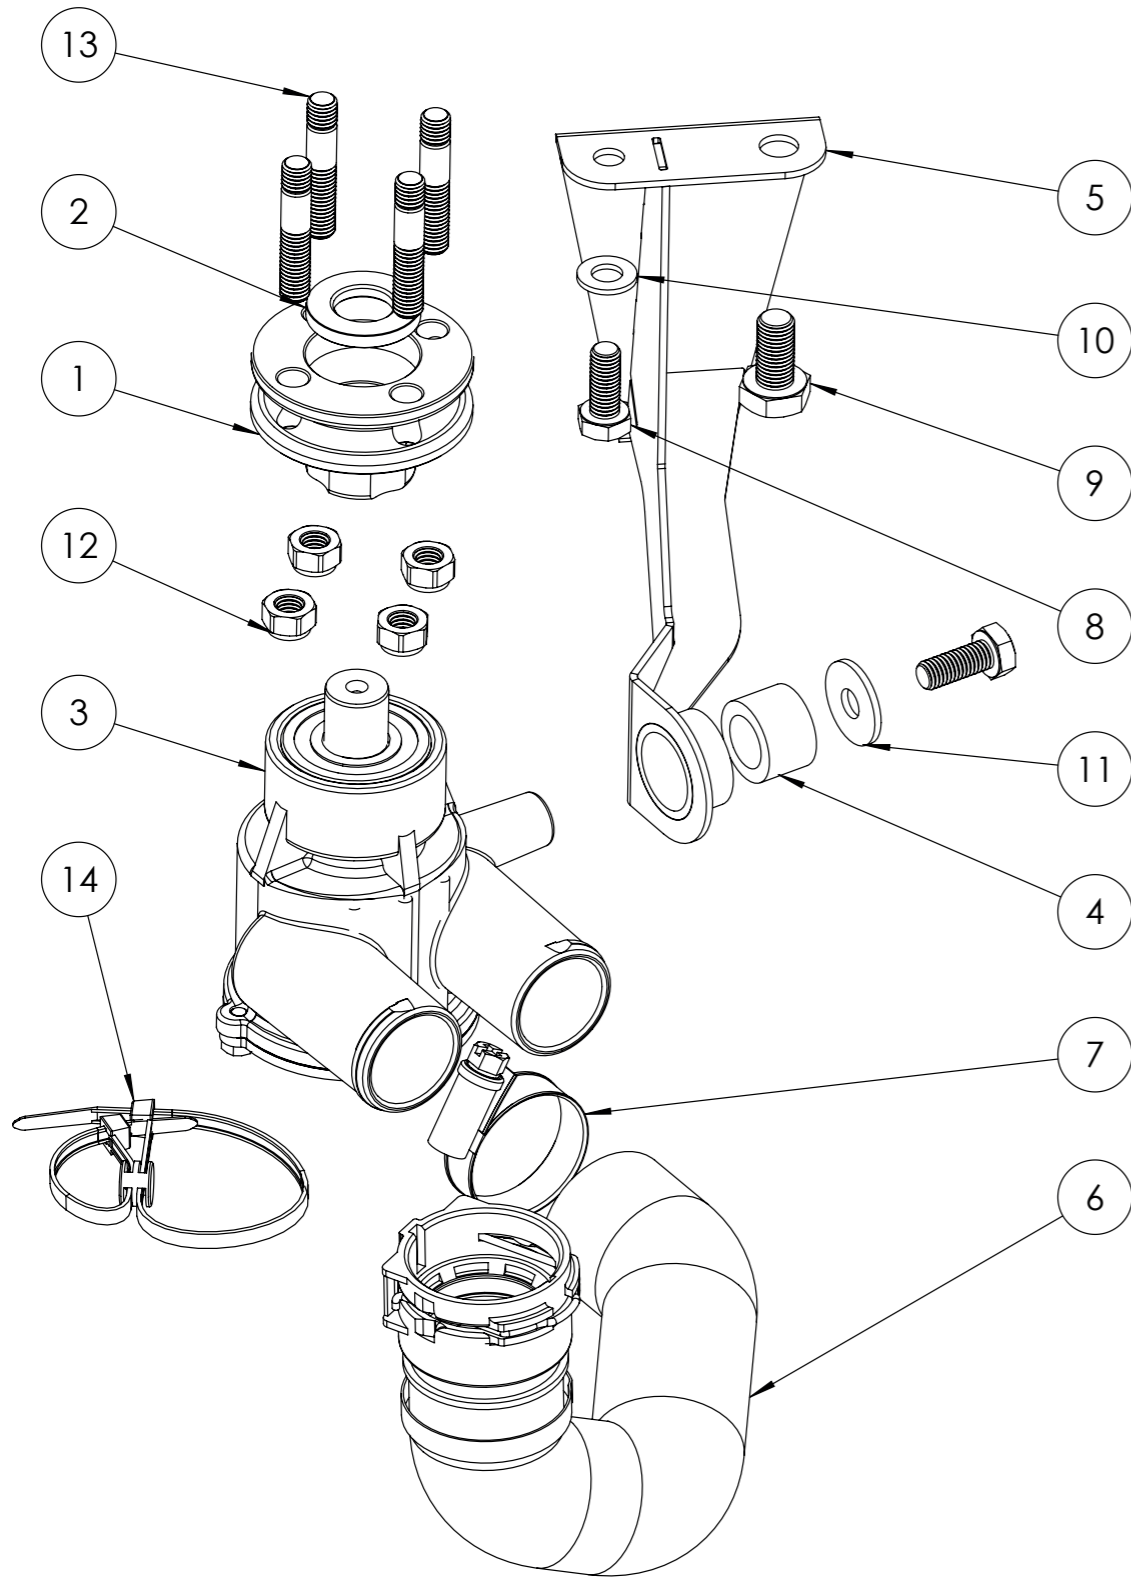

1.5.3.1 SEA WATER PUMP ASSEMBLY

30-0114-085

OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-045	Drive flange, sea water pump	1
2	30-0114-053	Guide washer, sea water pump	1
3	30-0114-059	Water pump cpl	1
4	30-0114-130	Bushing, water pump	1
5	30-0114-273	Bracket	1
6	30-0114-491	Pump out hose	1
7	30-0122-050	Hose clamp	1
8	30-0130-121	Bolt	2
9	30-0130-152	Bolt	1
10	30-0130-192	Washer	1
11	30-0130-196	Washer	1
12	30-0130-262	Nut	4
13	30-0130-340	Bolt	4
14	30-0122-250	Clip	1
15	30-0130-193	Washer	2

1.5.3.1.1 SEA WATER
PUMP CPL

 
30-0114-059

OXE DIESEL PARTS CATALOGUE

1.5.3.1.1 SEA WATER
PUMP CPL

30-0114-059

OXE DIESEL PARTS CATALOGUE

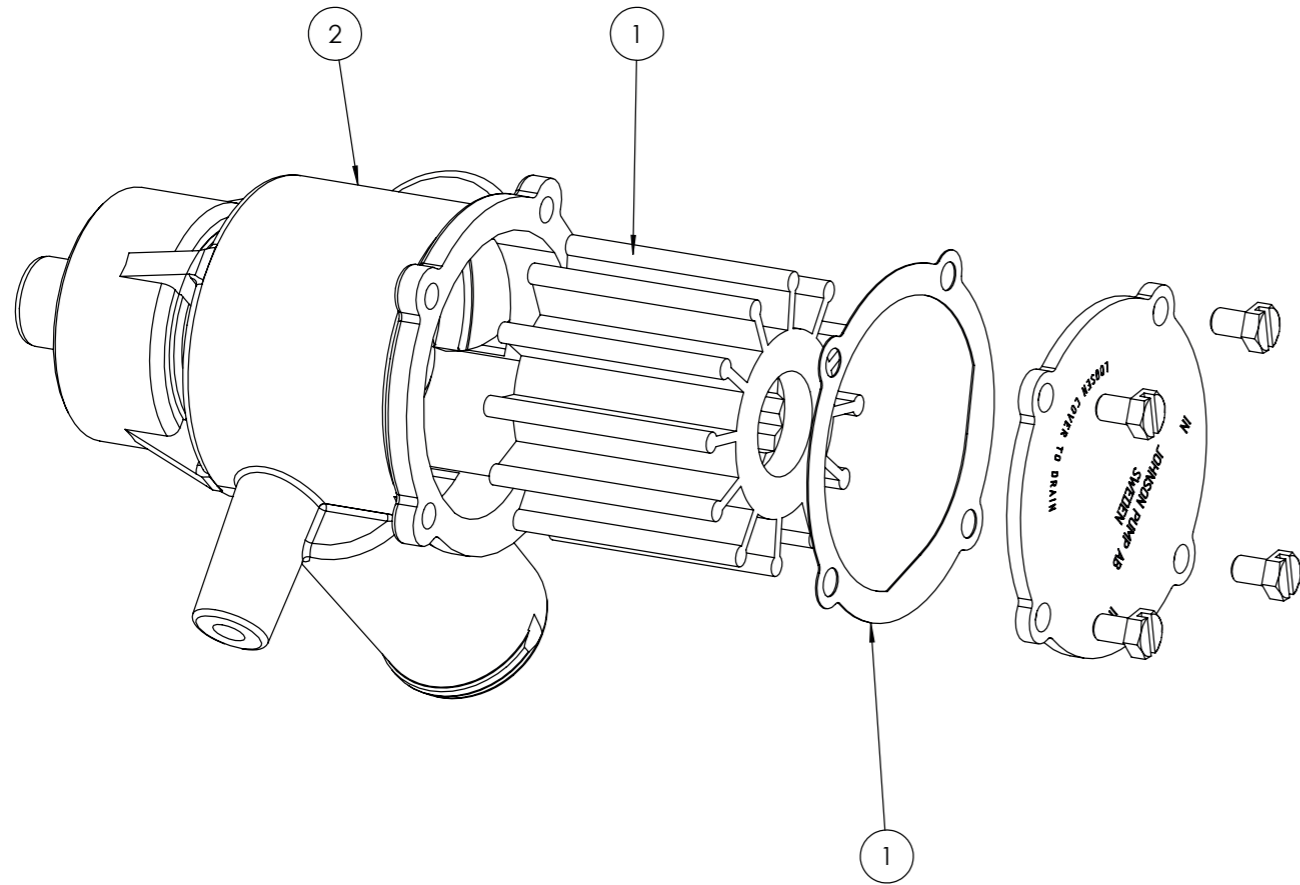

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0190-912	Impeller kit	1
2	30-0114-466	Water pump housing	1

1.5.3.2 INTERCOOLER ASSEMBLY

 
30-0114-149

OXE DIESEL PARTS CATALOGUE

1.5.3.2 INTERCOOLER ASSEMBLY

30-0114-149


OXE DIESEL PARTS CATALOGUE

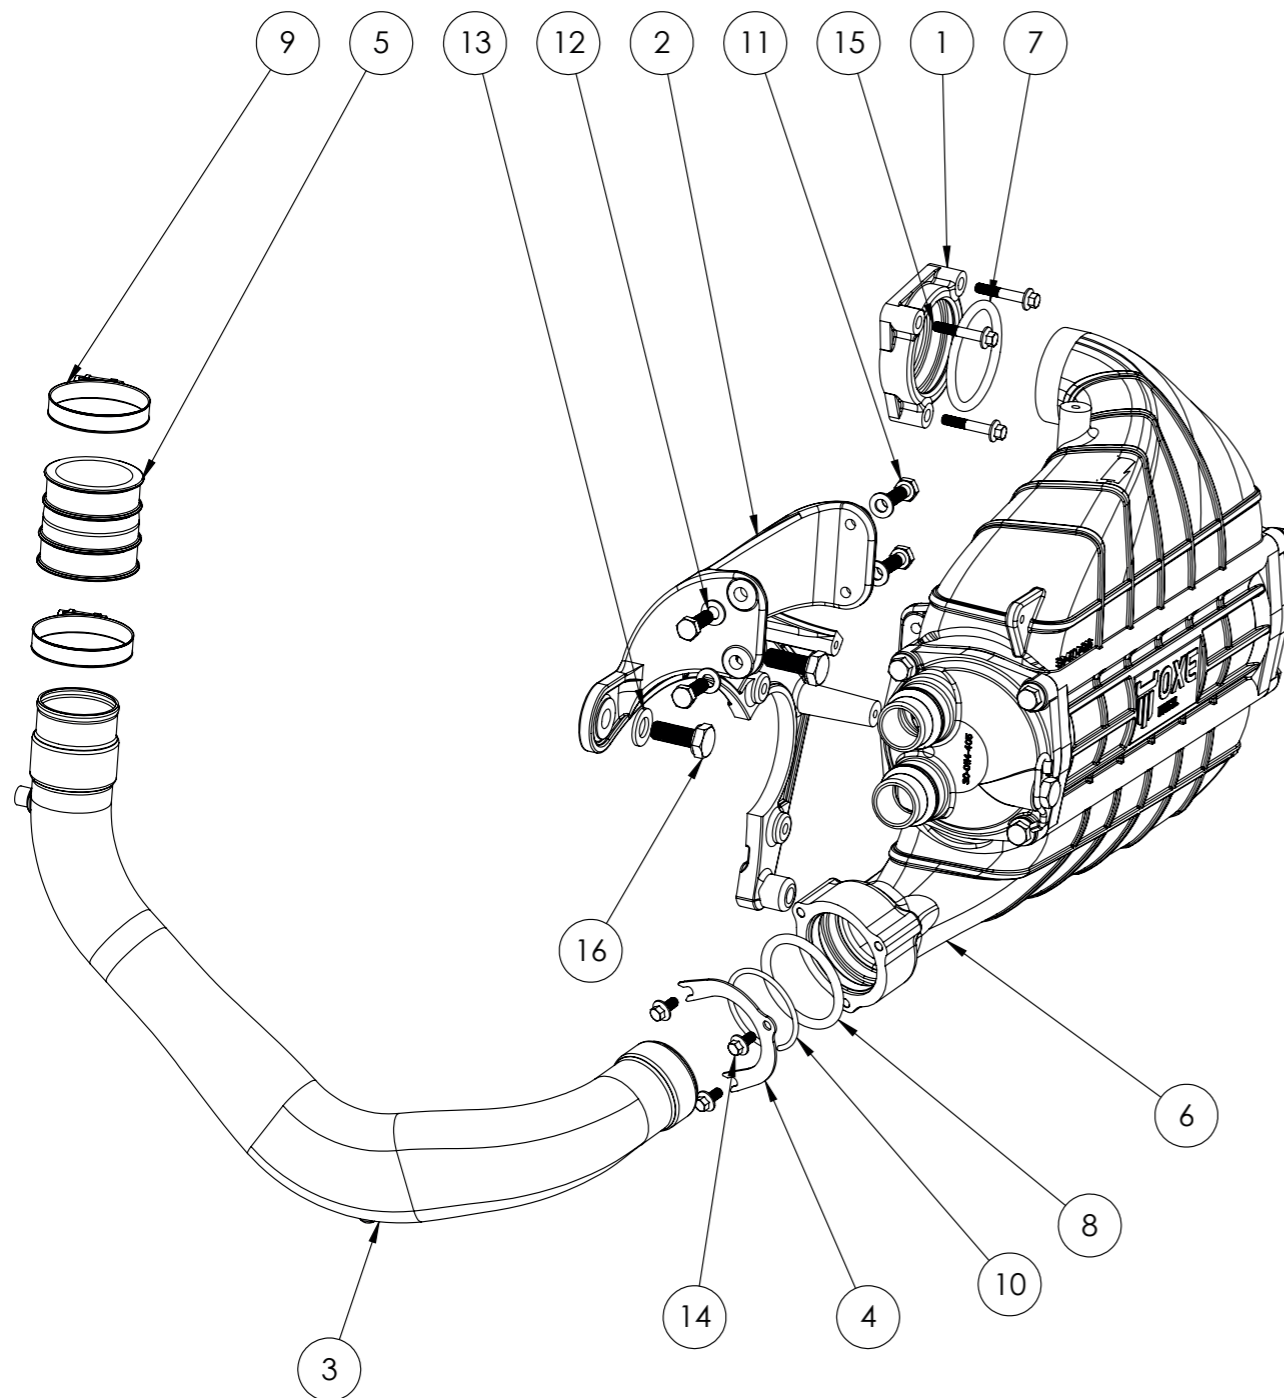

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-174	Intake flange	1
2	30-0114-175	Intercooler bracket	1
3	30-0114-385	Pipe, air pressure	1
4	30-0114-386	Intercooler retainer, pressure pipe	1
5	30-0114-388	Hose, pressure pipe	1
6	30-0114-408	Intercooler	1
7	30-0121-029	O-ring	1
8	30-0121-066	O-ring	1
9	30-0122-054	Hose clamp	2
10	30-0122-221	Spacer, o-ring	1
11	30-0130-122	Bolt	4
12	30-0130-192	Washer	4
13	30-0130-194	Washer	2
14	30-0130-240	Bolt	3
15	30-0130-246	Bolt	3
16	30-0130-325	Bolt	2

1.5.3.2.1 INTERCOOLER

 
30-0114-408
OXE DIESEL PARTS CATALOGUE

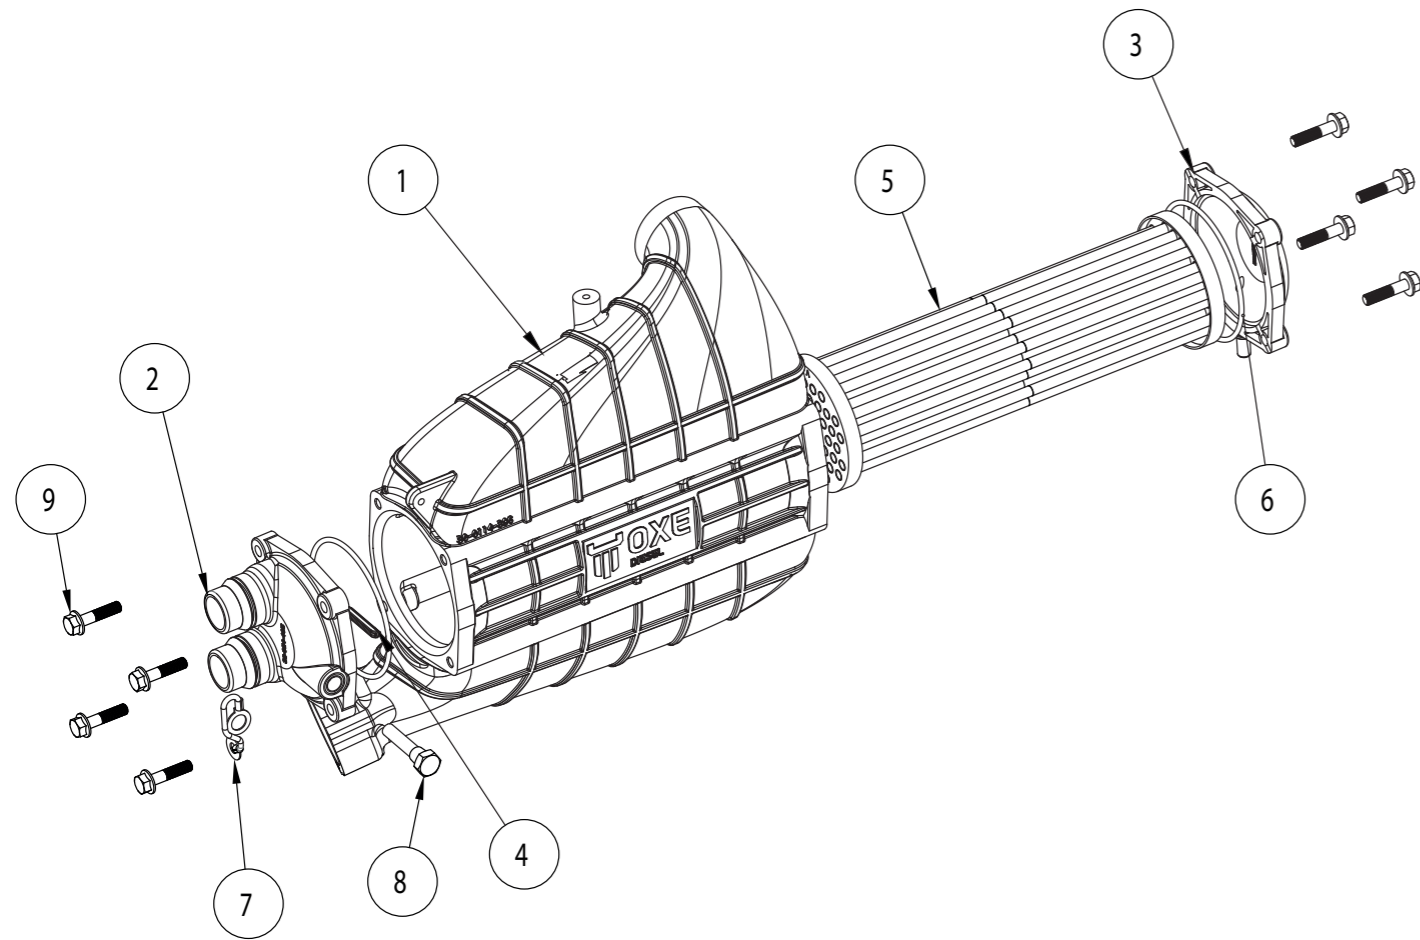

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-396	Intercooler housing	1
2	30-0114-405	Flange, water inlet/outlet intercooler	1
3	30-0114-406	End-cap, intercooler	1
4	30-0114-420	Seal, Intercooler cap divider	1
5	30-0114-407	Core, intercooler	1
6	30-0121-069	O-ring, intercooler	2
7	30-0122-225	Ground wire, intercooler	1
8	30-0122-226	Anode, intercooler	1
9	30-0130-302	Bolt	8

1.5.3.3 EXPANSION TANK ASSEMBLY

 30-0114-188
OXE DIESEL PARTS CATALOGUE

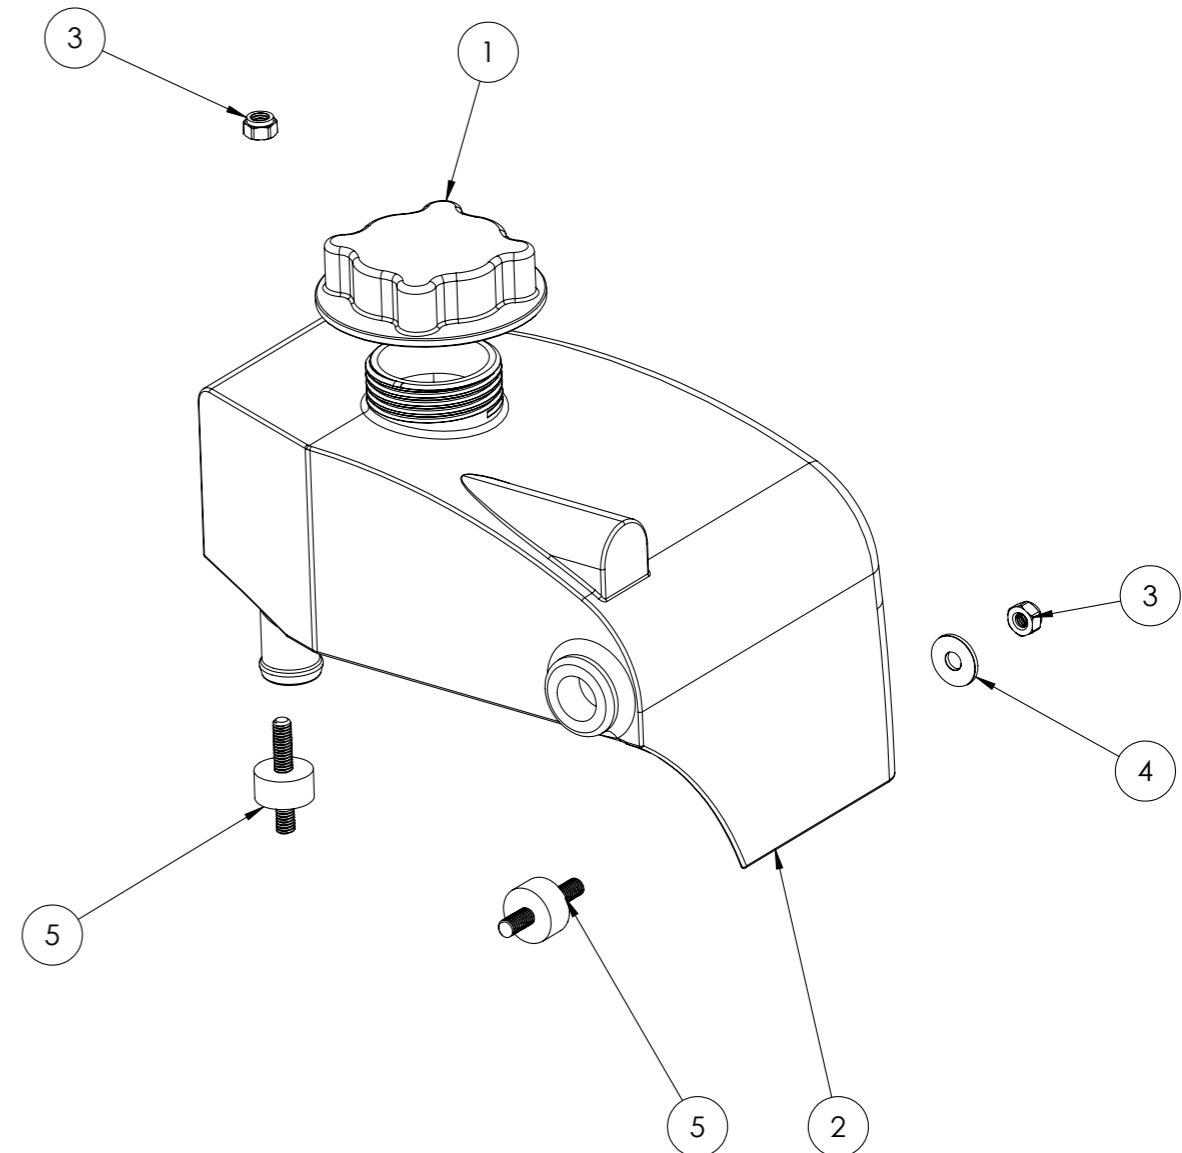


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-078	Cap, expansion bottle	1
2	30-0114-183	Expansion tank	1
3	30-0130-261	Nut	2
4	30-0130-347	Washer	1
5	30-0122-269	Rubber mounting	2

**1.5.3.4 SEA WATER
STRAINER ASSEMBLY**

30-0114-196

 OXE DIESEL PARTS CATALOGUE

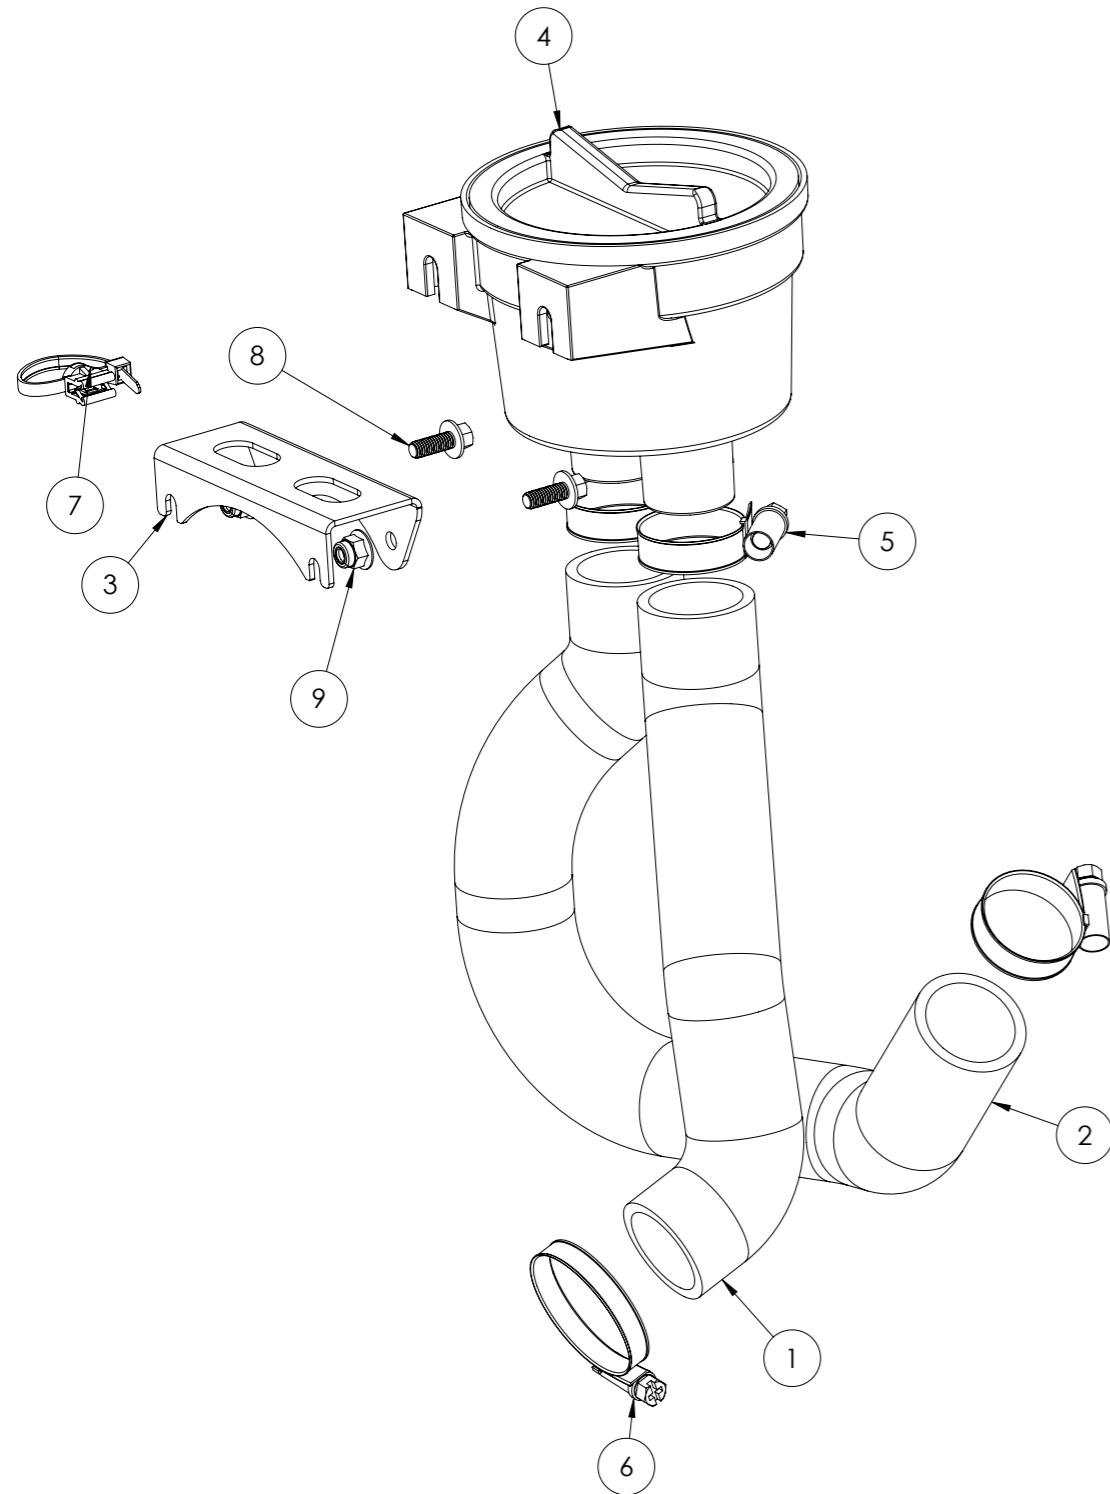

**1.5.3.4 SEA WATER
STRAINER ASSEMBLY**


30-0114-196

OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-260	Sw filter in hose	1
2	30-0114-261	Sw filter out hose	1
3	30-0114-410	Bracket	1
4	30-0114-455	Sea water filter CPL	1
5	30-0122-050	Hose Clamp	3
6	30-0122-051	Hose clamp	1
7	30-0122-258	Clip	1
8	30-0130-241	Bolt	2
9	30-0130-270	Nut	2
10	30-0122-258	Clip	1
11	30-0130-241	Bolt	2
12	30-0130-270	Nut	2

1.5.3.5 HEAT EXCHANGER ASSEMBLY

 30-0114-199
OXE DIESEL PARTS CATALOGUE

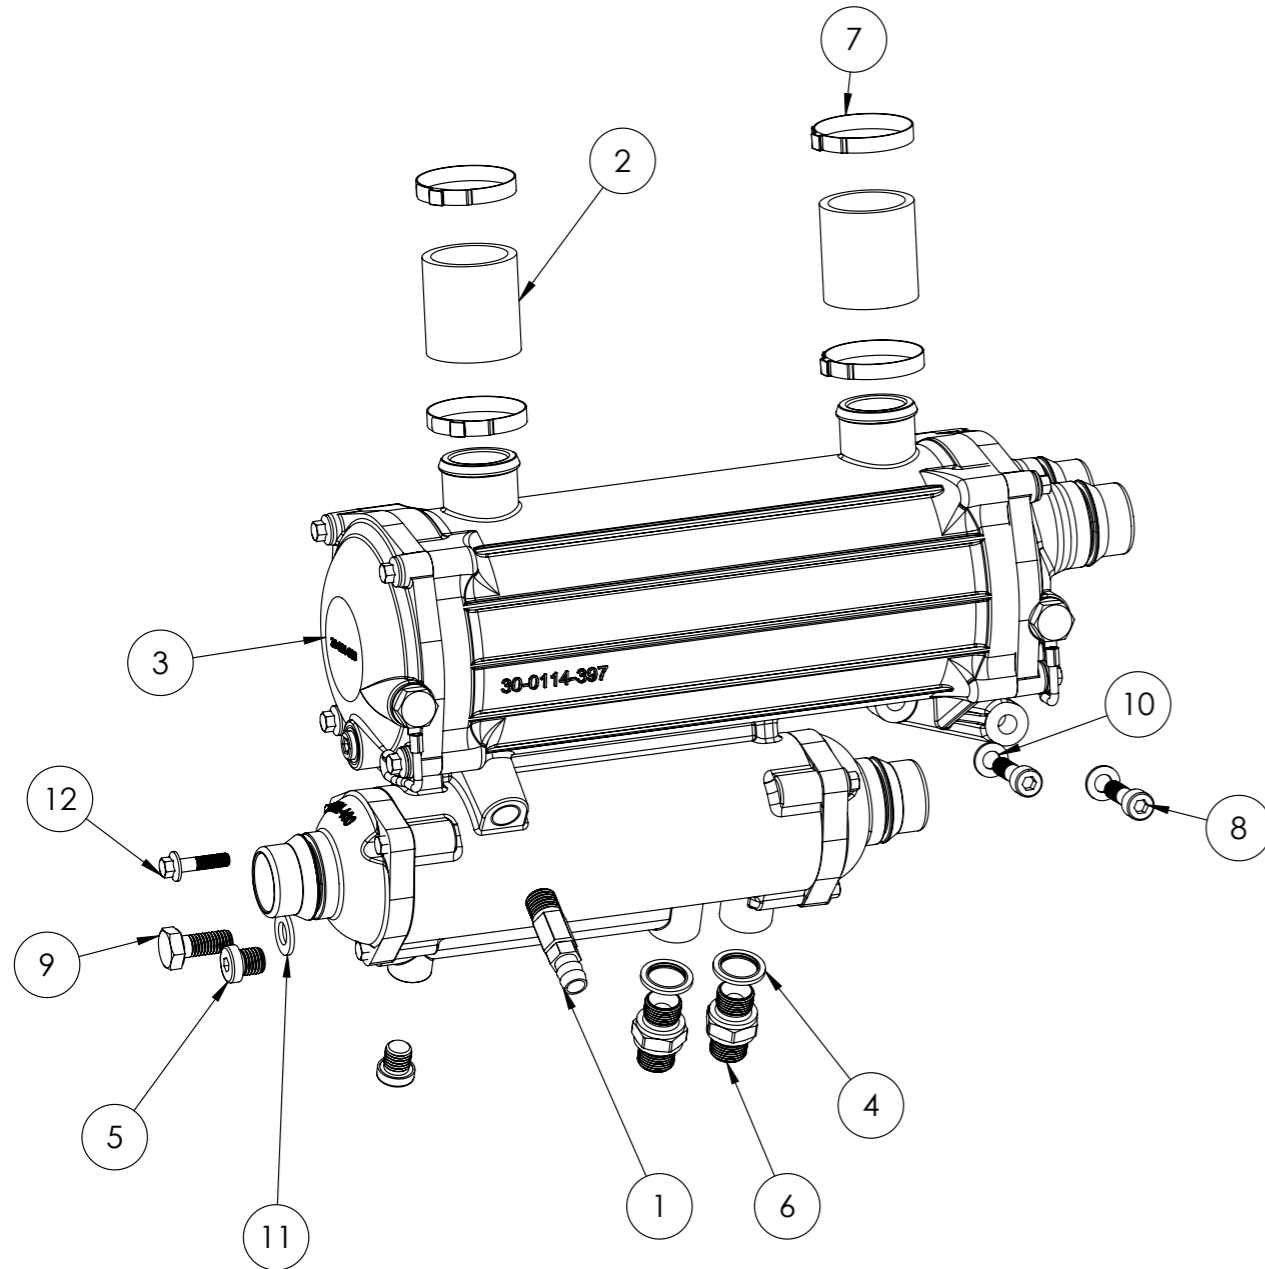


1.5.3.5 HEAT EXCHANGER ASSEMBLY

30-0114-199
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-208	Valve, drain	1
2	30-0114-290	Hose, coolant	2
3	30-0114-403	Heat exchanger	1
4	30-0116-951	Sensor, oil pressure	1
5	30-0121-050	Seal	2
6	30-0122-135	Plug	1
7	30-0122-137	Adapter	2
8	30-0122-140	Hose clamp	4
9	30-0130-043	Bolt	2
10	30-0130-153	Bolt	1
11	30-0130-192	Washer	2
12	30-0130-193	Washer	1
13	30-0130-243	Bolt	1

1.5.3.5.1 HEAT EXCHANGER

 30-0114-403
OXE DIESEL PARTS CATALOGUE

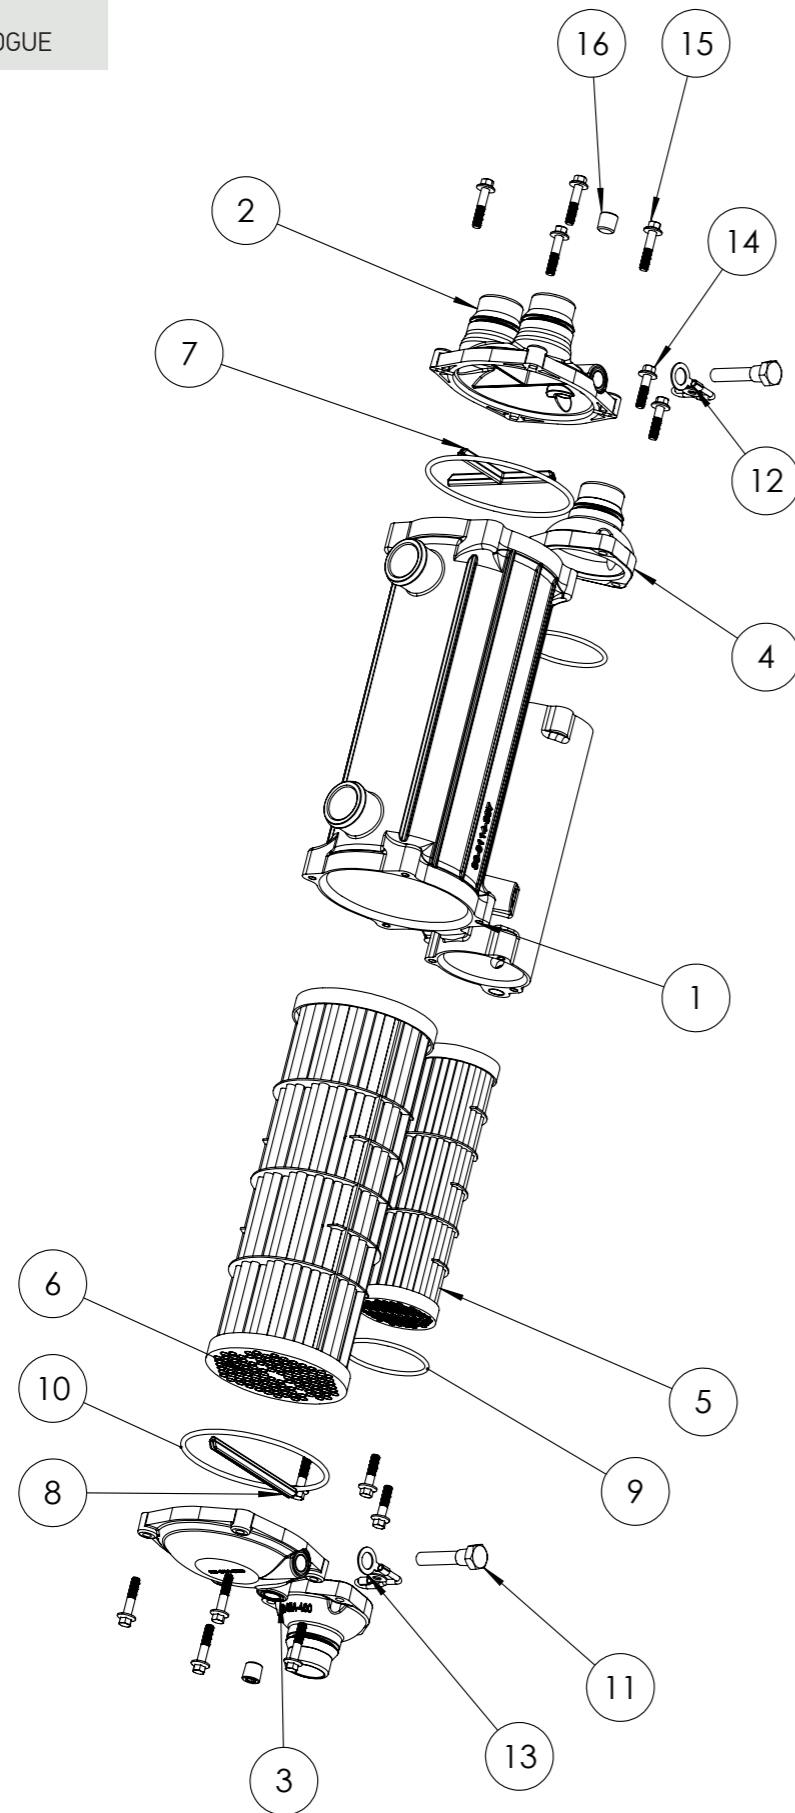

1.5.3.5.1 HEAT EXCHANGER


30-0114-403
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-397	Heat exchanger housing	1
2	30-0114-398	Heat exchanger front end-cap	1
3	30-0114-399	Heat exchanger rear end-cap	1
4	30-0114-400	Hydraulic oil cooler end-cap out	2
5	30-0114-401	Hydraulic oil cooler bundle	1
6	30-0114-402	Heat exchanger bundle	1
7	30-0114-409	Rear end-cap divider seal	1
8	30-0114-411	Front end-cap divider seal	1
9	30-0121-067	Hydraulic oil cooler o-ring	2
10	30-0121-068	Heat exchanger o-ring	2
11	30-0122-226	Anode	2
12	30-0122-227	Heat exchanger ground wire front	1
13	30-0122-229	Heat exchanger ground wire rear	1
14	30-0130-243	Bolt	6
15	30-0130-244	Bolt	8
16	30-0130-370	Plug	2

**1.5.4 FUEL SYSTEM
ASSEMBLY**

30-0114-088

 OXE DIESEL PARTS CATALOGUE

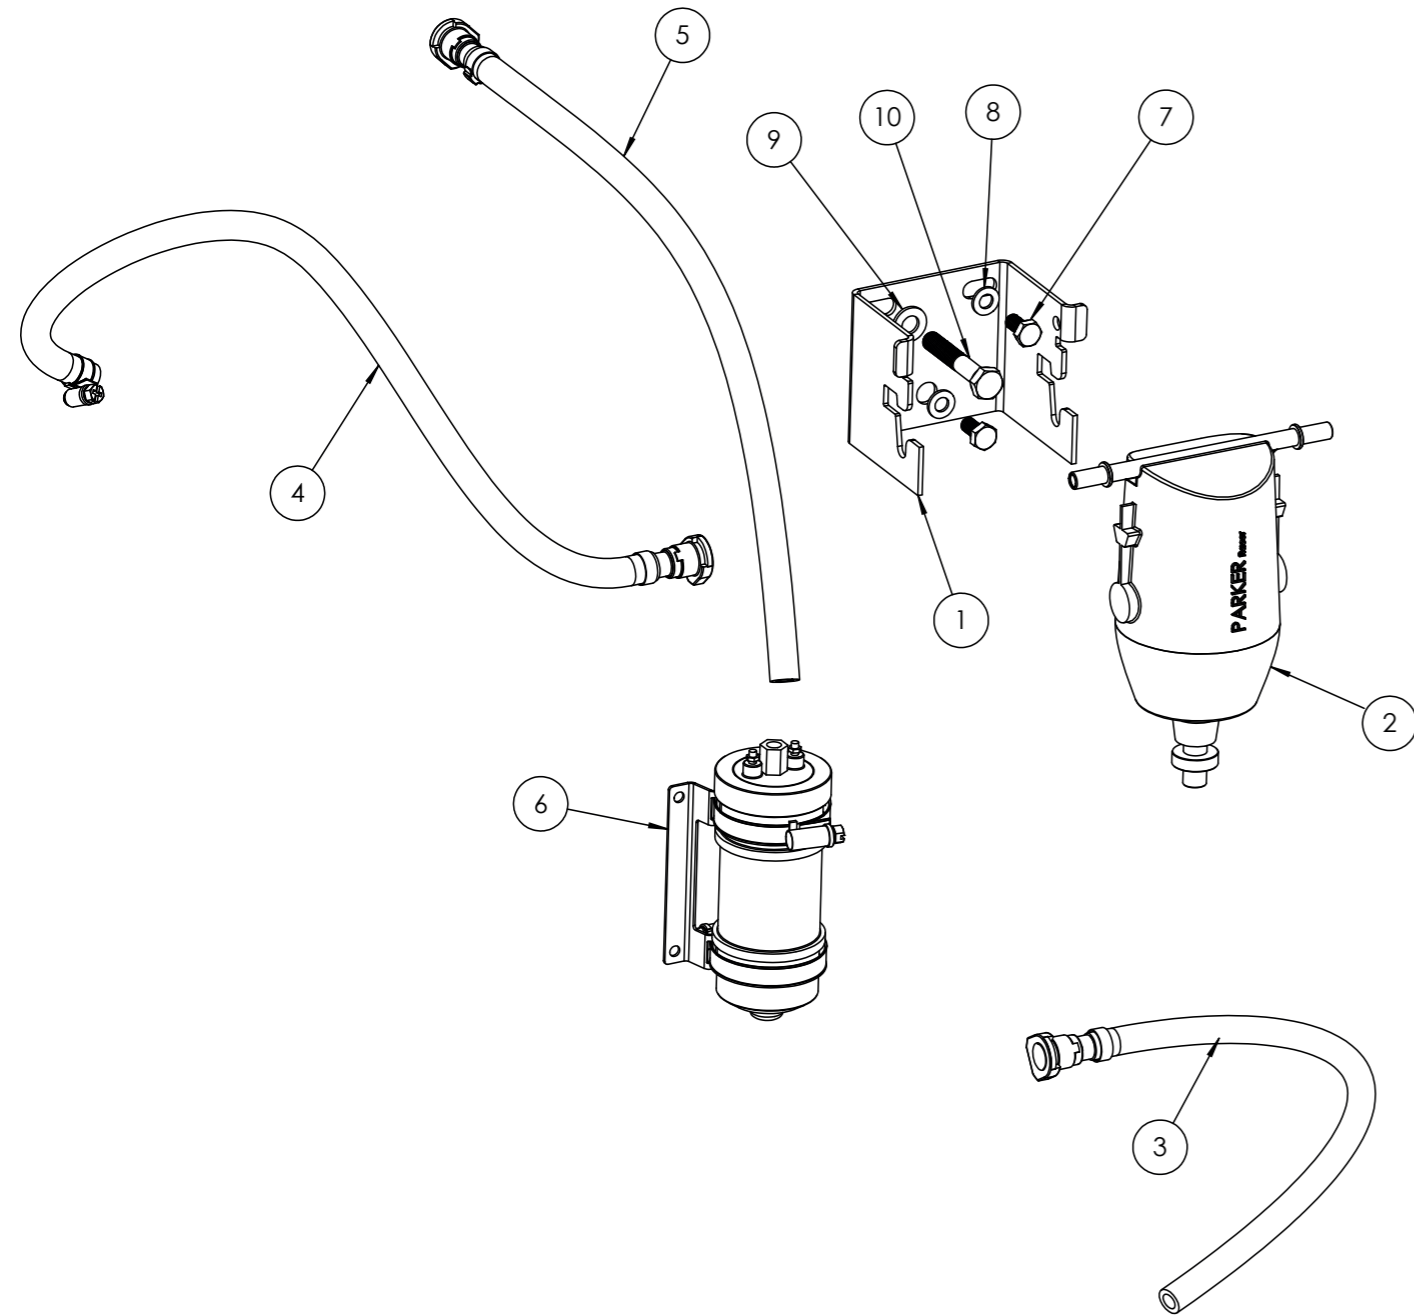

**1.5.4 FUEL SYSTEM
ASSEMBLY**

30-0114-088


OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-136	Bracket	1
2	30-0114-138	Fuel filter	1
3	30-0114-462	Hose	1
4	30-0114-463	Hose	1
5	30-0114-464	Hose	1
6	30-0114-465	External fuel pump kit	1
7	30-0130-120	Bolt	2
8	30-0130-192	Washer	2
9	30-0130-193	Washer	1
10	30-0130-361	Bolt	1

**1.5.4.1 EXTERNAL FUEL
PUMP KIT**

30-0114-465

 OXE DIESEL PARTS CATALOGUE

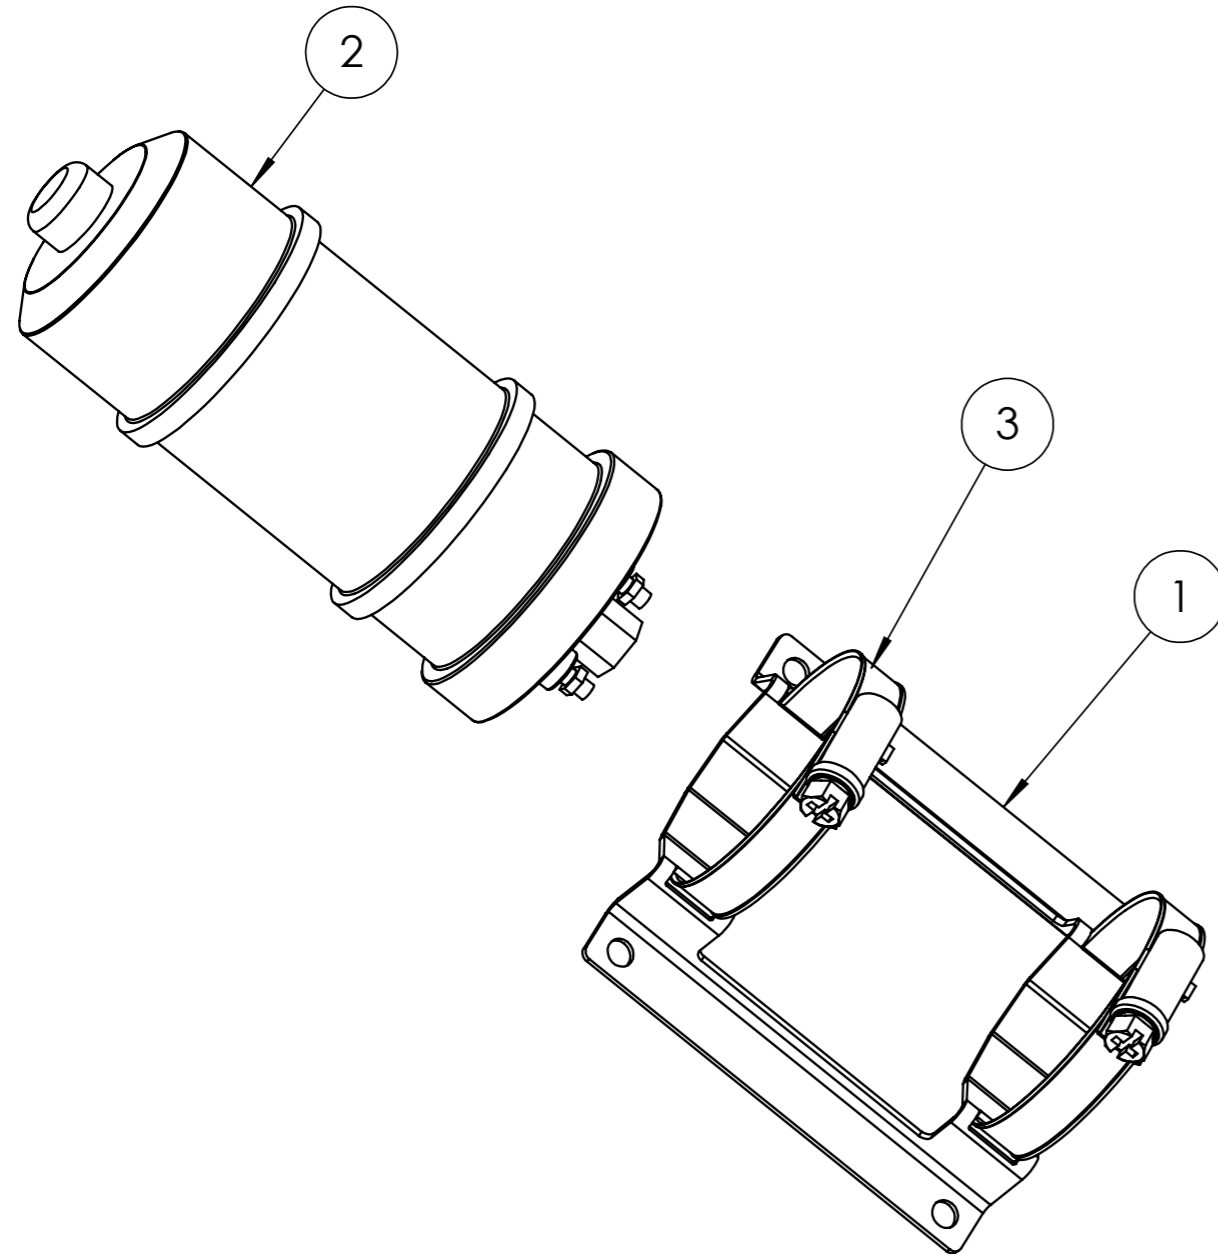

**1.5.4.1 EXTERNAL FUEL
PUMP KIT**


30-0114-465

OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-445	Bracket	1
2	30-0114-444	Fuel pump	1
3	30-0122-054	Hose clamp	2

**1.5.5 DRY SUMP
ASSEMBLY**

 30-0114-090
OXE DIESEL PARTS CATALOGUE

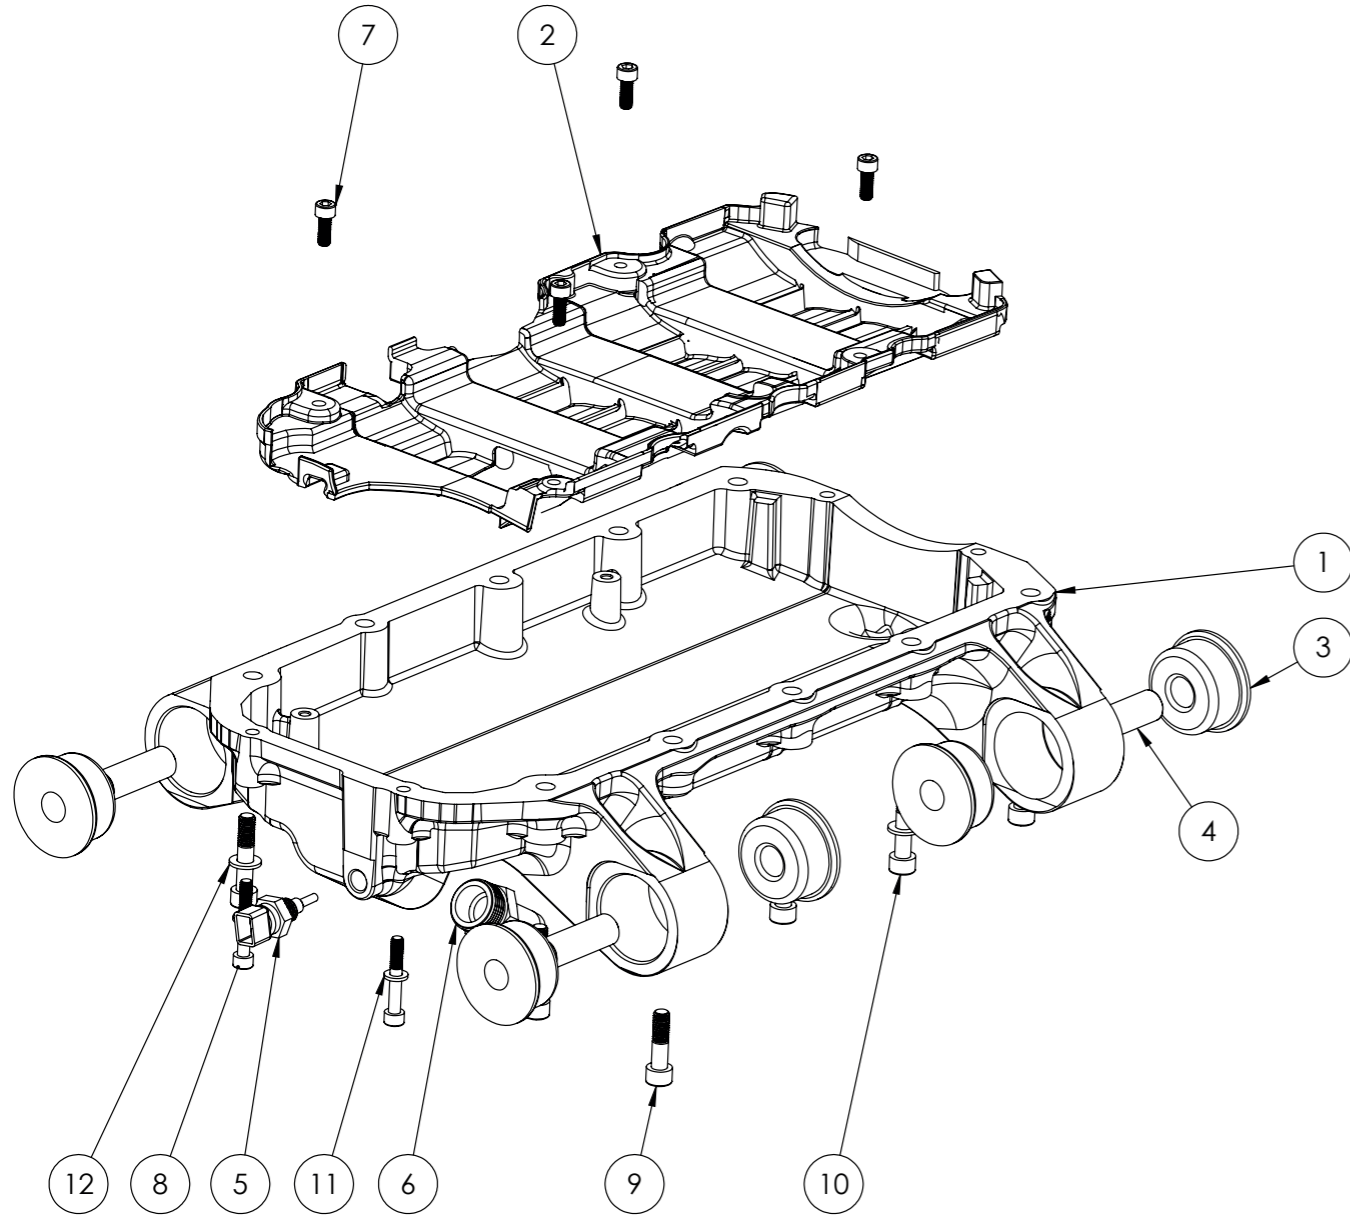


**1.5.5 DRY SUMP
ASSEMBLY**

30-0114-090
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-022	Dry sump	1
2	30-0114-092	Oil pan scraper	1
3	30-0114-206	Bushing, engine mount	8
4	30-0114-207	Spacer	4
5	30-0116-080	Sensor, oil temp	1
6	30-0122-147	Connector, hose	1
7	30-0130-020	Bolt	4
8	30-0130-025	Bolt	4
9	30-0130-043	Bolt	1
10	30-0130-057	Bolt	9
11	30-0130-191	Washer	4
12	30-0130-192	Washer	9

**1.5.6 STARTER MOTOR
ASSEMBLY**

 30-0114-094
OXE DIESEL PARTS CATALOGUE

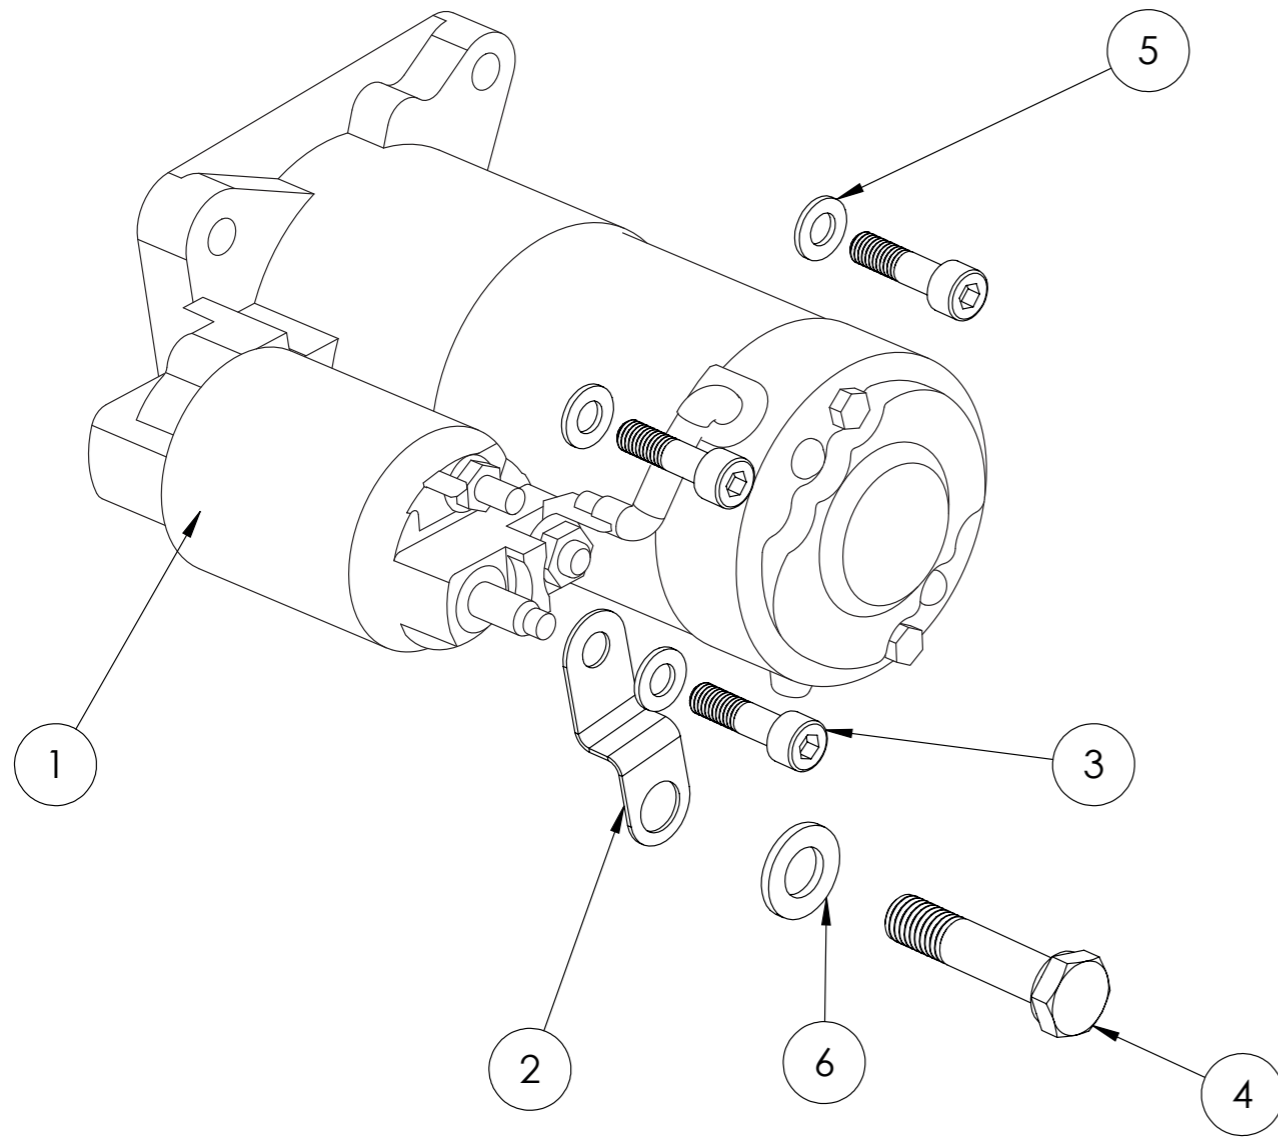

**1.5.6 STARTER MOTOR
ASSEMBLY**

30-0114-094
OXE DIESEL PARTS CATALOGUE


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-019	Starter motor	1
2	30-0116-091	Ground plate, starter motor	1
3	30-0130-043	Bolt	3
4	30-0130-167	Bolt	1
5	30-0130-192	Washer	3
6	30-0130-194	Washer	1

1.5.7 ALTERNATOR ASSEMBLY

30-0114-095
OXE DIESEL PARTS CATALOGUE

1.5.7 ALTERNATOR ASSEMBLY

 
30-0114-095
OXE DIESEL PARTS CATALOGUE

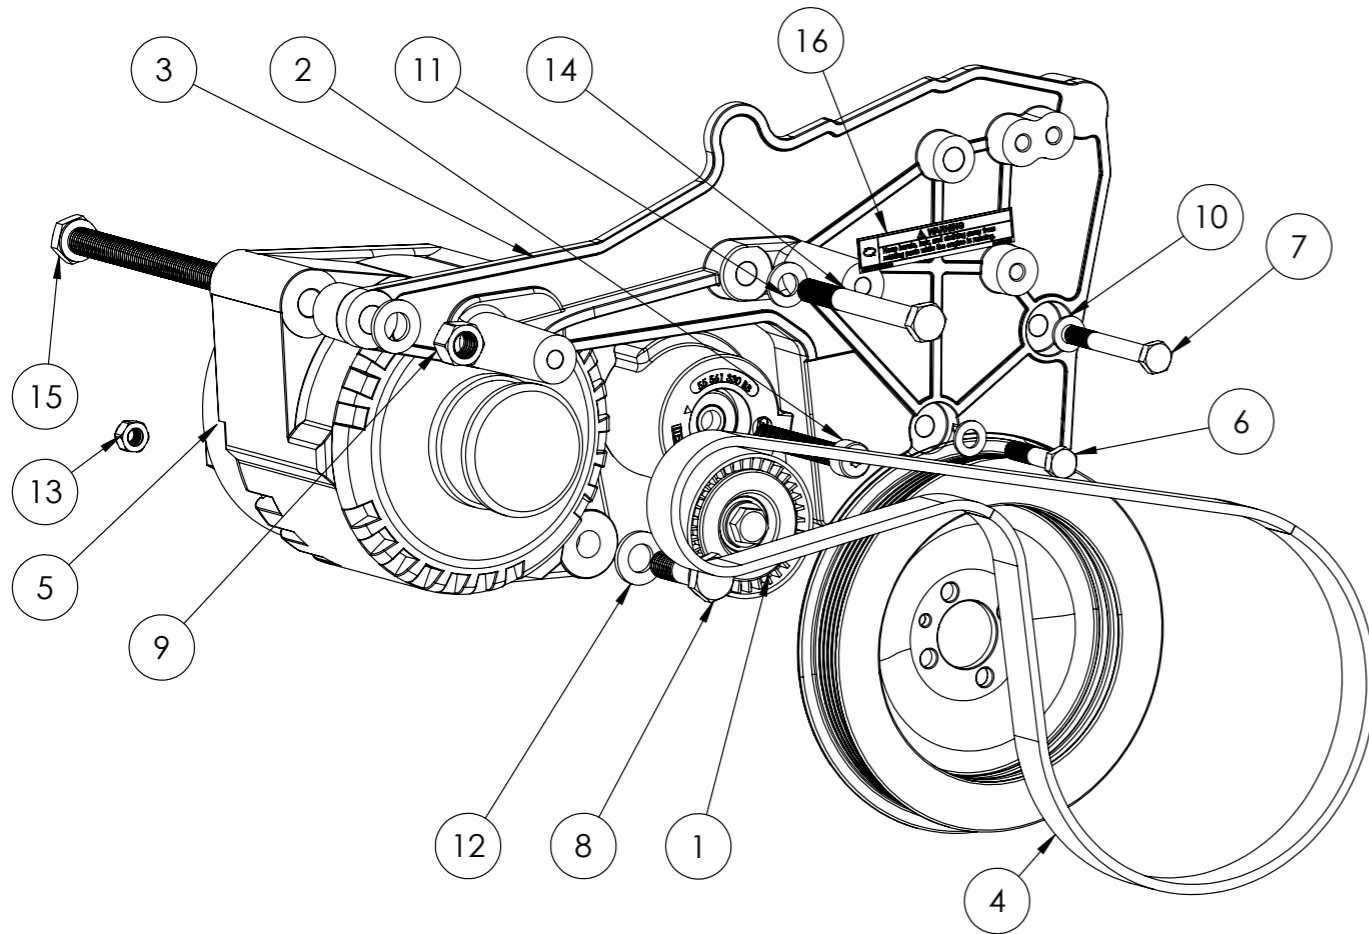

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-072	Tensioner	1
2	30-0114-299	Bolt	1
3	30-0114-389	Lower timing belt cover	1
4	30-0114-426	Belt	1
5	30-0116-131	Alternator	1
6	30-0130-125	Bolt	1
7	30-0130-134	Bolt	1
8	30-0130-164	Bolt	1
9	30-0130-184	Nut	1
10	30-0130-192	Washer	2
11	30-0130-193	Washer	1
12	30-0130-194	Washer	2
13	30-0130-262	Nut	1
14	30-0130-362	Bolt	1
15	30-0130-363	Bolt	1
16	30-0300-004	Rotation warning label	1

1.5.8 ENGINE BLOCK ASSEMBLY

 30-0114-100
OXE DIESEL PARTS CATALOGUE

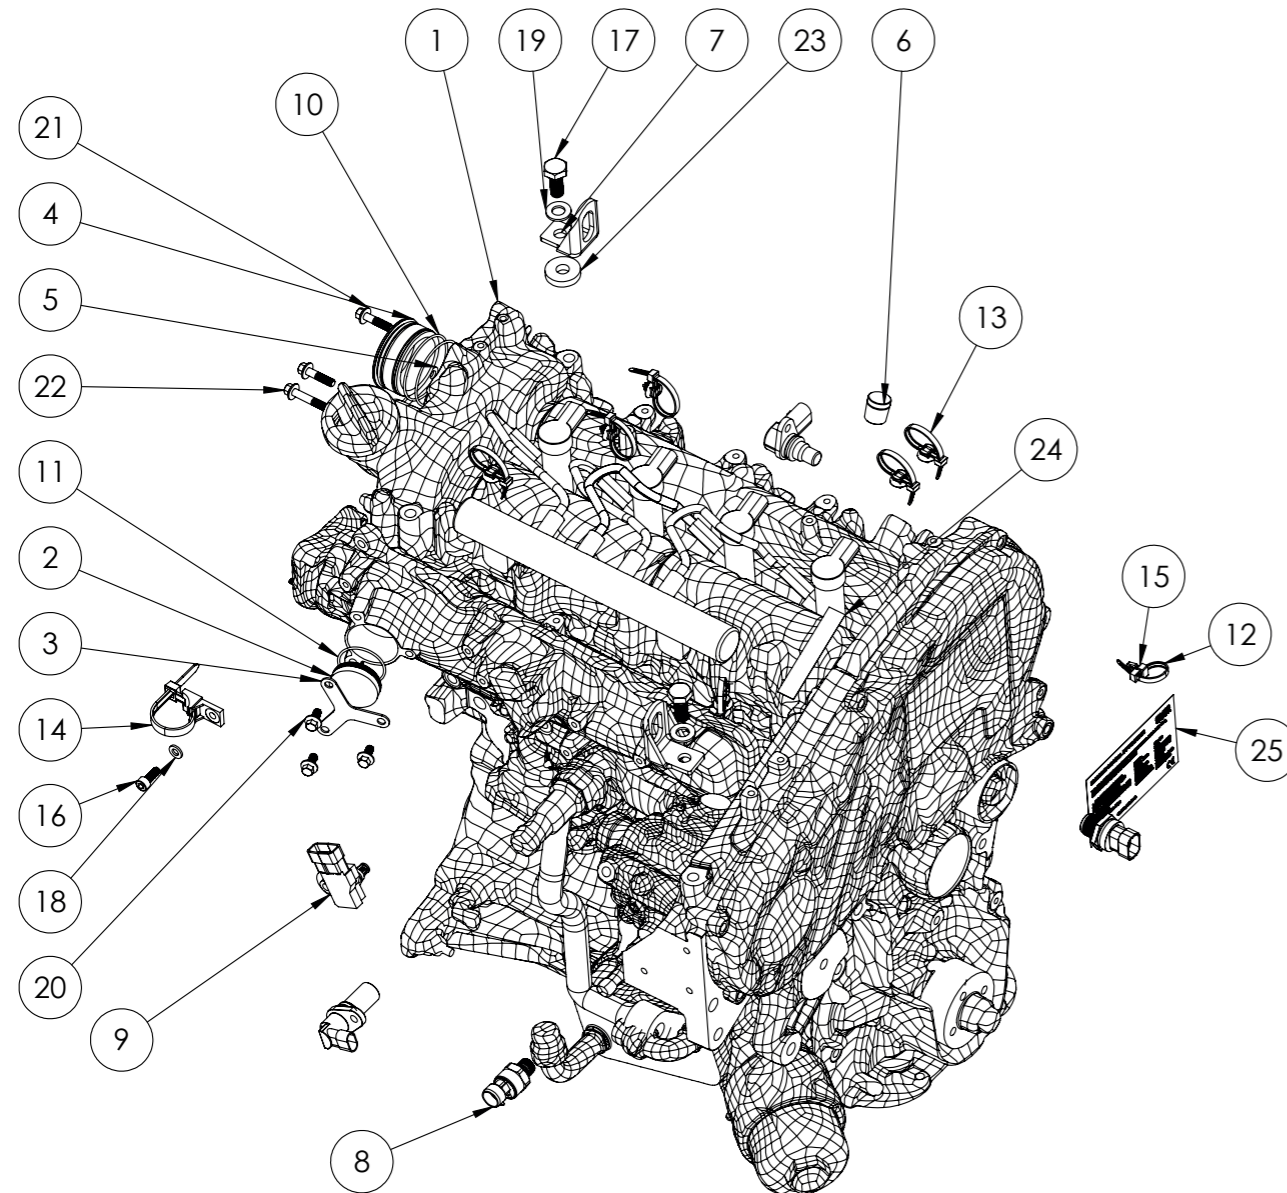

1.5.8 ENGINE BLOCK ASSEMBLY

30-0114-100
OXE DIESEL PARTS CATALOGUE


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-002	Engine block	1
2	30-0114-211	Plug	1
3	30-0114-212	Plug retainer	1
4	30-0114-213	Cover	1
5	30-0114-214	Cover retainer	1
6	30-0114-350	Plug	1
7	30-0114-355	Lifting eye	2
8	30-0116-050	Sensor	1
9	30-0116-904	Sensor	1
10	30-0121-012	O-ring	2
11	30-0121-025	O-ring	1
12	30-0122-246	Cable	1
13	30-0122-248	Pine clip	7
14	30-0122-249	P-clip	1
15	30-0122-252	Arrow-head clip	1
16	30-0130-020	Bolt	2
17	30-0130-153	Bolt	2
18	30-0130-191	Washer	1
19	30-0130-193	Washer	2
20	30-0130-240	Bolt	3
21	30-0130-243	Bolt	2
22	30-0130-246	Bolt	1
23	30-0130-349	Washer	1
24	30-0300-006	Read manual label	1
25	30-0300-010	Emission Label	1

**1.5.9 FLYWHEEL
ASSEMBLY**


30-0114-101
OXE DIESEL PARTS CATALOGUE

**1.5.9 FLYWHEEL
ASSEMBLY**

 30-0114-101
OXE DIESEL PARTS CATALOGUE

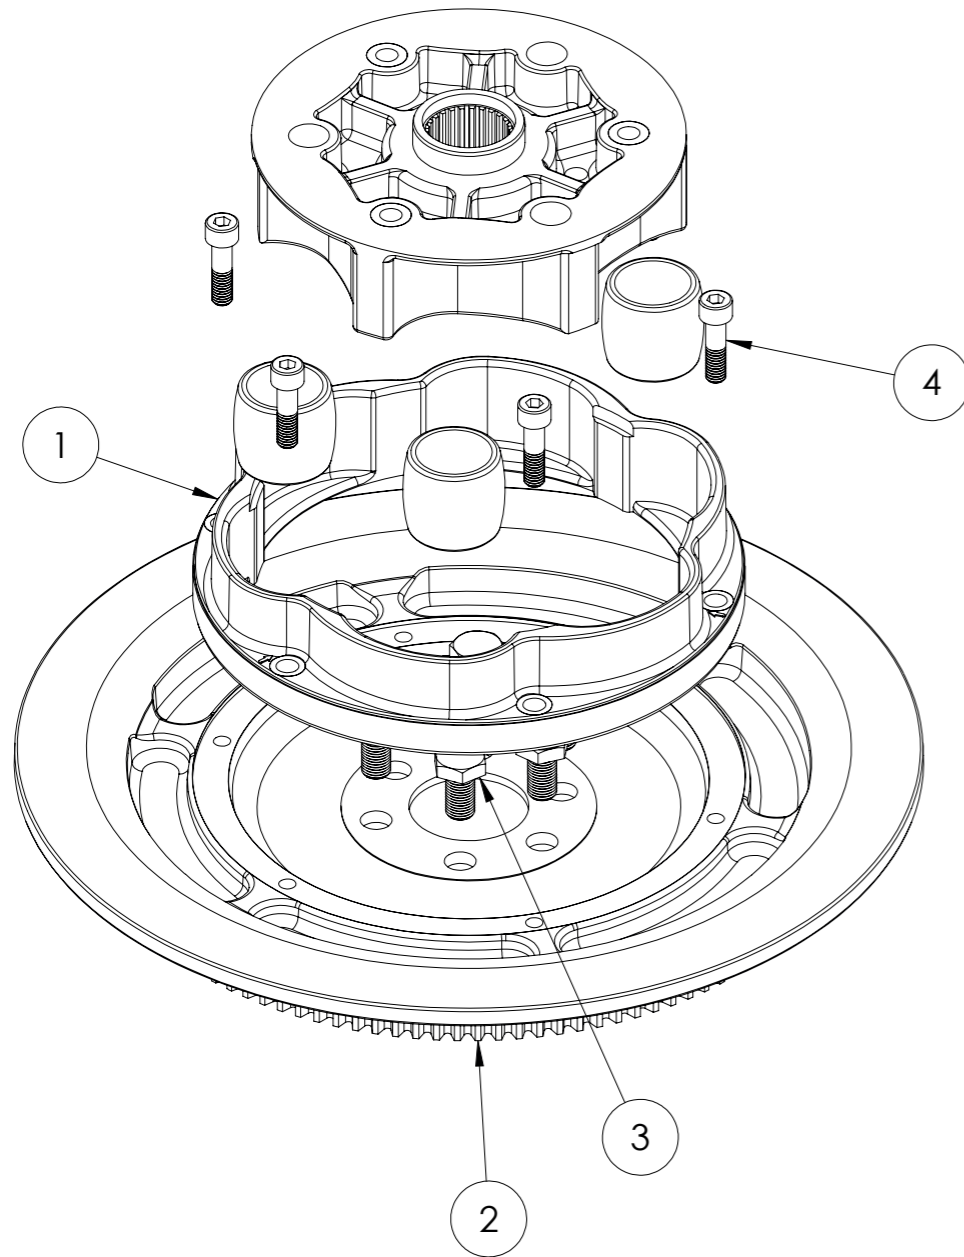


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-058	Flex Coupling	1
2	30-0114-302	Flywheel	1
3	30-0114-468	Bolt	6
4	30-0130-043	Bolt	6

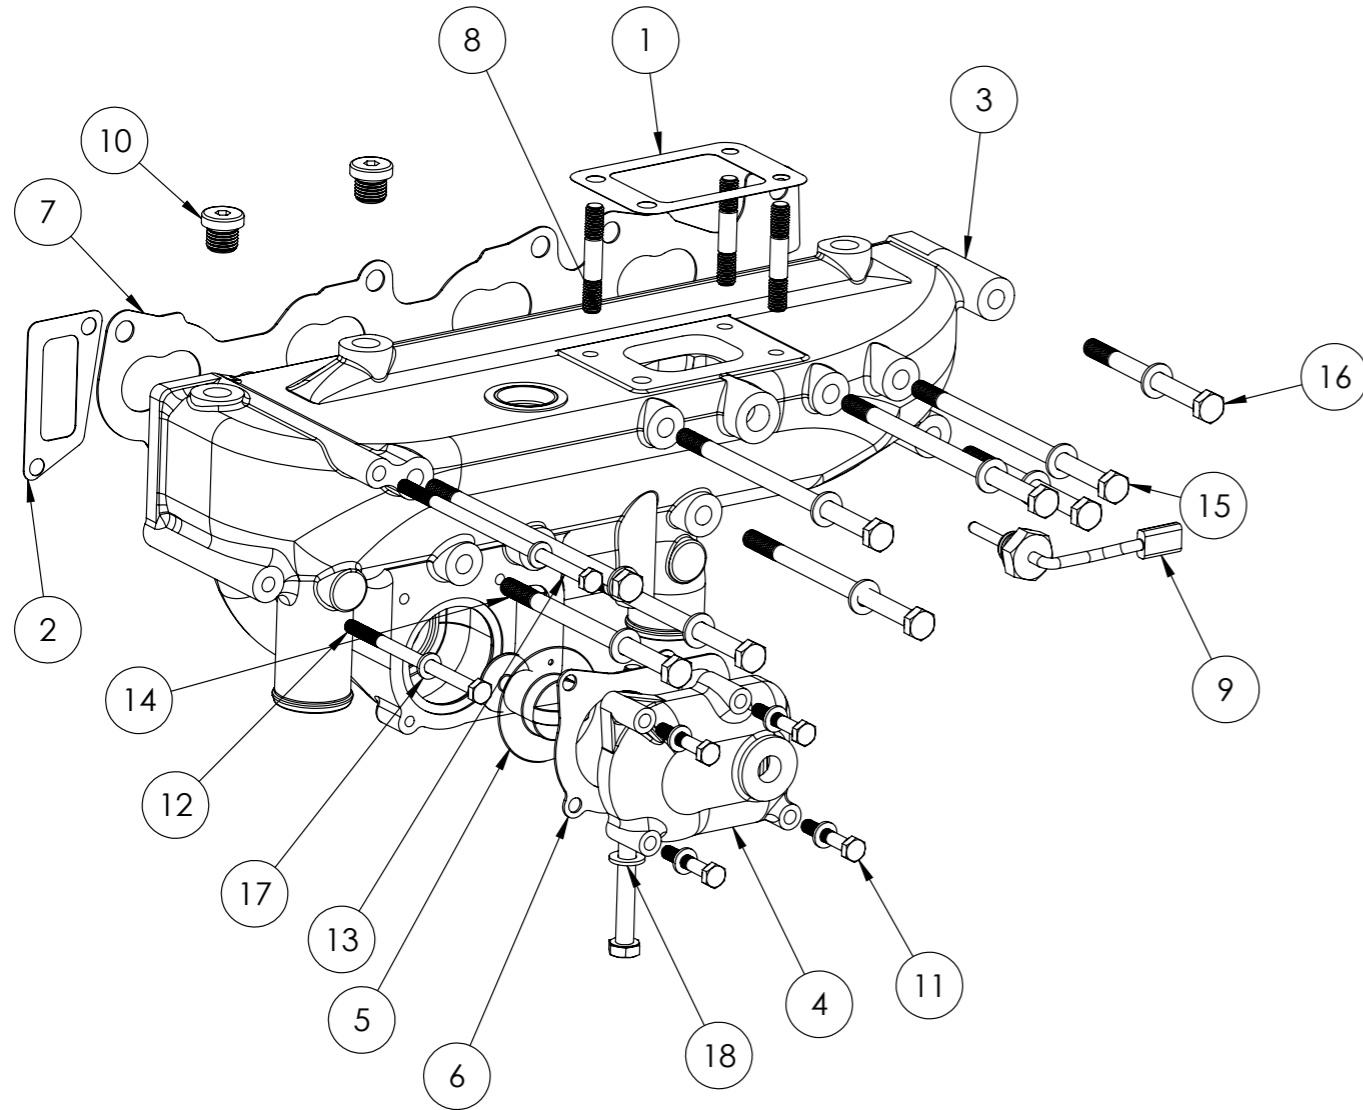 

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-076	Gasket, turbo	1
2	30-0114-106	Gasket	1
3	30-0114-151	Manifold, water cooled	1
4	30-0114-222	Thermostat housing, exhaust manifold	1
5	30-0114-224	Thermostat	1
6	30-0114-258	Gasket	1
7	30-0114-263	Gasket	1
8	30-0114-296	Stud bolt	3
9	30-0116-053	Sensor, EGT	1
10	30-0122-136	Plug	2
11	30-0130-104	Bolt	4
12	30-0130-110	Bolt	1
13	30-0130-112	Bolt	1
14	30-0130-131	Bolt	4
15	30-0130-132	Bolt	4
16	30-0130-133	Bolt	2
17	30-0130-191	Washer	6
18	30-0130-192	Washer	10

**1.5.11 CRANKCASE
VENTILATION ASSEMBLY**

 30-0114-117
OXE DIESEL PARTS CATALOGUE

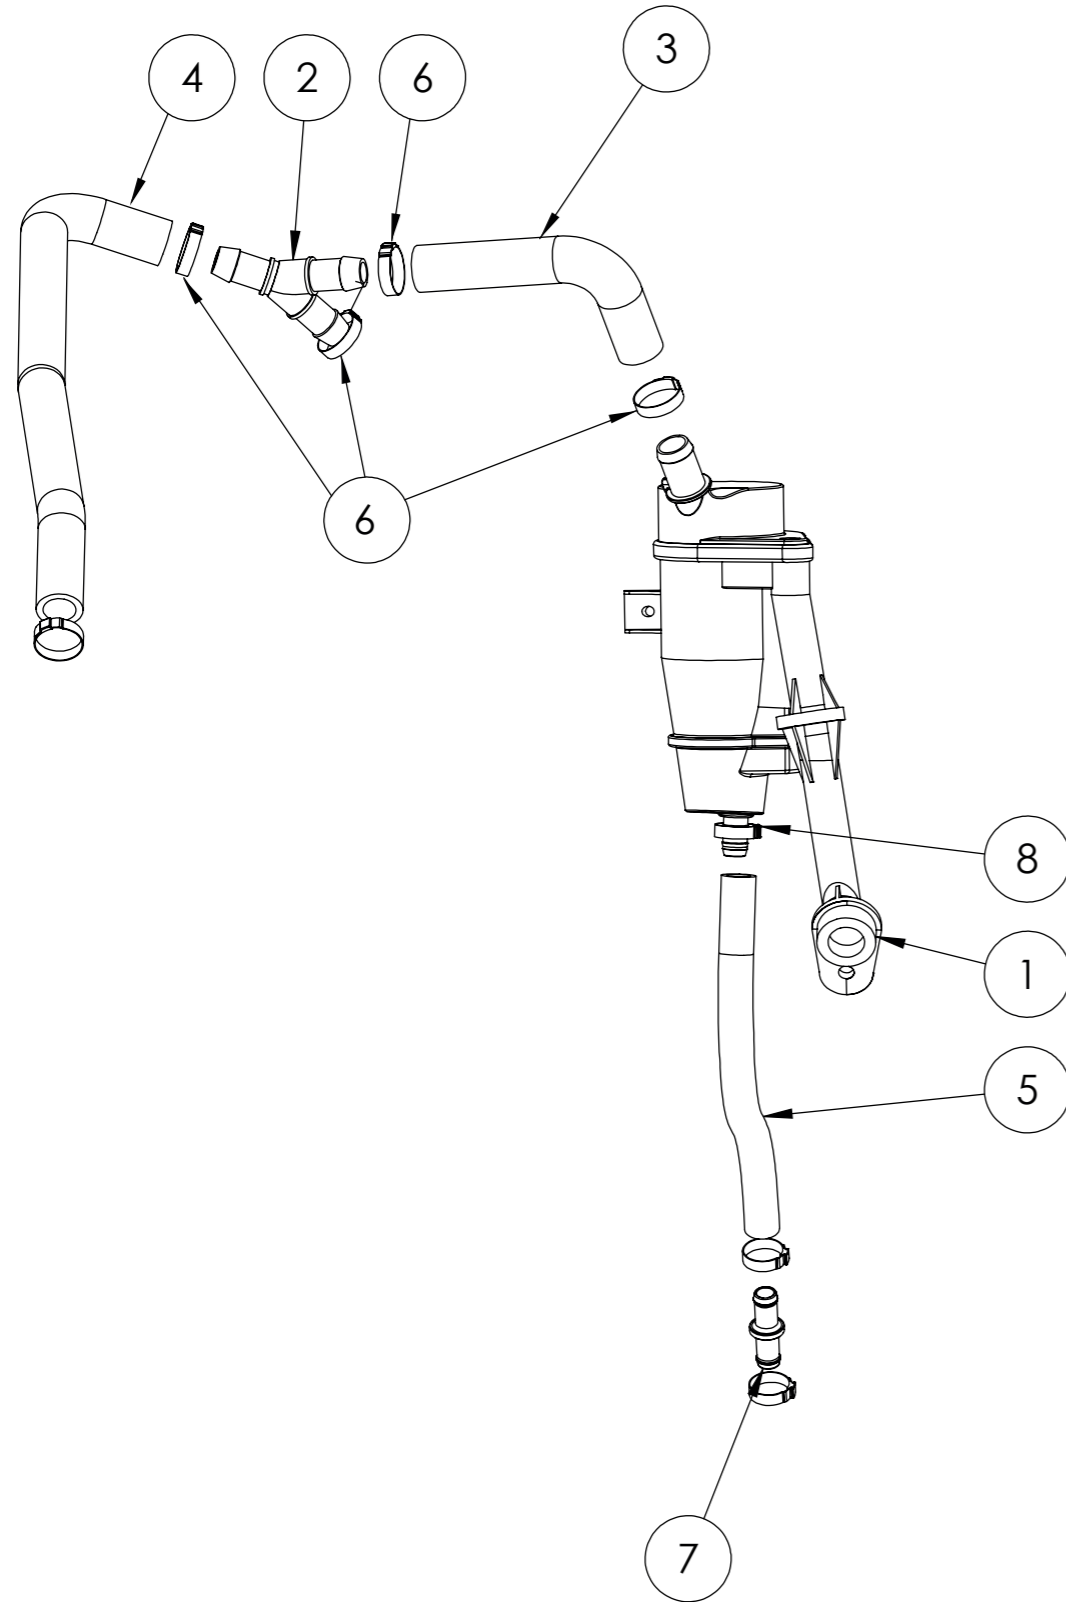

**1.5.11 CRANKCASE
VENTILATION ASSEMBLY**

30-0114-117
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-071	Oil separator, crankcase ventilation	1
2	30-0114-293	Y-junction, breather	1
3	30-0114-294	Breather hose, oil separator	1
4	30-0114-295	Breather hose, junction - inlet	1
5	30-0114-321	Hose, crankcase ventilation oil return	1
6	30-0122-113	Hose clamp	5
7	30-0122-124	Hose fitting	1
8	30-0122-139	Hose clamp	3

1.6 ELECTRIC SYSTEM

 
30-0116-001

OXE DIESEL PARTS CATALOGUE

1.6 ELECTRIC SYSTEM

30-0116-001

OXE DIESEL PARTS CATALOGUE

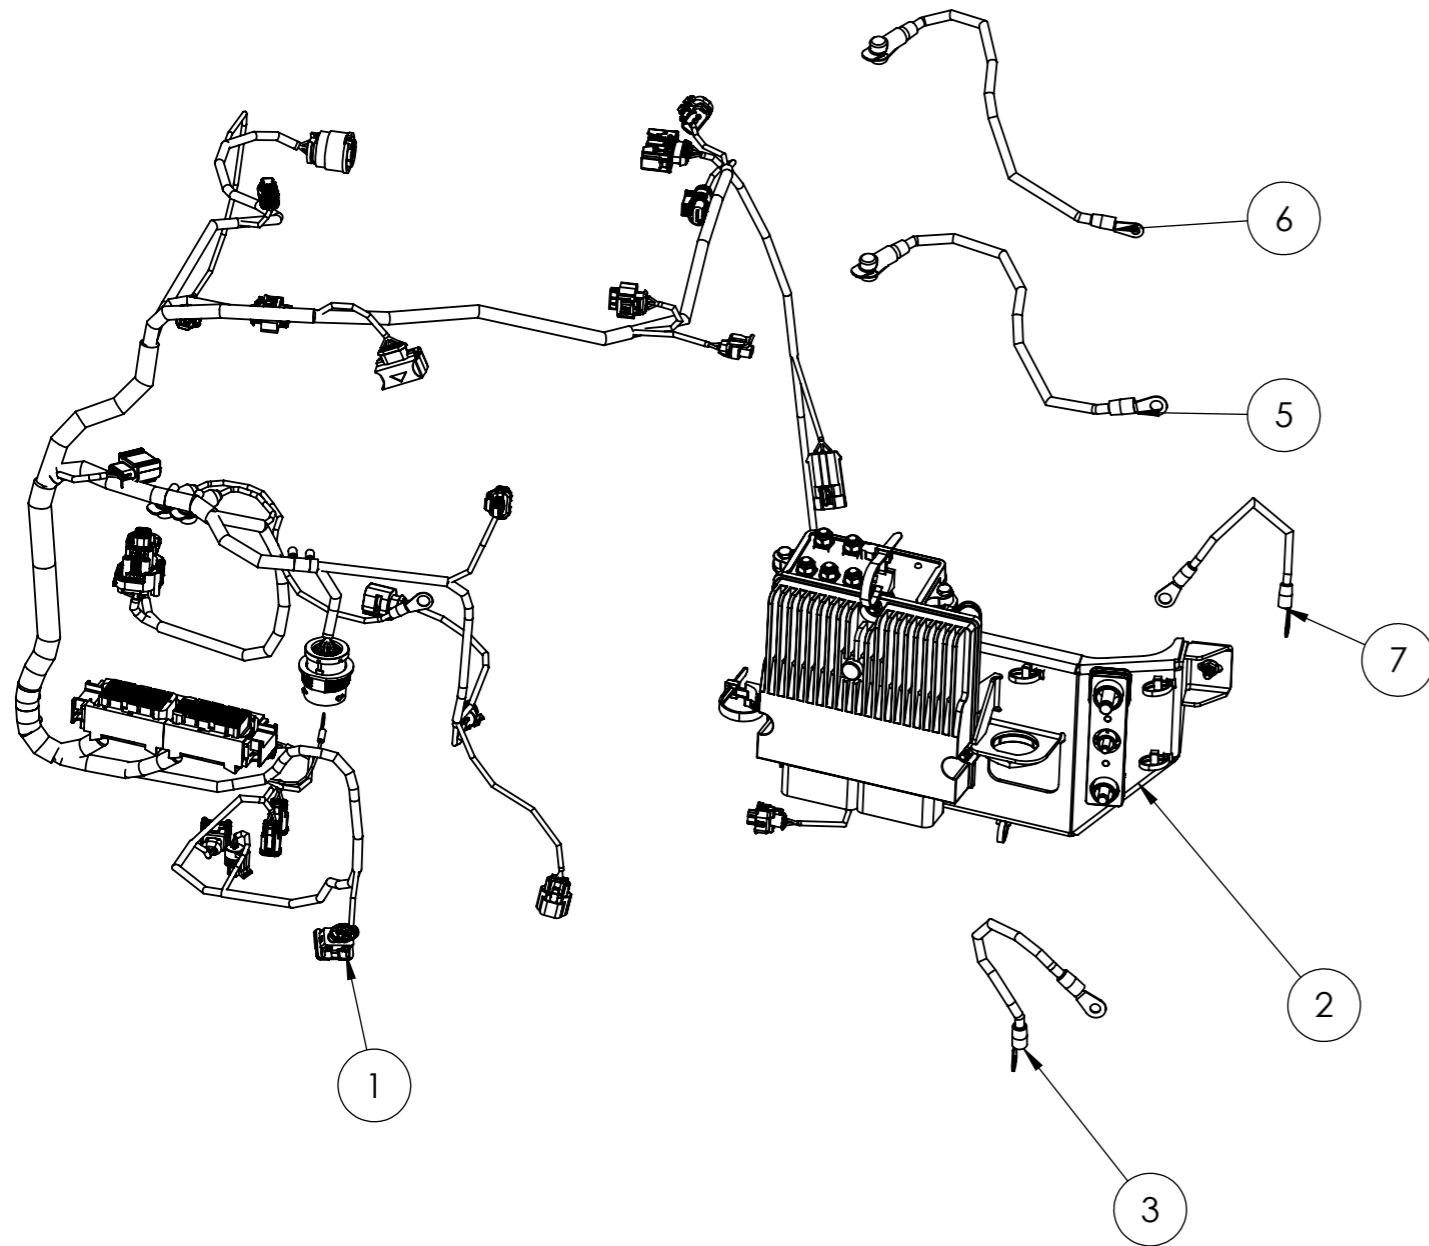


PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	30-0116-026	Engine harness	1
2	30-0116-800	ECU assembly	1
3	30-0116-956	Starter motor supply	1
4	30-0116-957	Engine block GND	1
5	30-0116-958	PSU GND	1
6	30-0116-959	PSU supply	1
7	30-0116-961	Alternator supply	1

1.6.1 ECU ASSEMBLY

30-0116-800

 OXE DIESEL PARTS CATALOGUE

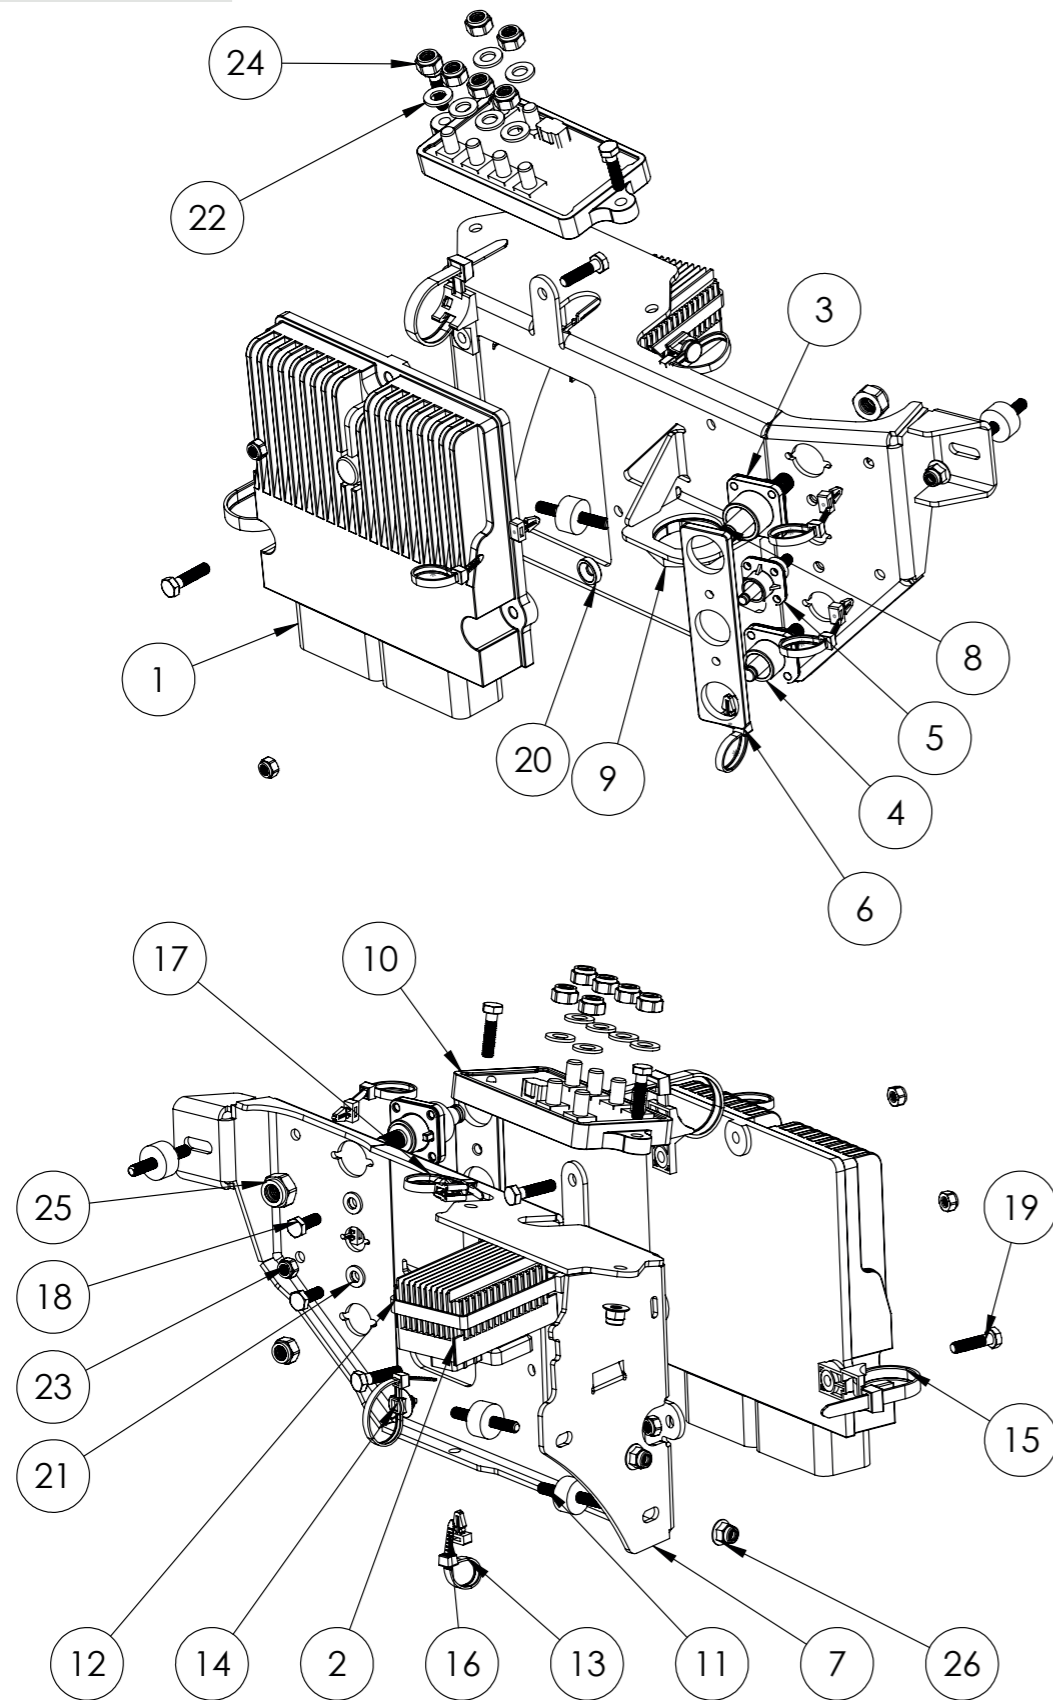

1.6.1 ECU ASSEMBLY

30-0116-800


OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	30-0116-022	ECU	1
2	30-0116-039	GPCM	1
3	30-0116-186	M10 power connector	1
4	30-0116-187	M8 power connector	1
5	30-0116-188	M6 power connector	1
6	30-0116-953	Connector retainer	1
7	30-0116-954	ECU bracket	1
8	30-0116-978	Washer	1
9	30-0116-979	Nut	1
10	30-0116-988	PSU cpl	1
11	30-0122-104	Vibration damper	3
12	30-0122-244	Cable tie	1
13	30-0122-246	Cable tie	4
14	30-0122-248	Pine clip	1
15	30-0122-249	P-clip	2
16	30-0122-252	Arrow-head clip	4
17	30-0122-258	Edge/swivel clip	1
18	30-0130-100	Bolt	2
19	30-0130-102	Bolt	5
20	30-0130-158	Plastic washer	1
21	30-0130-191	Washer	2
22	30-0130-192	Washer	6
23	30-0130-261	Nut	4
24	30-0130-262	Nut	7
25	30-0130-263	Nut	1
26	30-0130-270	Locking nut	5

1.7 COWLING ASSEMBLY

30-0117-001

 OXE DIESEL PARTS CATALOGUE

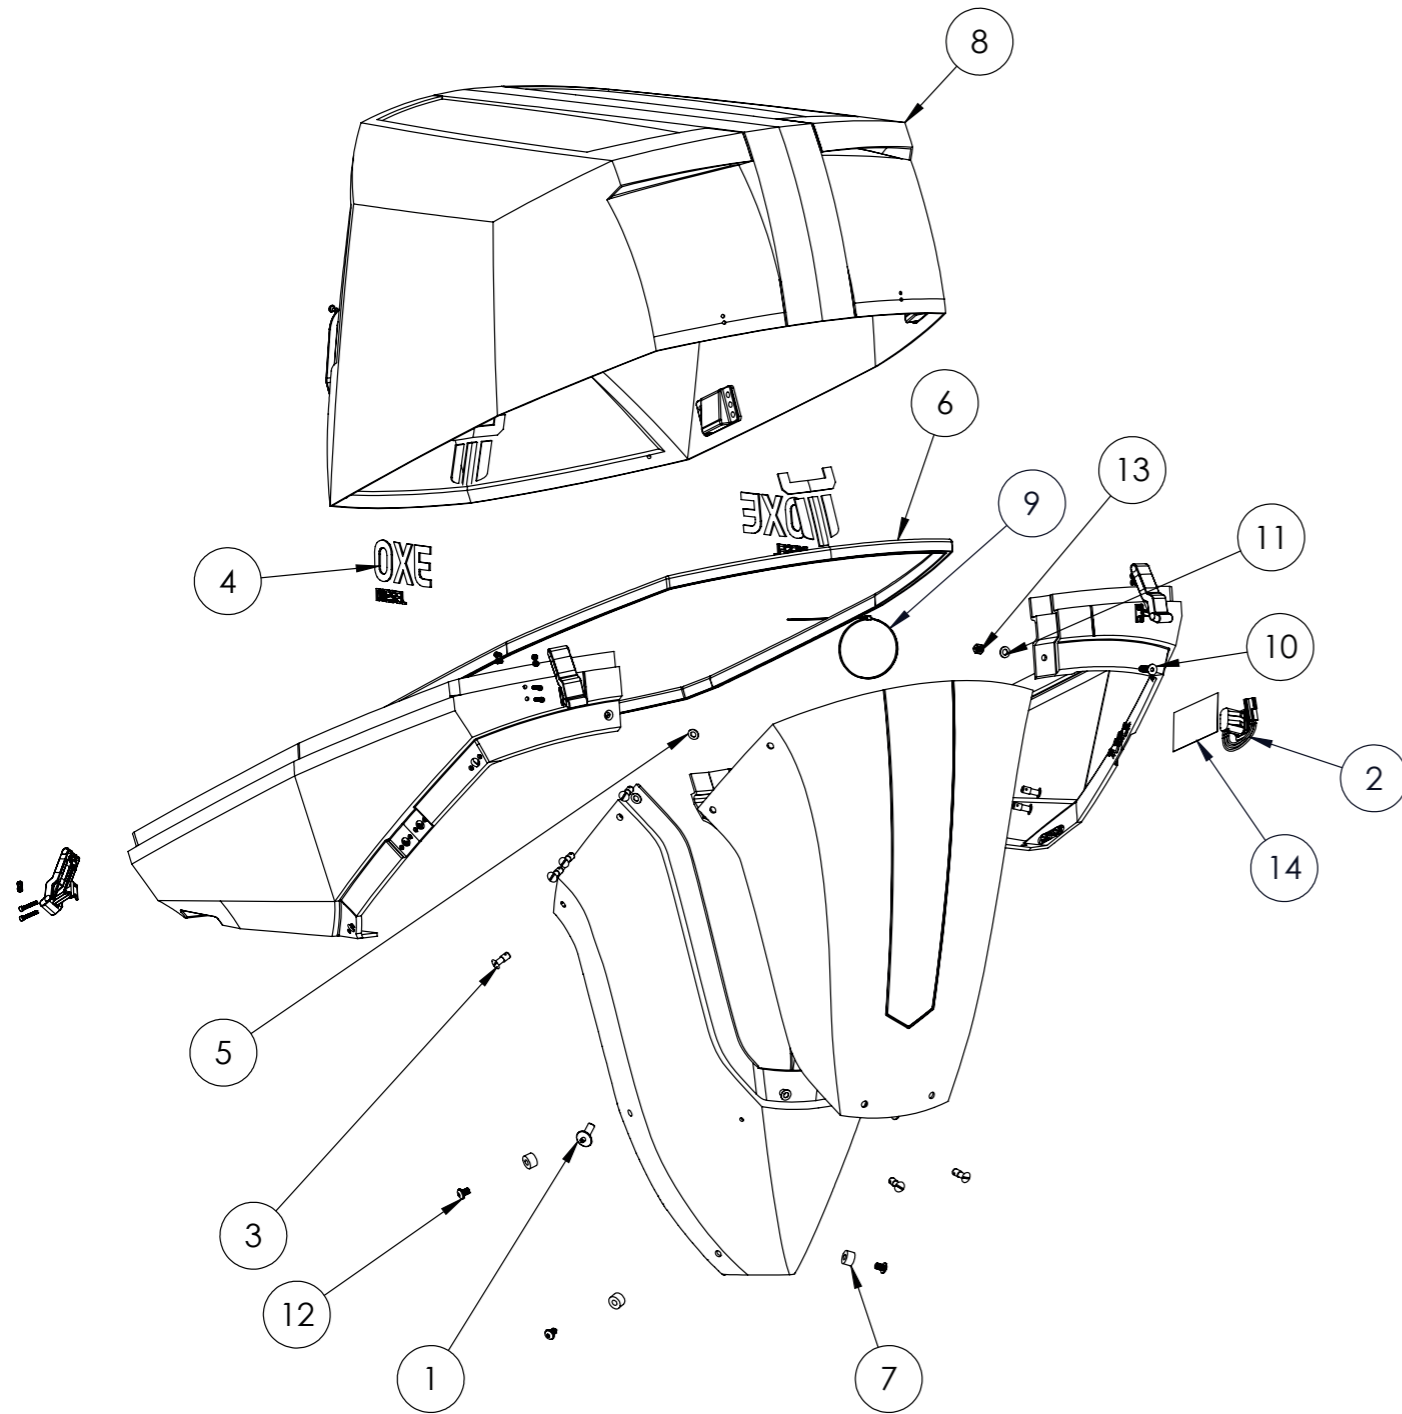

1.7 COWLING ASSEMBLY

30-0117-001


OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0110-070	Nipple	1
2	30-0116-073	PTT switch	1
3	30-0117-026	Bolt	10
4	30-0117-035	Cowl decal kit	1
5	30-0117-054	Washer	10
6	30-0117-060	Seal	1
7	30-0117-087	Distance	4
8	30-0117-097	Cowl set	1
9	30-0122-244	Cable tie	1
10	30-0130-135	Bolt	1
11	30-0130-192	Washer	1
12	30-0130-211	Bolt	4
13	30-0130-262	Nut	1
14	30-0300-009	Read manual small label	1

1.7.1 COWL SET

30-0117-097

 OXE DIESEL PARTS CATALOGUE

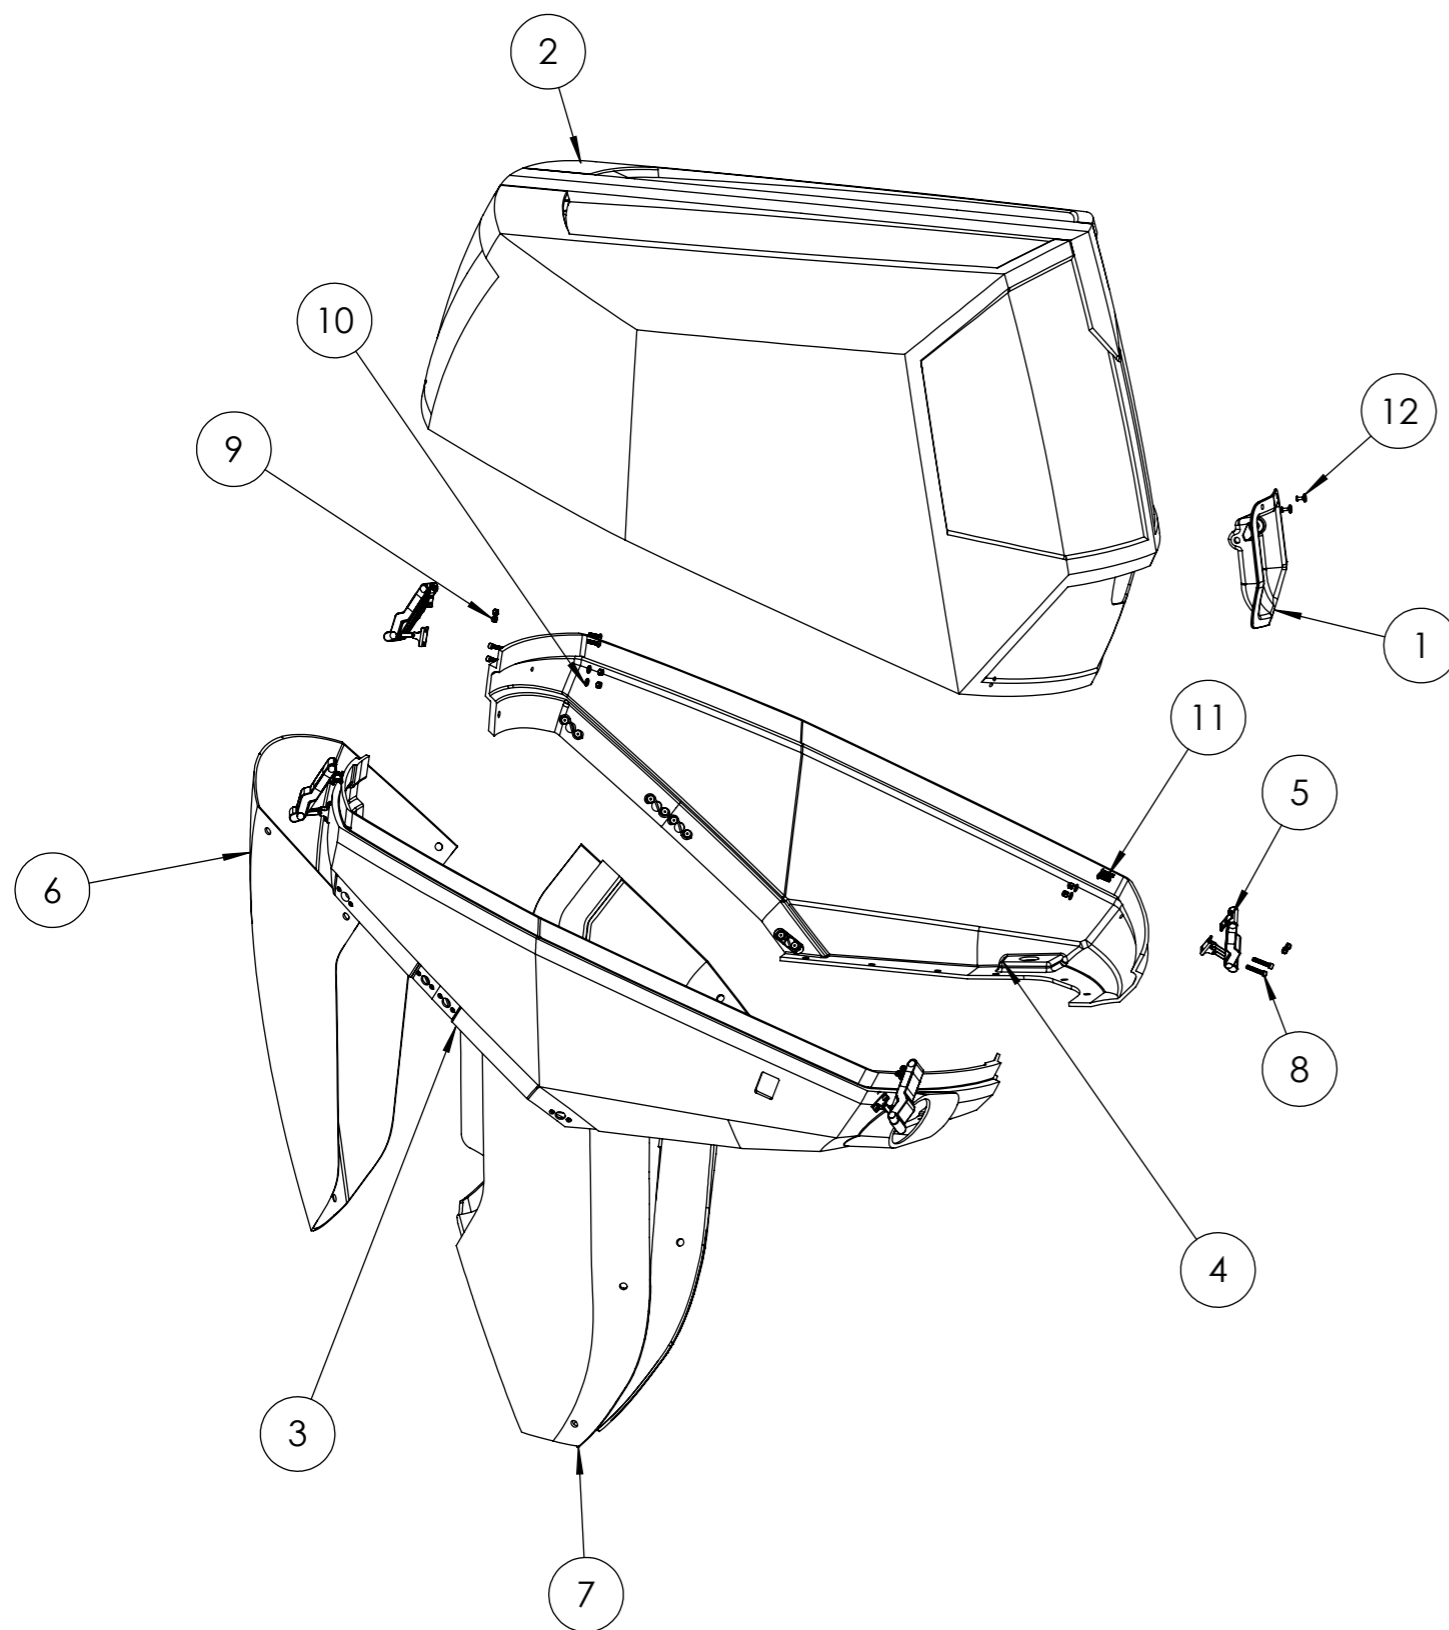

1.7.1 COWL SET


30-0117-097

OXE DIESEL PARTS CATALOGUE


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0117-020	Cowl handle	1
2	30-0117-043	Top cowl cpl	1
3	30-0117-045	Middle cowl right cpl	1
4	30-0117-047	Middle cowl left cpl	1
5	30-0117-055	Cowl latch	4
6	30-0117-085	Belt cowl cpl	1
7	30-0117-086	Back cowl cpl	1
8	30-0130-098	Bolt	8
9	30-0130-099	Nut	16
10	30-0130-113	Washer	8
11	30-0130-119	Bolt	8
12	30-0130-342	Rivet	2

INTERNAL ENGINE PARTS


ASSEMBLY LIST	
ITEM NO.	DESCRIPTION
1.8.1	Camshaft assembly
1.8.2	Crankshaft assembly
1.8.3	Cylinder head assembly
1,8,4	Timing belt assembly
1.8.5	Engine oil system assembly
1.8.6	Oil pump assembly
1.8.7	Glow plugs and injectors

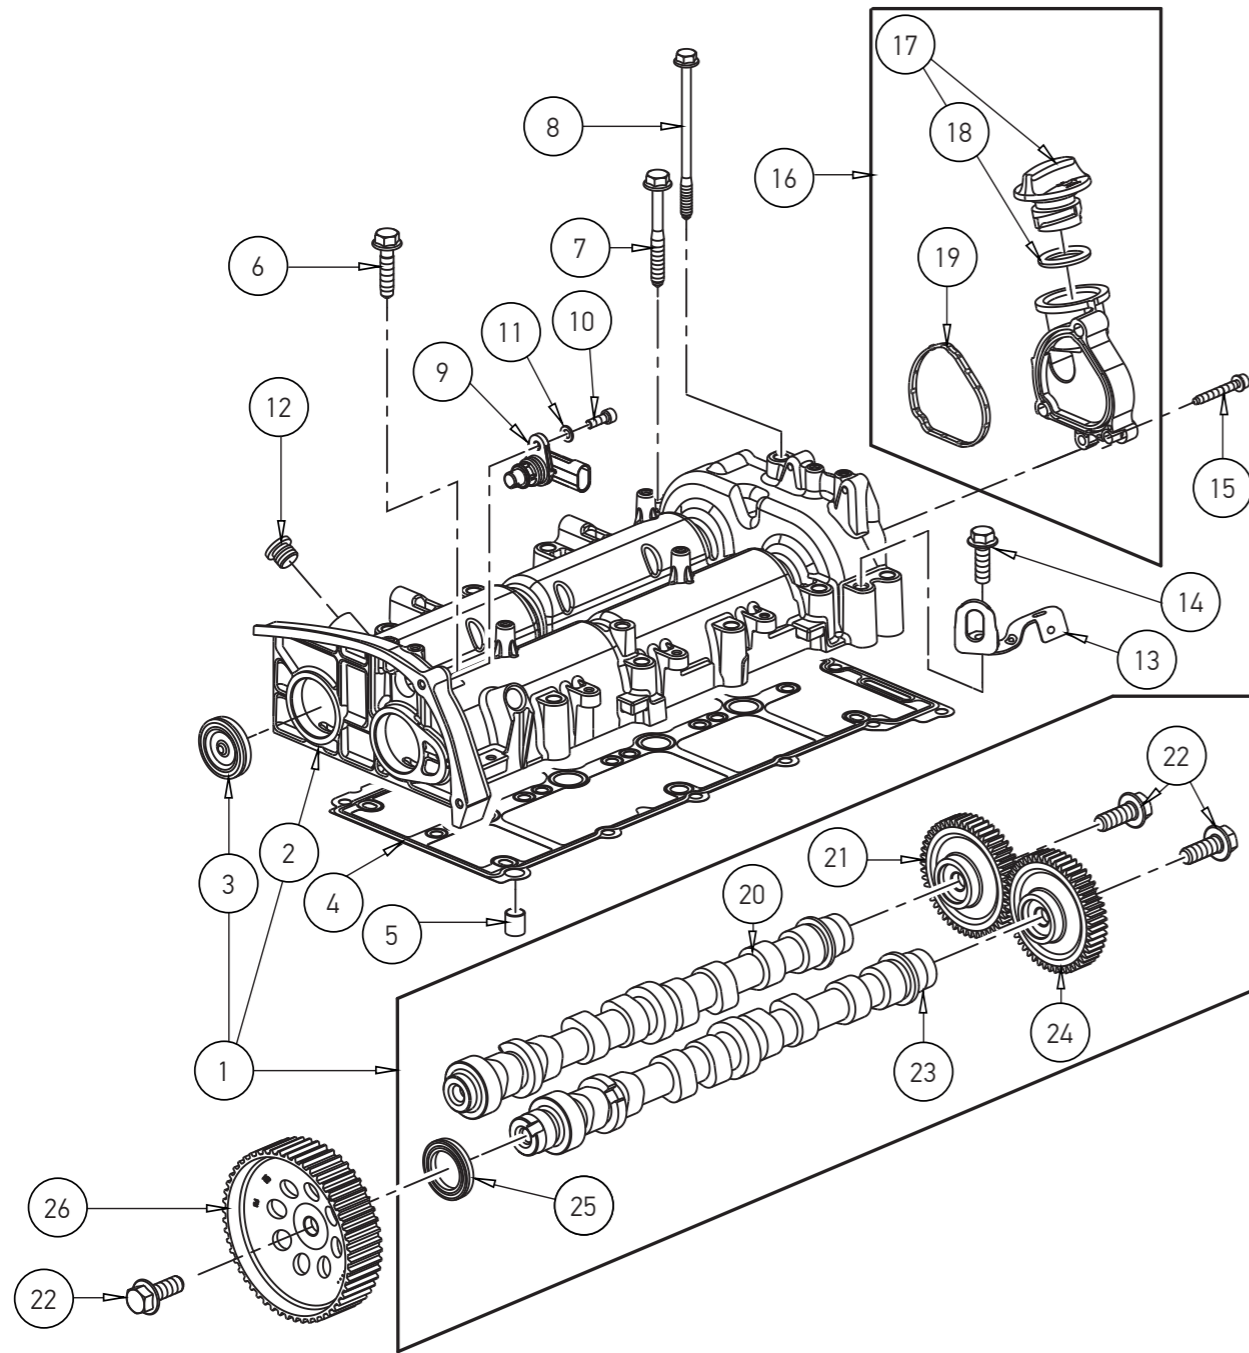 

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0170-001	Camshaft assembly	1
2	30-0170-002	Camshaft case	1
3	30-0170-003	Plug	1
4	30-0170-004	Gasket	1
5	30-0170-005	Sleeve	2
6	30-0170-006	Screw	5
7	30-0170-007	Screw	1
8	30-0170-008	Screw	1
9	30-0170-009	Sensor, camshaft position	1
10	30-0170-010	Screw	1
11	30-0170-011	Washer	1
12	30-0170-012	Plug	1
13	30-0170-013	Schackle	1
14	30-0170-014	Screw	1
16	30-0170-015	Oil filter housing	1
17	30-0170-016	Cap, oil housing	1
18	30-0170-017	Gasket	1
19	30-0170-018	Gasket	1
15	30-0170-019	Screw	3
20	30-0170-020	Camshaft	1
21	30-0170-021	Sprocket	1
22	30-0170-022	Screw	4
23	30-0170-023	Camshaft exhaust	1
24	30-0170-024	Sprocket exhaust	1
25	30-0170-025	Seal	1
26	30-0170-080	Sprocket	2

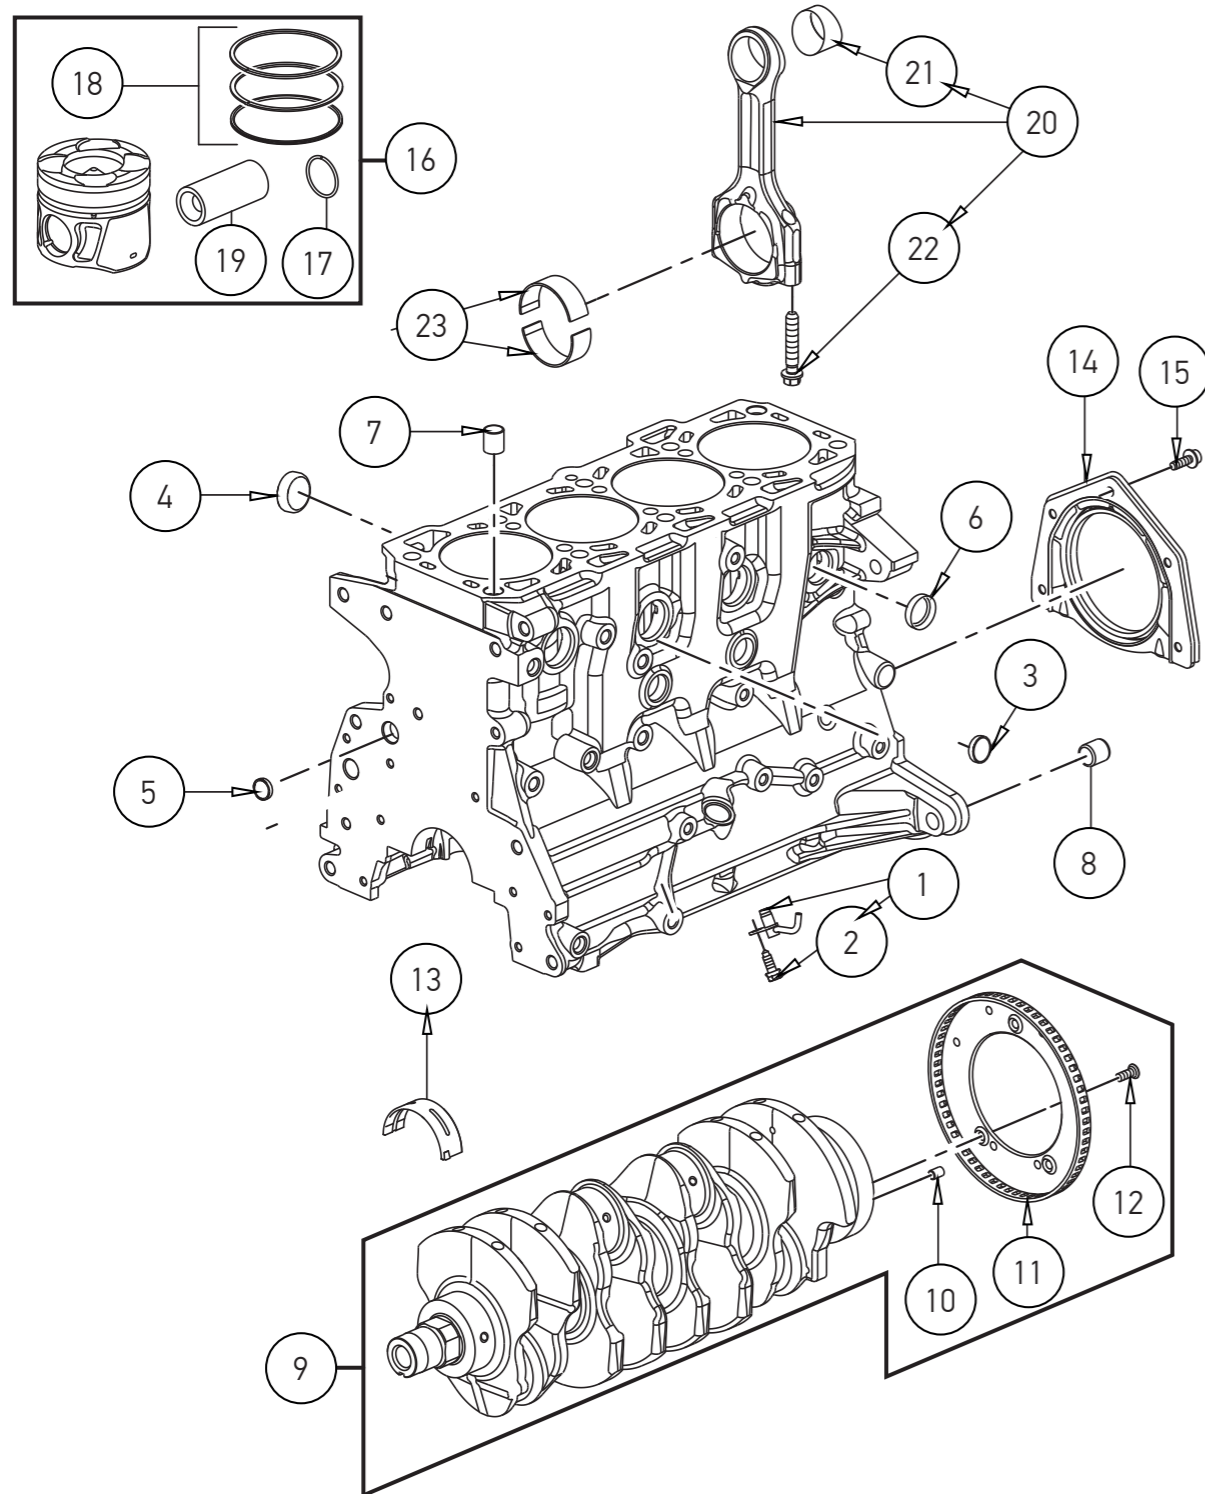 

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0170-053	Jet	1
2	30-0170-054	Screw	1
3	30-0170-055	Plug	1
4	30-0170-056	Plug	1
5	30-0170-057	Plug	1
6	30-0170-058	Plug	1
7	30-0170-112	Sleeve	1
8	30-0170-059	Pin	1
9	30-0170-060	Camshaft	1
10	30-0170-061	Pin	1
11	30-0170-062	Trigger disc	1
12	30-0170-063	Screw	1
13	30-0170-064	Bearing	1
14	30-0170-065	Flange	1
15	30-0170-066	Screw	1
16	30-0170-067	Piston	1
17	30-0170-068	Ring	1
18	30-0170-069	Ring set	1
19	30-0170-070	Gudgeon	1
20	30-0170-071	Rod	1
21	30-0170-072	Bush	1
22	30-0170-073	Screw	1
23	30-0170-074	Bearing	1

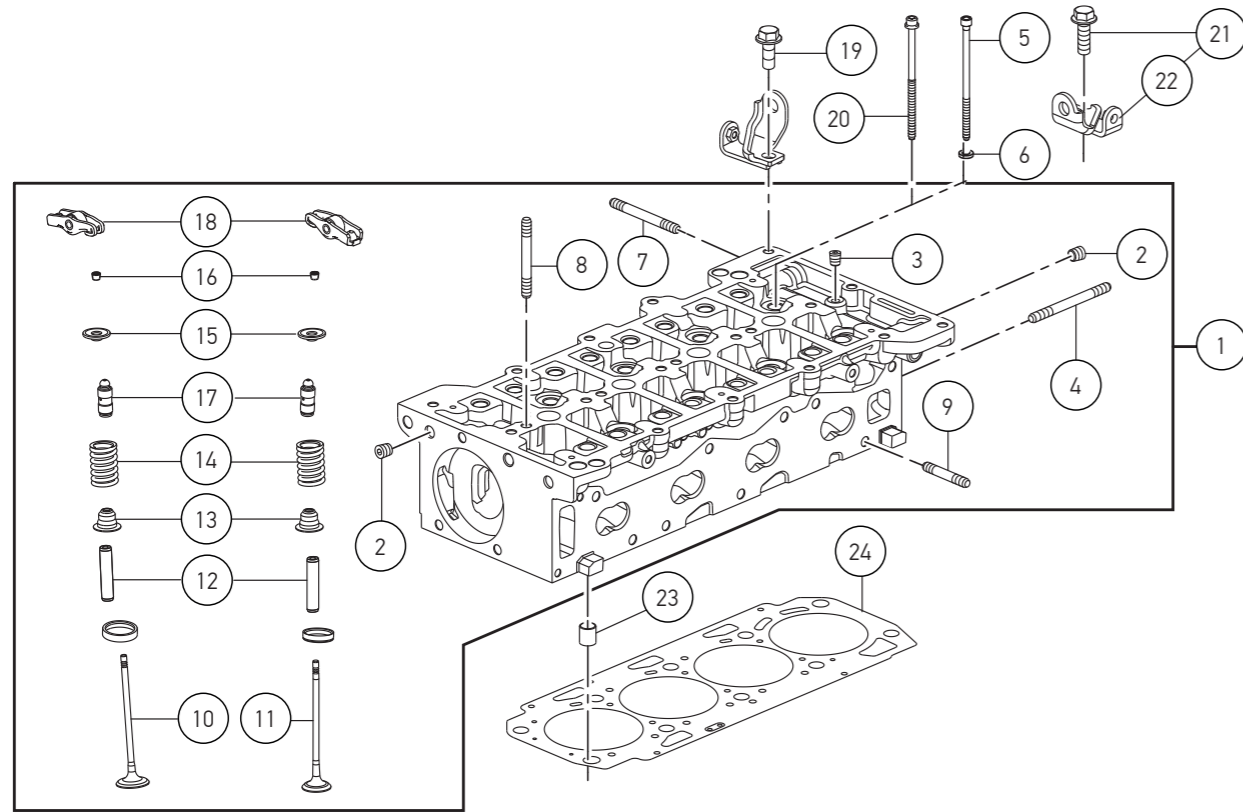 


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0170-026	Cylinder head assembly	1
2	30-0170-027	Plug	2
3	30-0170-028	Plug	1
4	30-0170-029	Stud	1
5	30-0170-091	Screw	2
6	30-0170-030	Washer	1
7	30-0170-031	Stud	1
8	30-0170-032	Stud	1
9	30-0114-296	Stud	1
10	30-0170-034	Valve	1
11	30-0170-035	Valve	1
12	30-0170-036	Guide	2
13	30-0170-037	Seal	2
14	30-0170-038	Spring	2
15	30-0170-039	Cup	2
16	30-0170-040	Key	2
17	30-0170-041	Lifter	2
18	30-0170-042	Arm	2
19	30-0170-043	Screw	2
21	30-0170-044	Schackle	1
23	30-0170-112	Sleeve	1
24	30-0170-046	Gasket	1

**1.8.4 TIMING BELT
ASSEMBLY**

OXE DIESEL PARTS CATALOGUE

**1.8.4 TIMING BELT
ASSEMBLY**

 OXE DIESEL PARTS CATALOGUE

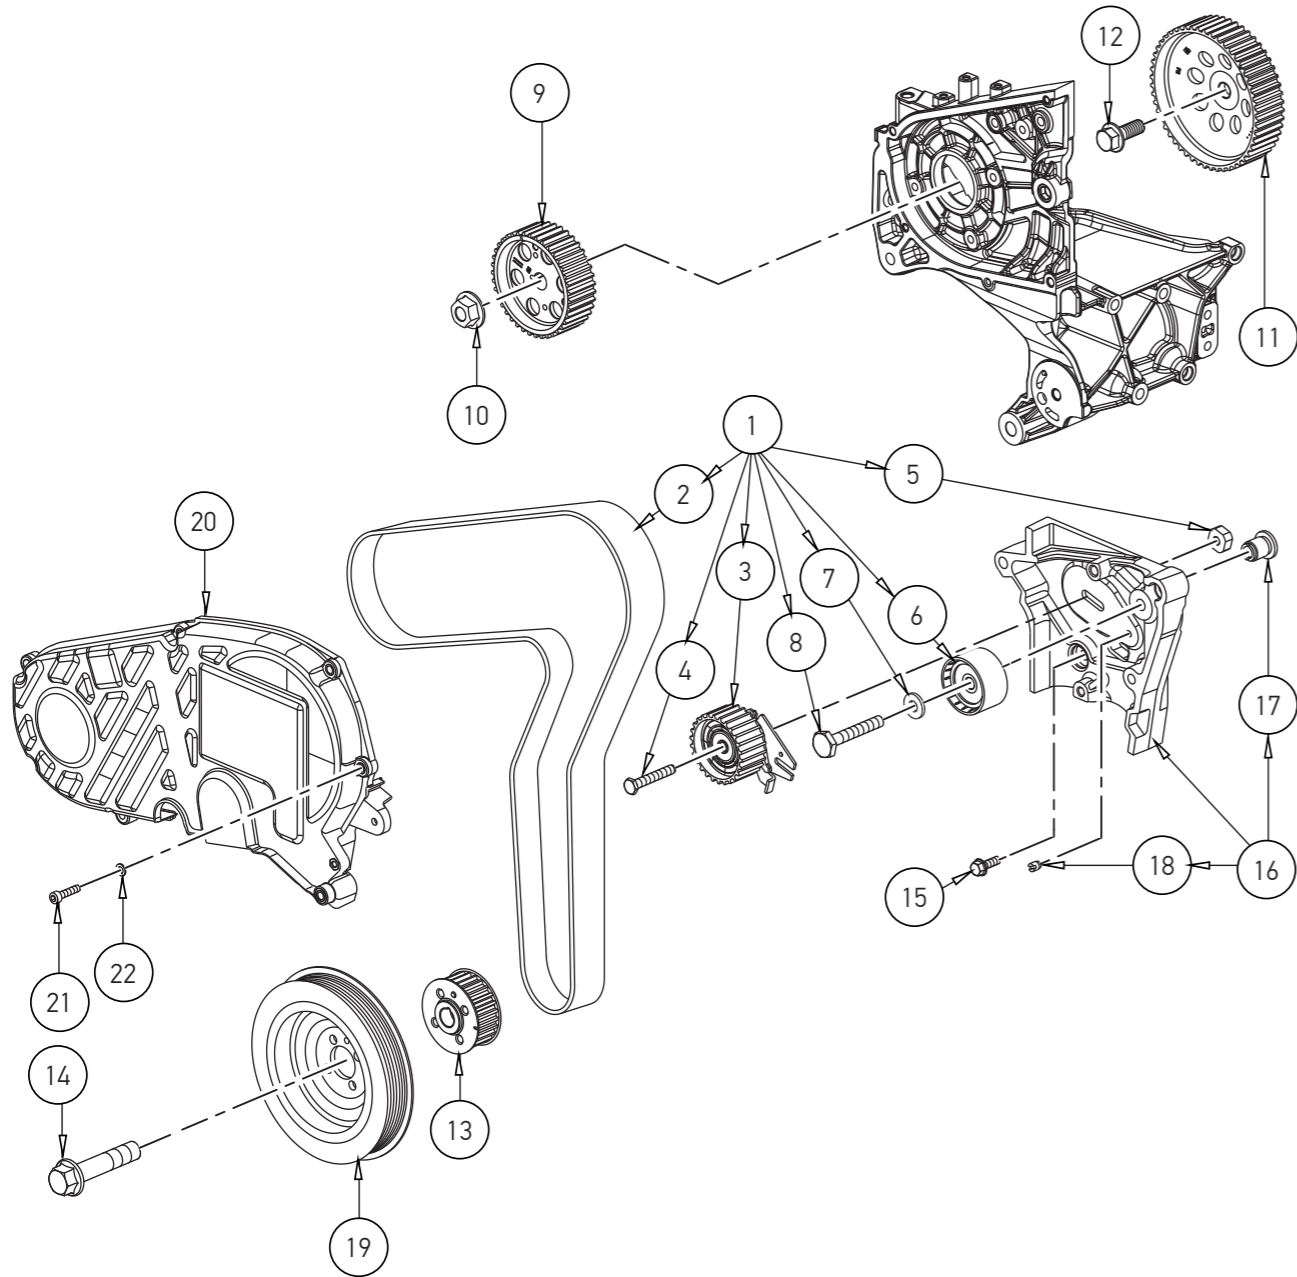


PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0170-122	Timing Belt Assy	1
2	30-0170-045	Cambelt	1
3	30-0170-077	Tensioner, cambelt	1
4	30-0170-078	Screw	1
5	30-0170-079	Nut	1
6	30-0170-047	Roller	1
7	30-0170-081	Washer	1
8	30-0170-082	Screw	1
9	30-0170-083	Gear	1
10	30-0170-084	Nut	1
11	30-0170-080	Sprocket	1
12	30-0170-081	Screw	3
13	30-0170-086	Gear	1
14	30-0170-087	Screw	1
15	30-0170-088	Screw	1
16	30-0170-089	Bracket	1
17	30-0170-090	Bush	1
18	30-0114-267	Screw	1
19	30-0114-020	Crankshaft pulley	1
20	30-0170-093	Timing belt cover	1
21	30-0170-094	Screw	1
22	30-0170-095	Washer	1

1.8.5 ENGINE OIL SYSTEM ASSEMBLY

 
OXE DIESEL PARTS CATALOGUE

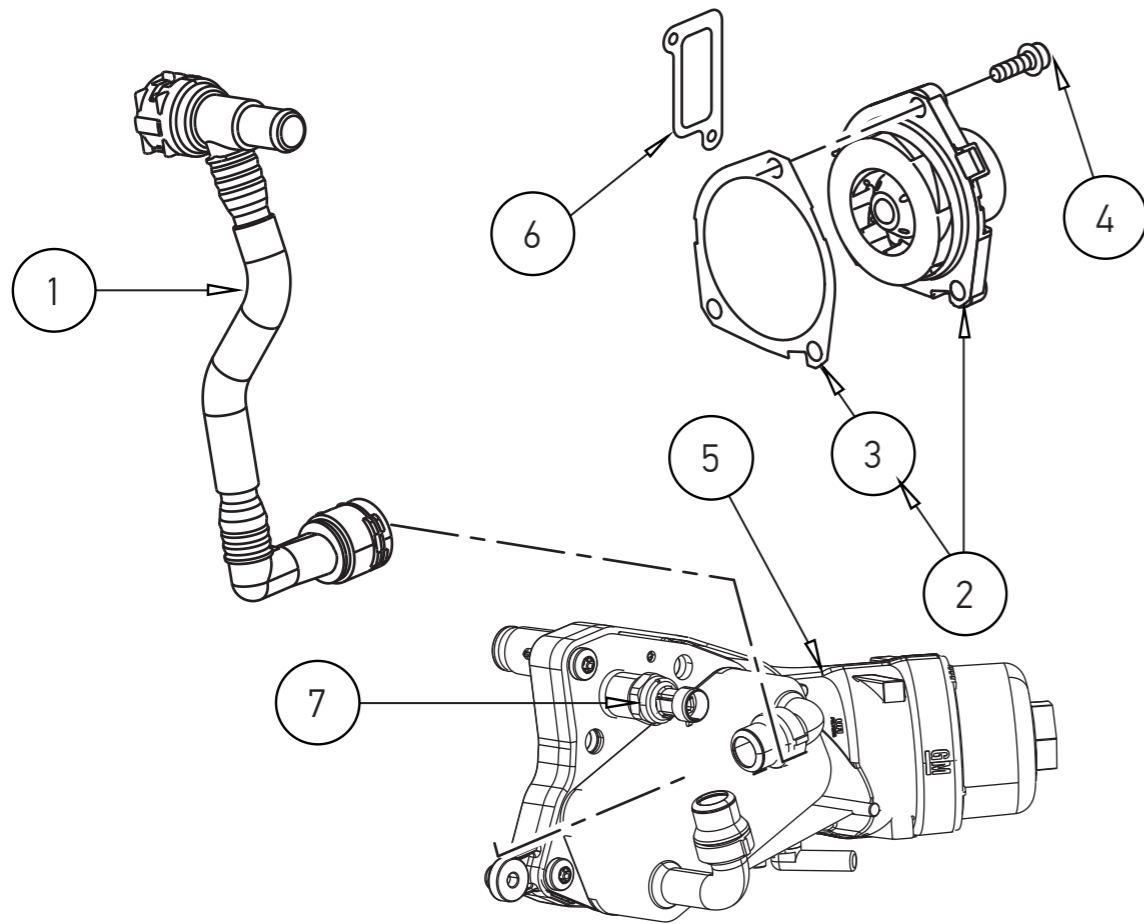

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	30-0170-131	Hose, oil cooler outlet	1
2	30-0170-129	Pump, water, engine circulation	1
3	30-0170-132	Gasket, water pump	1
4	30-0170-133	Bolt, water pump	3
5	30-0114-007	Oil Filter Assy	1
6	30-0114-106	Gasket, engine cooling, water outlet	1
7	30-0116-050	Sensor, oil pressure	

1.8.5.1 ENGINE OIL FILTER ASSEMBLY

 
OXE DIESEL PARTS CATALOGUE

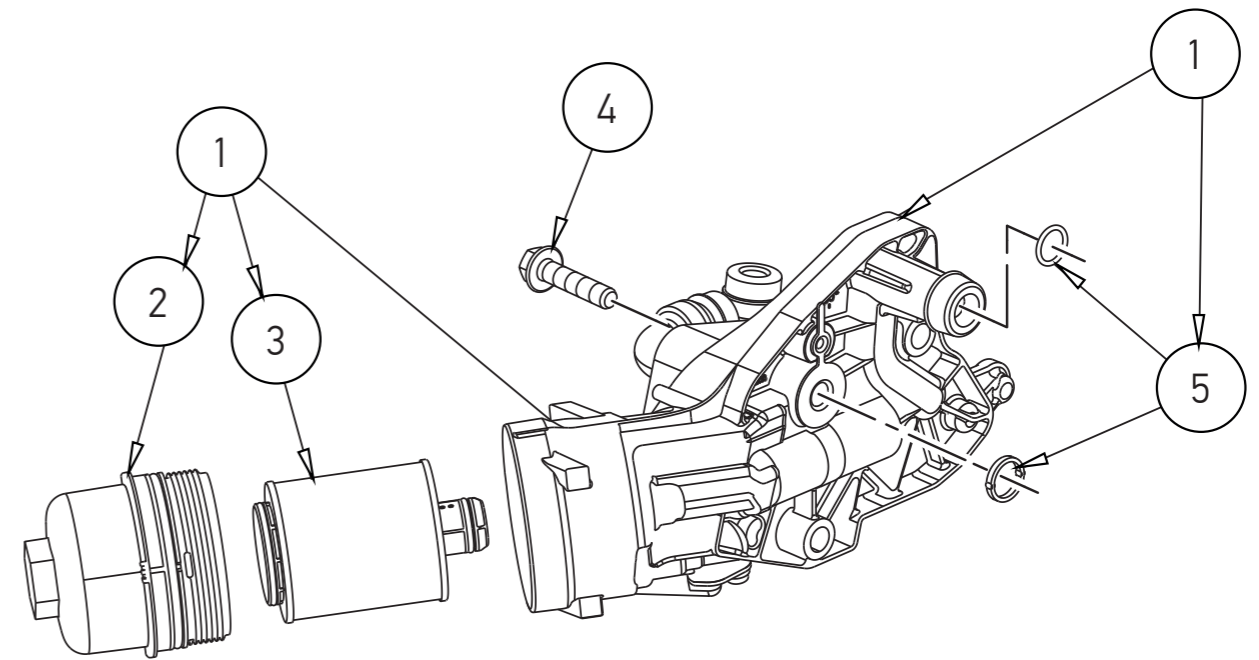

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	30-0114-007	Oil Filter Assy	1
2	30-0170-097	Cap, oil filter	1
3	30-0170-128	Oil filter element	1
4	30-0170-098	Bolt	1
5	30-0170-099	Seal kit, oil filter assembly	1

1.8.6 OIL PUMP ASSEMBLY

 
OXE DIESEL PARTS CATALOGUE

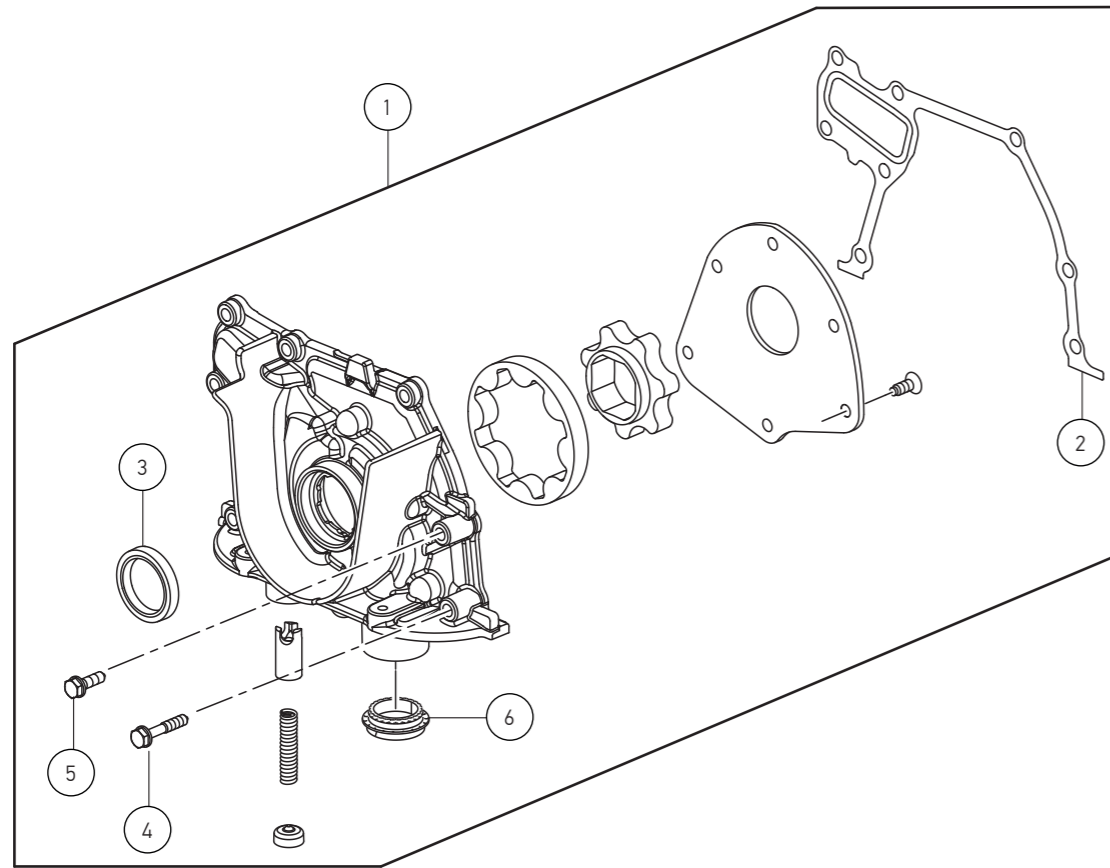

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	30-0170-076	Oil pump assembly	1
2	30-0170-048	Gasket	1
3	30-0170-049	Ring	1
4	30-0170-050	Bolt	3
5	30-0170-051	Bolt	5
6	30-0170-052	Gasket	1

1.8.7 GLOW PLUGS AND INJECTORS

 
OXE DIESEL PARTS CATALOGUE

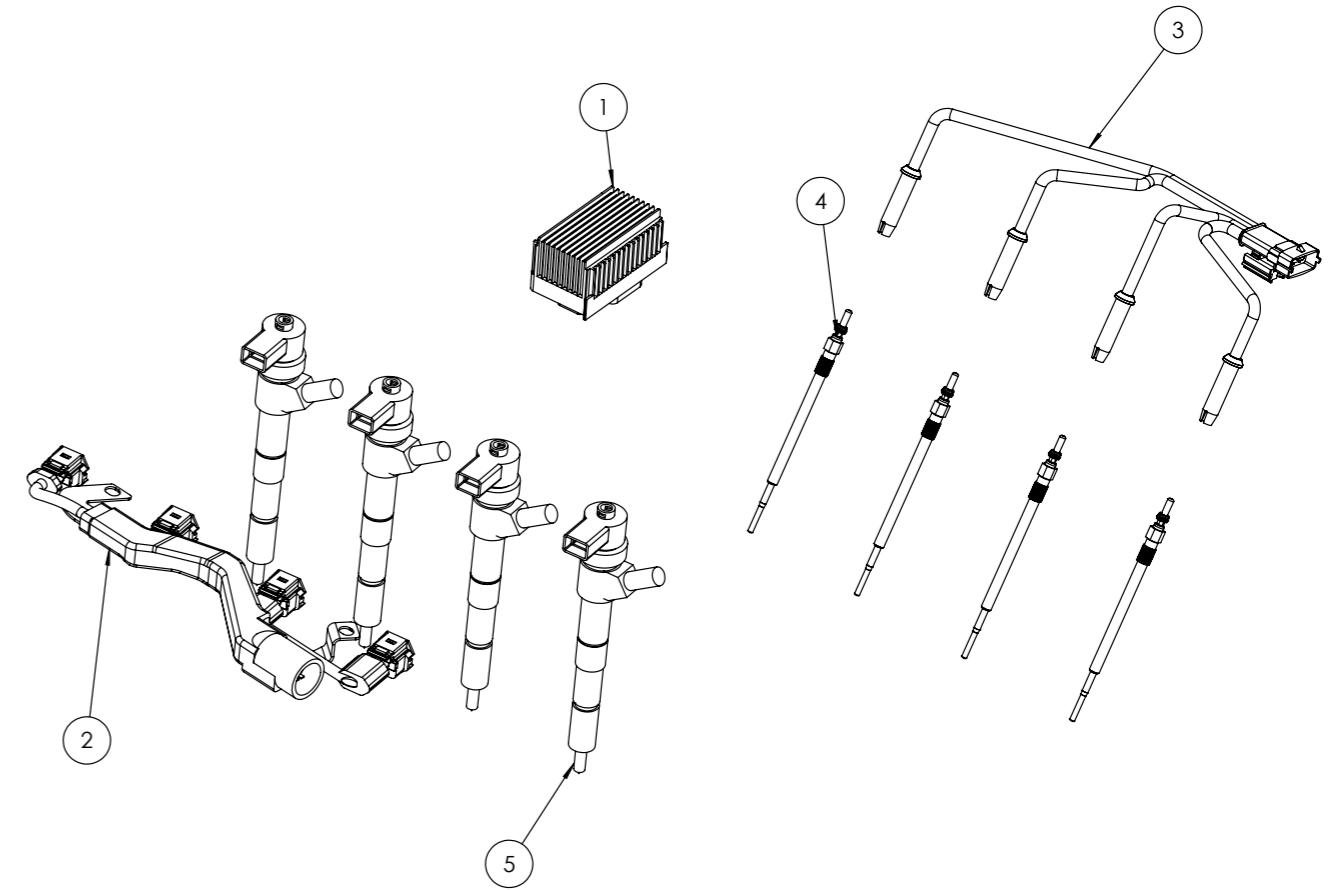

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0116-039	Control module, glow plugs	1
2	30-0116-900	Injector, electrical harness	1
3	30-0116-901	Glow plugs, electrical harness	1
4	30-0116-902	Glow plug	4
5	30-0116-907	Injector	4


SERVICE/REPAIR KITS

PART LIST		
ITEM NO.	PART NUMBER	DESCRIPTION
1.9.1	30-0190-901	Service kit 1 / 50h
1.9.2	30-0190-902	Service kit 2 / 200h
1.9.3 A/B	30-0190-903/30-0190-937	Service kit 3 / 800h XL/XXL
1.9.4	30-0190-910	Heat exchanger bundle Kit
1.9.5	30-0190-911	Hydraulic cooler core Kit
1.9.6	30-0190-912	Sea Water impeller Kit
1.9.7	30-0190-914	Turbocharger Service kit
1.9.8	30-0190-915	Upper Belt Service Kit
1.9.9	30-0190-916	Upper Belt Bearing Kit
1.9.10	30-0190-917/30-0190-936	Lower Belt Service Kit XL/XXL
1.9.11	30-0190-918	Lower Belt Bearing Kit
1.9.12	30-0190-920	Lower housing Assembly Kit
1.9.13	30-0190-921	Hydraulic Oil filter kit
1.9.14	30-0190-922	Hydraulic Pump Service Kit
1.9.15	30-0190-923	PTT Service kit
1.9.16	30-0190-925	Gearbox repair kit
1.9.17	30-0190-926	Gearbox Service kit
1.9.18	30-0190-927	Gearbox Bearing kit
1.9.19	30-0190-928	Propeller Shaft Repair kit
1.9.20	30-0190-929	Bearing kit Prop shaft
1.9.21	30-0190-930	Anode kit
1.9.22	30-0190-931	Sensor kit
1.9.23	30-0190-935	Fuel pump kit

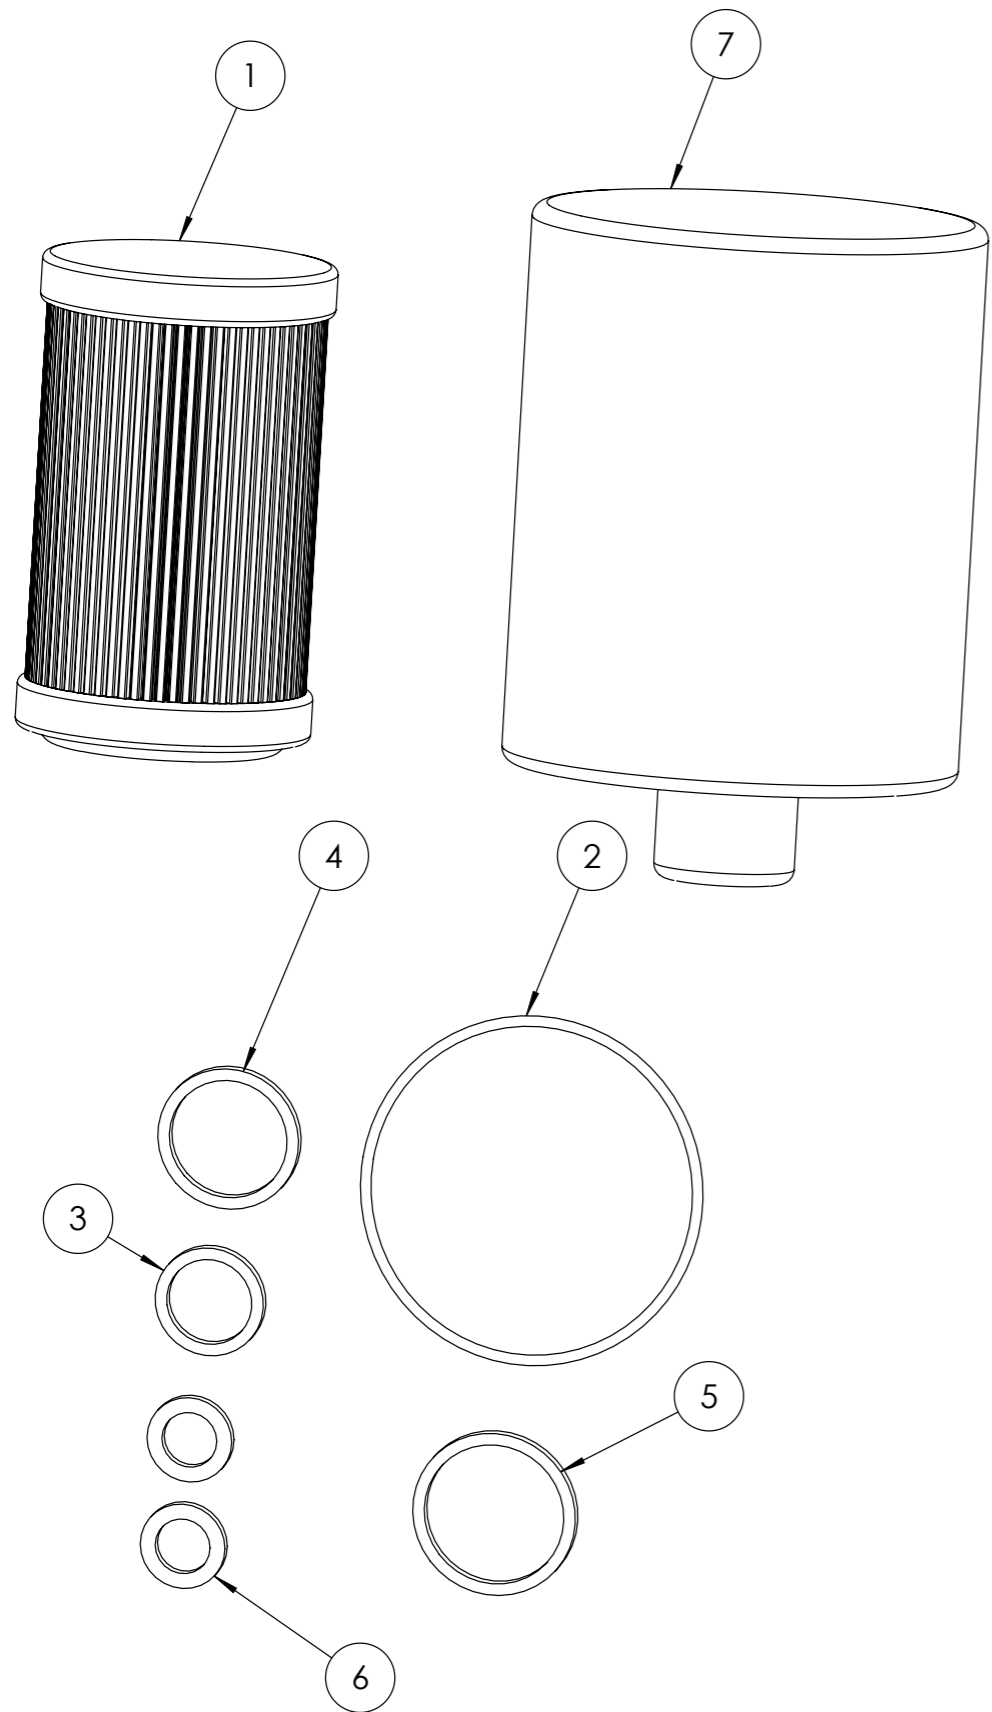 


PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0115-028	Hydraulic filter	1
2	30-0121-042	O-ring	1
3	30-0121-058	Seal	1
4	30-0121-060	Seal	1
5	30-0121-061	Seal	1
6	30-0122-218	Seal	2
7	30-0170-128	Oil filter	1

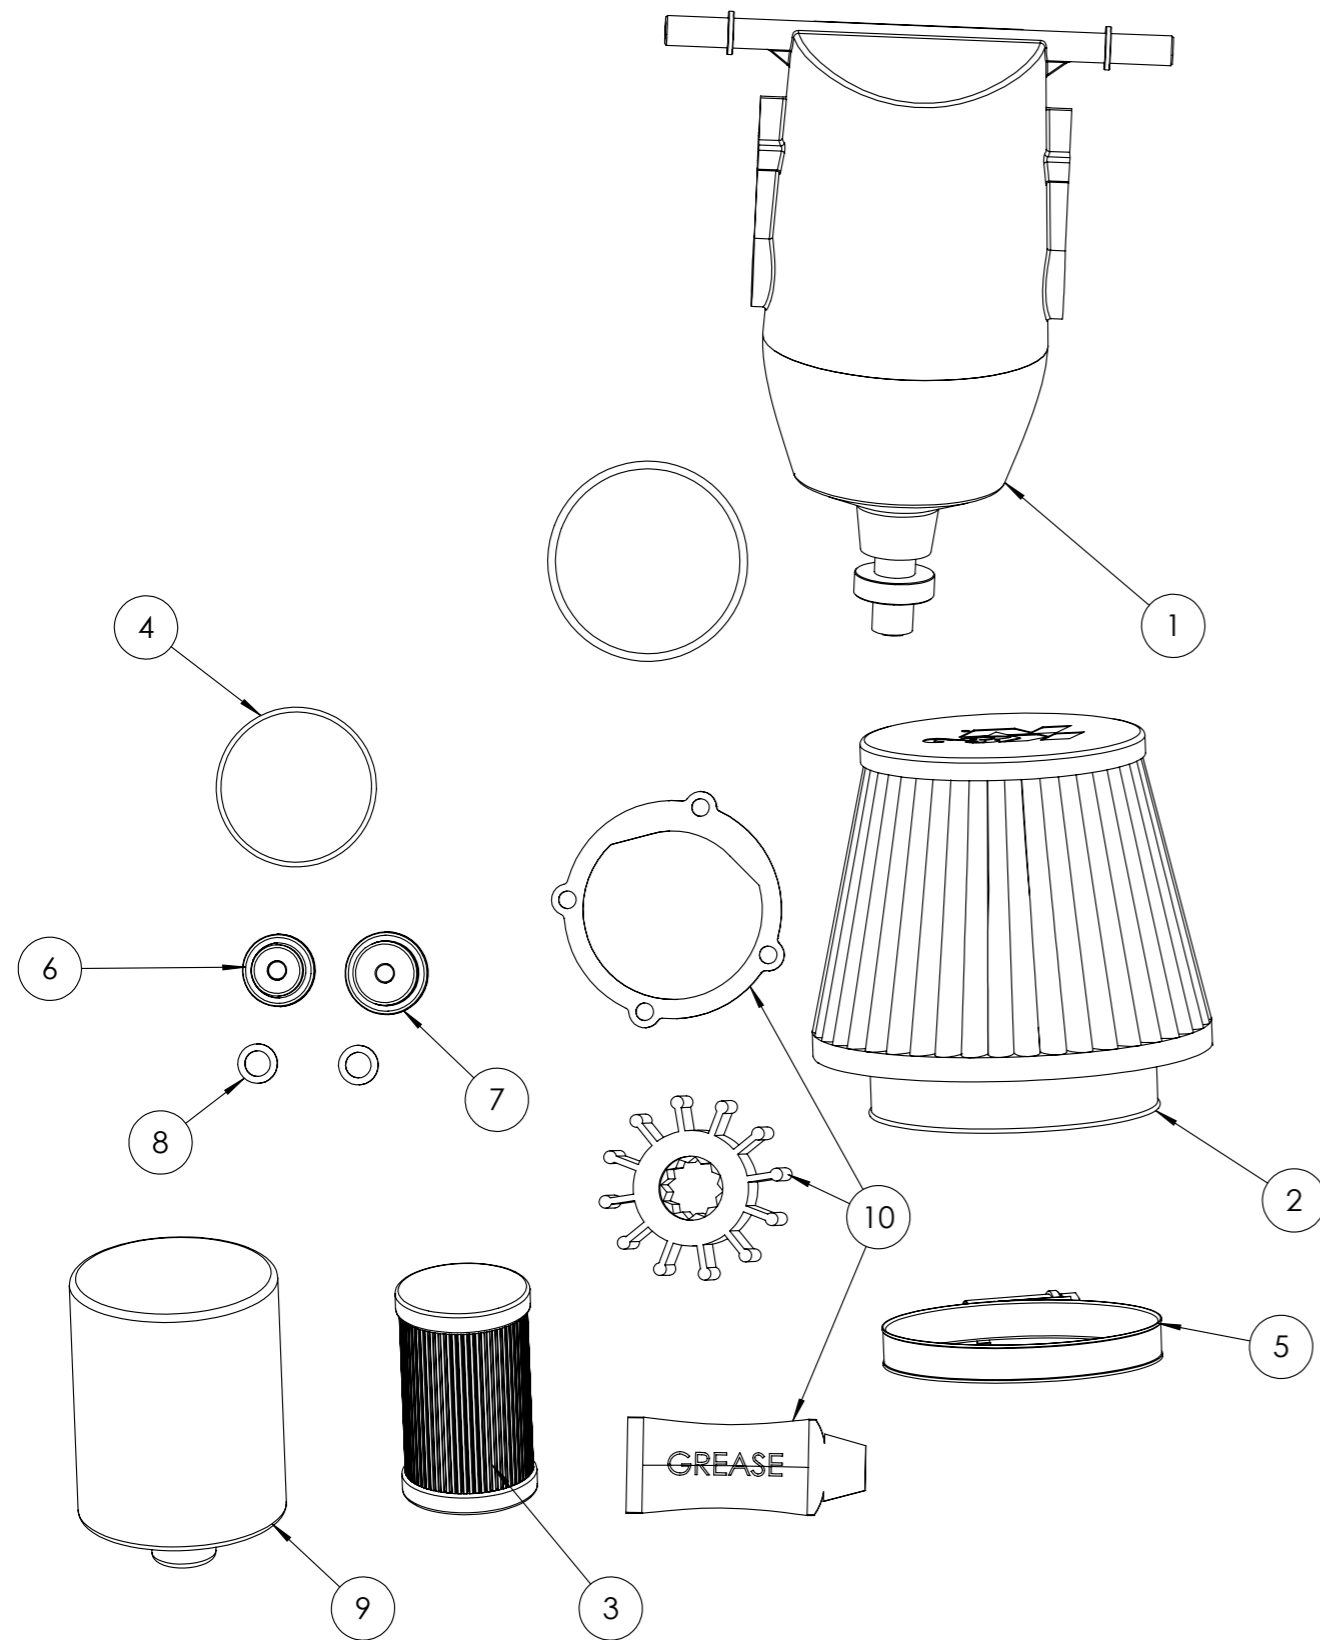 


PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-138	Fuel filter	1
2	30-0114-427	Air filter	1
3	30-0115-028	Hydraulic filter	1
4	30-0121-042	O-ring	1
5	30-0122-056	Hose clamp	1
6	30-0122-189	Hex magnet plug	1
7	30-0122-192	Hex magnet plug	1
8	30-0122-218	Fiber seal	2
9	30-0170-128	Engine oil filter	1
10	30-0190-912	Sea Water impeller Kit	1

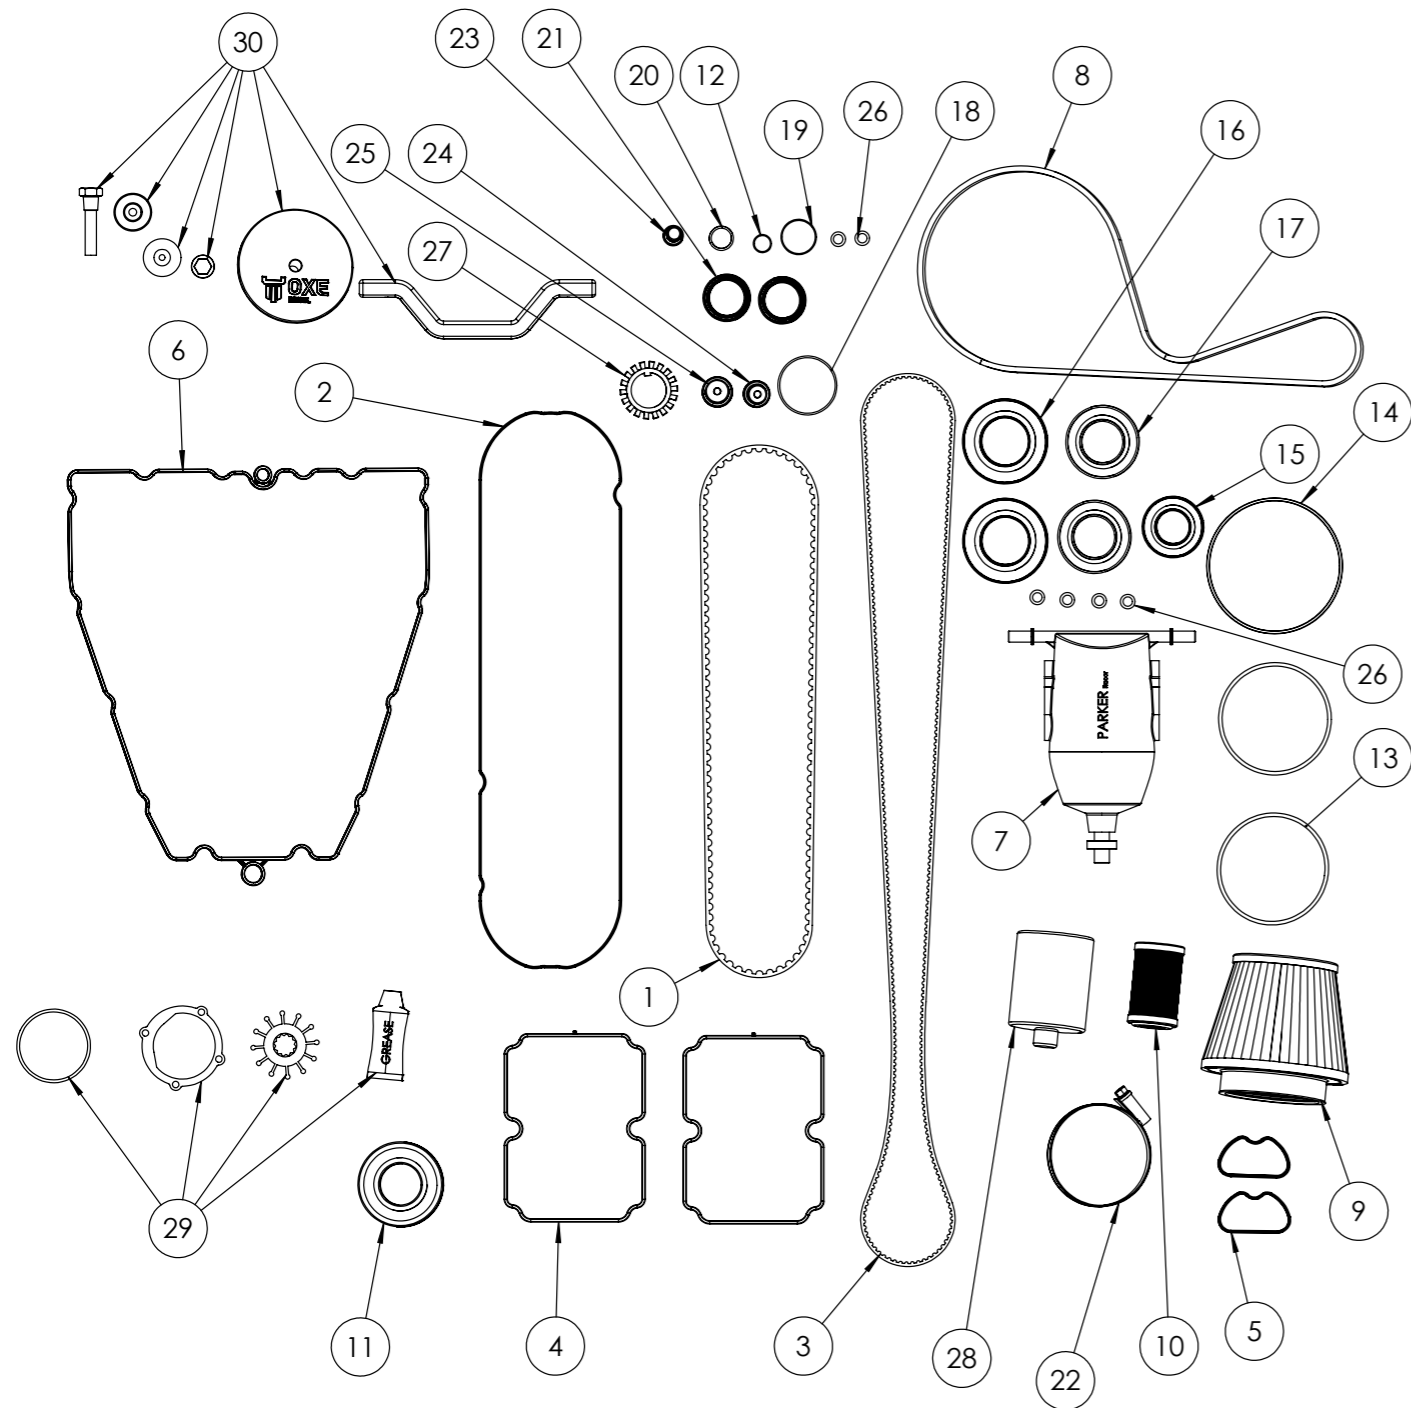 


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0110-062	Upper belt	1
2	30-0110-083	Belt housing seal	1
3	30-0111-002	Lower belt	1
4	30-0111-121	Lower housing belt cavity seal	2
5	30-0111-124	Lower housing water cavity seal	2
6	30-0111-125	Gearbox housing seal	1
7	30-0114-138	Parker Racor fuel filter	1
8	30-0114-426	Poly V belt 962mm	1
9	30-0114-427	Air filter	1
10	30-0115-028	Hydraulic filter 42x70x22	1
11	30-0120-001	Spherical roller bearing SNR 22207 EAW33	1
12	30-0121-002	O-ring 14,0x1,0 NBR 70	1
13	30-0121-008	O-ring 89,5 x 3,0 NBR 70	2
14	30-0121-009	O-ring 109,5x3,0 NBR 70	1
15	30-0121-014	28X52X7 Radial seal	1
16	30-0121-018	40x72x7 Radial seal	2
17	30-0121-031	Radial sealing 35x62x7	2
18	30-0121-042	O-ring 47X1,5mm NBR70	1
19	30-0121-044	O-ring 28X1 NBR70	1
20	30-0121-060	Kantseal 17,17x1,68 NBR 70	1
21	30-0121-071	30x40x7 Radial seal stainless spring	2
22	30-0122-056	70-90 Stainless hose clamp	1
23	30-0122-135	VISTI-M_M12x1,5-JE	1
24	30-0122-189	Hex magnet plug M16x1.5	1
25	30-0122-192	Hex magnet plug M20x1.5	1
26	30-0122-218	Fiber seal M8	6
27	30-0130-195	MB 6 Locking ring	1
28	30-0170-128	Engine oil filter	1
29	30-0190-912	Sea Water impeller Kit	1
30	30-0190-930	Anode kit	1

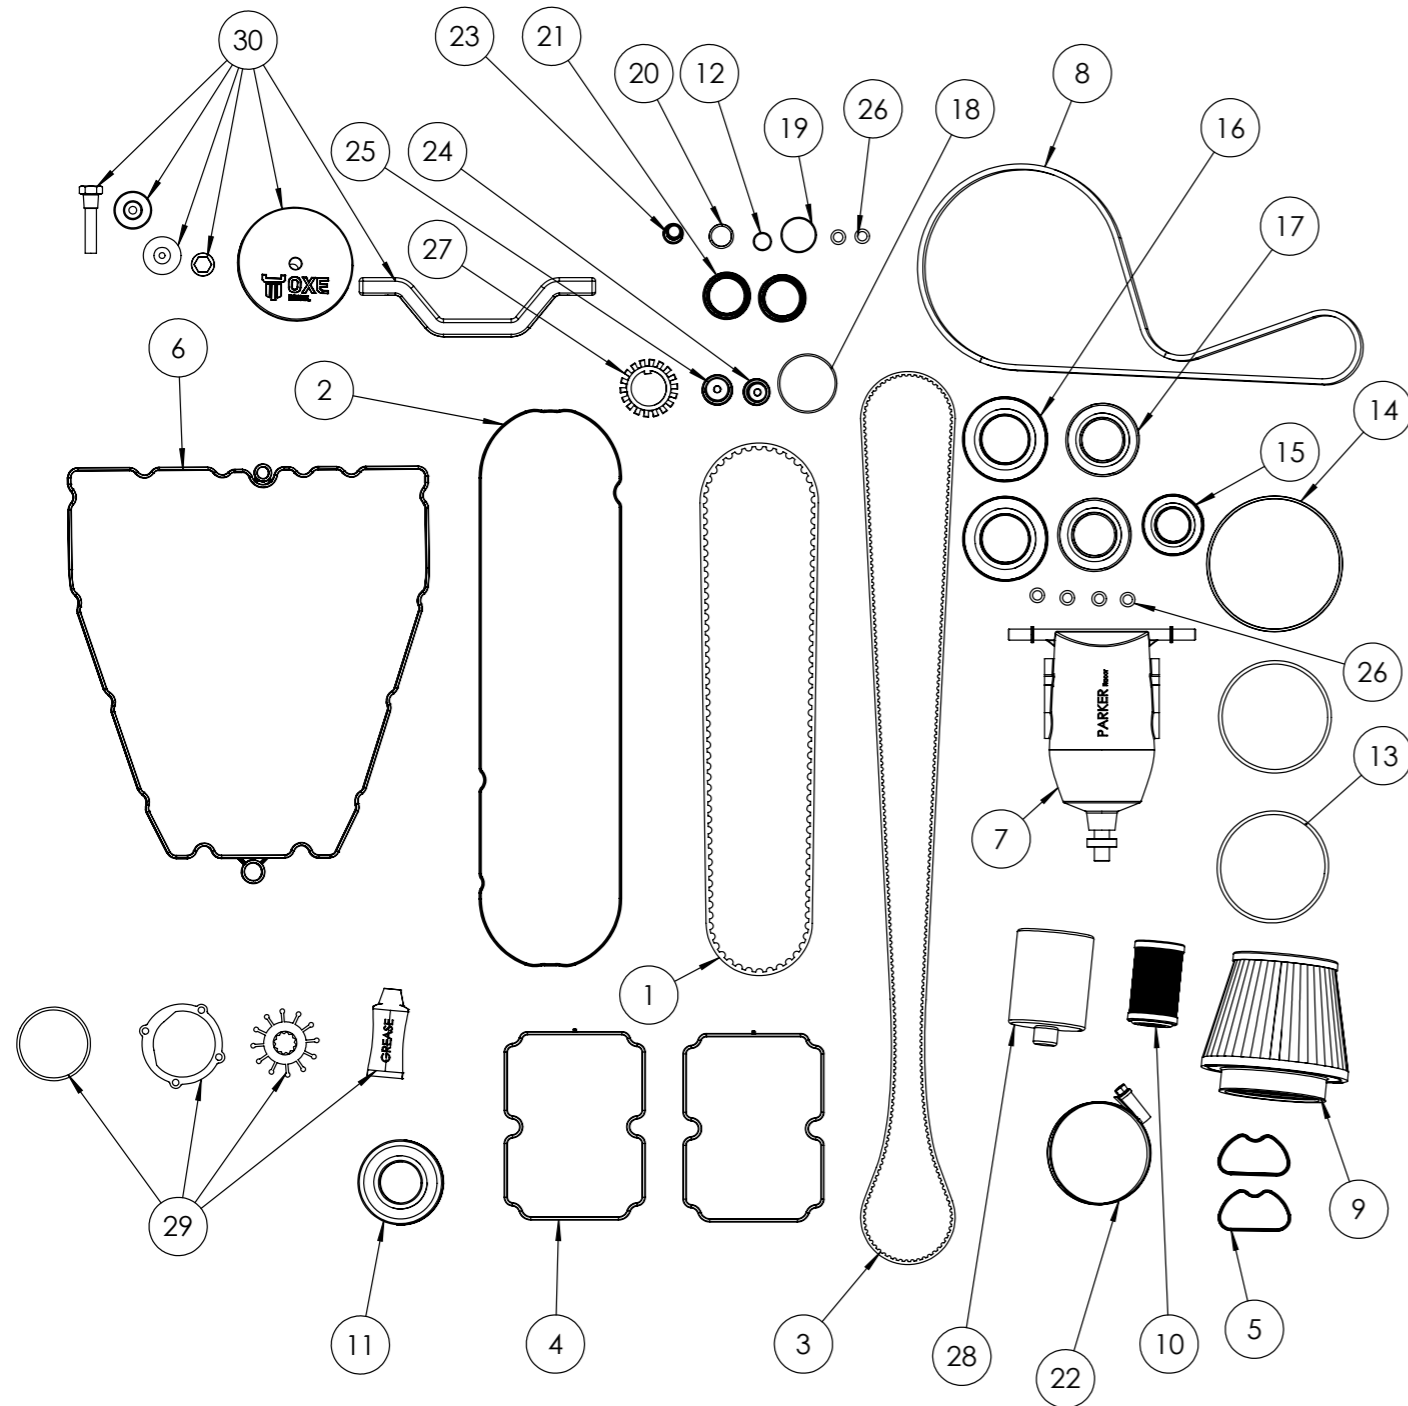 

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0110-062	Upper belt	1
2	30-0110-083	Belt housing seal	1
3	30-0111-143	Lower belt - long rig	1
4	30-0111-121	Lower housing belt cavity seal	2
5	30-0111-124	Lower housing water cavity seal	2
6	30-0111-125	Gearbox housing seal	1
7	30-0114-138	Parker Racor fuel filter	1
8	30-0114-426	Poly V belt	1
9	30-0114-427	Air filter	1
10	30-0115-028	Hydraulic filter	1
11	30-0120-001	Spherical roller bearing	1
12	30-0121-002	O-ring	1
13	30-0121-008	O-ring	2
14	30-0121-009	O-ring	1
15	30-0121-014	Radial seal	1
16	30-0121-018	Radial seal	2
17	30-0121-031	Radial seal	2
18	30-0121-042	O-ring	1
19	30-0121-044	O-ring	1
20	30-0121-060	Seal	1
21	30-0121-071	Radial seal	2
22	30-0122-056	Hose clamp	1
23	30-0122-135	Plug	1
24	30-0122-189	Hex magnet plug	1
25	30-0122-192	Hex magnet plug	1
26	30-0122-218	Fiber seal	6
27	30-0130-195	Locking ring	1
28	30-0170-128	Engine oil filter	1
29	30-0190-912	Sea Water impeller Kit	1
30	30-0190-930	Anode kit	1

**1.9.4 HEAT EXCHANGER
BUNDLE KIT**

 30-0190-910
OXE DIESEL PARTS CATALOGUE

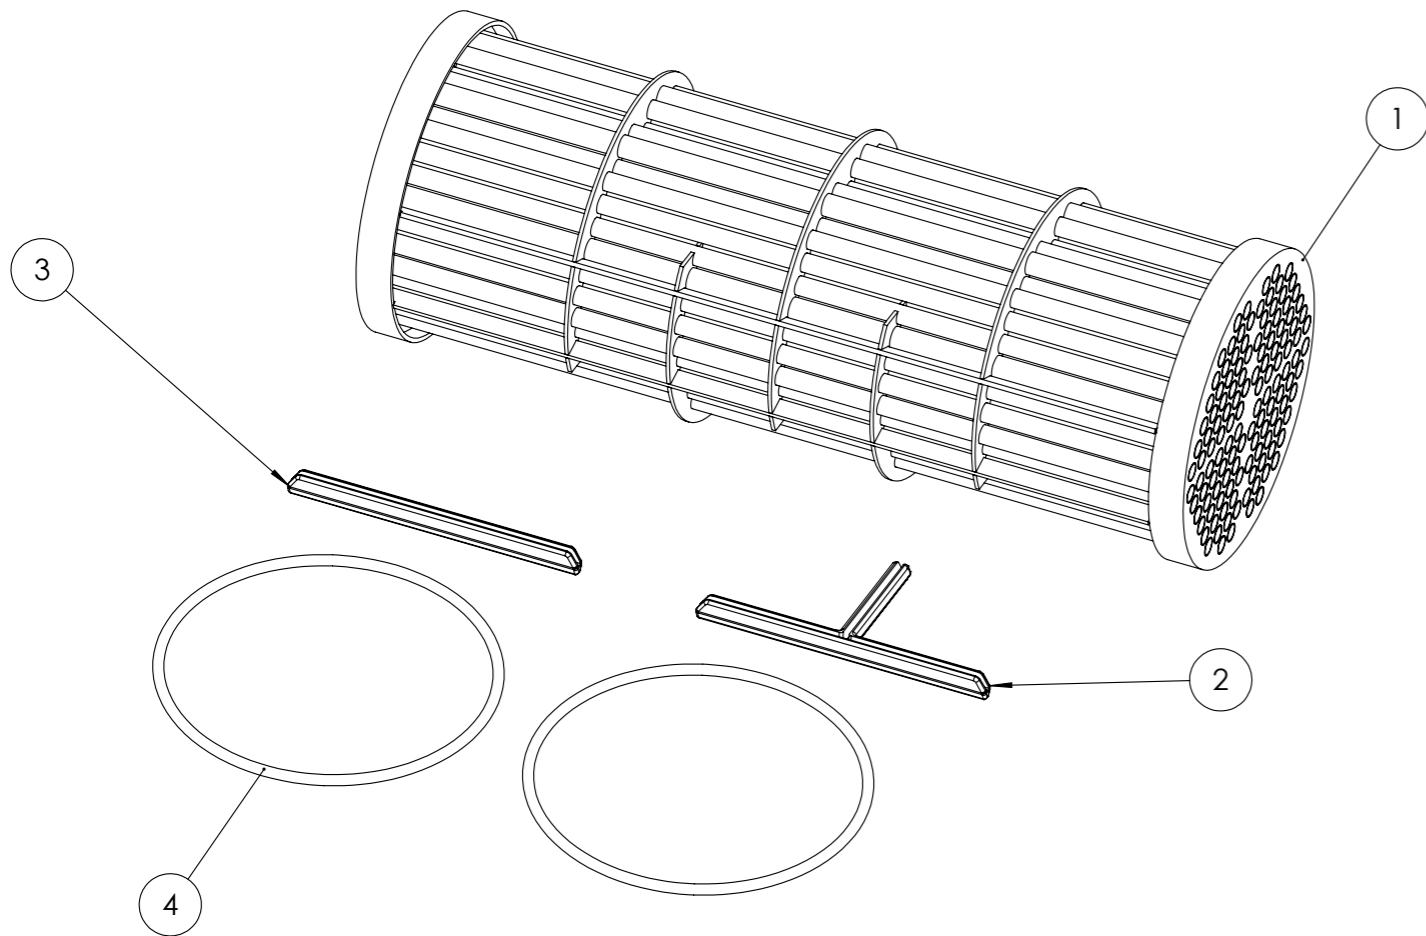

**1.9.4 HEAT EXCHANGER
BUNDLE KIT**


30-0190-910
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-402	Heat exchanger bundle	1
2	30-0114-409	Rear end-cap divider seal	1
3	30-0114-411	Front end-cap divider seal	1
4	30-0121-068	Heat exchanger o-ring	2
5	30-0111-124	Lower housing water cavity seal	2

**1.9.5 HYDRAULIC COOLER
CORE KIT**

30-0190-911

 OXE DIESEL PARTS CATALOGUE




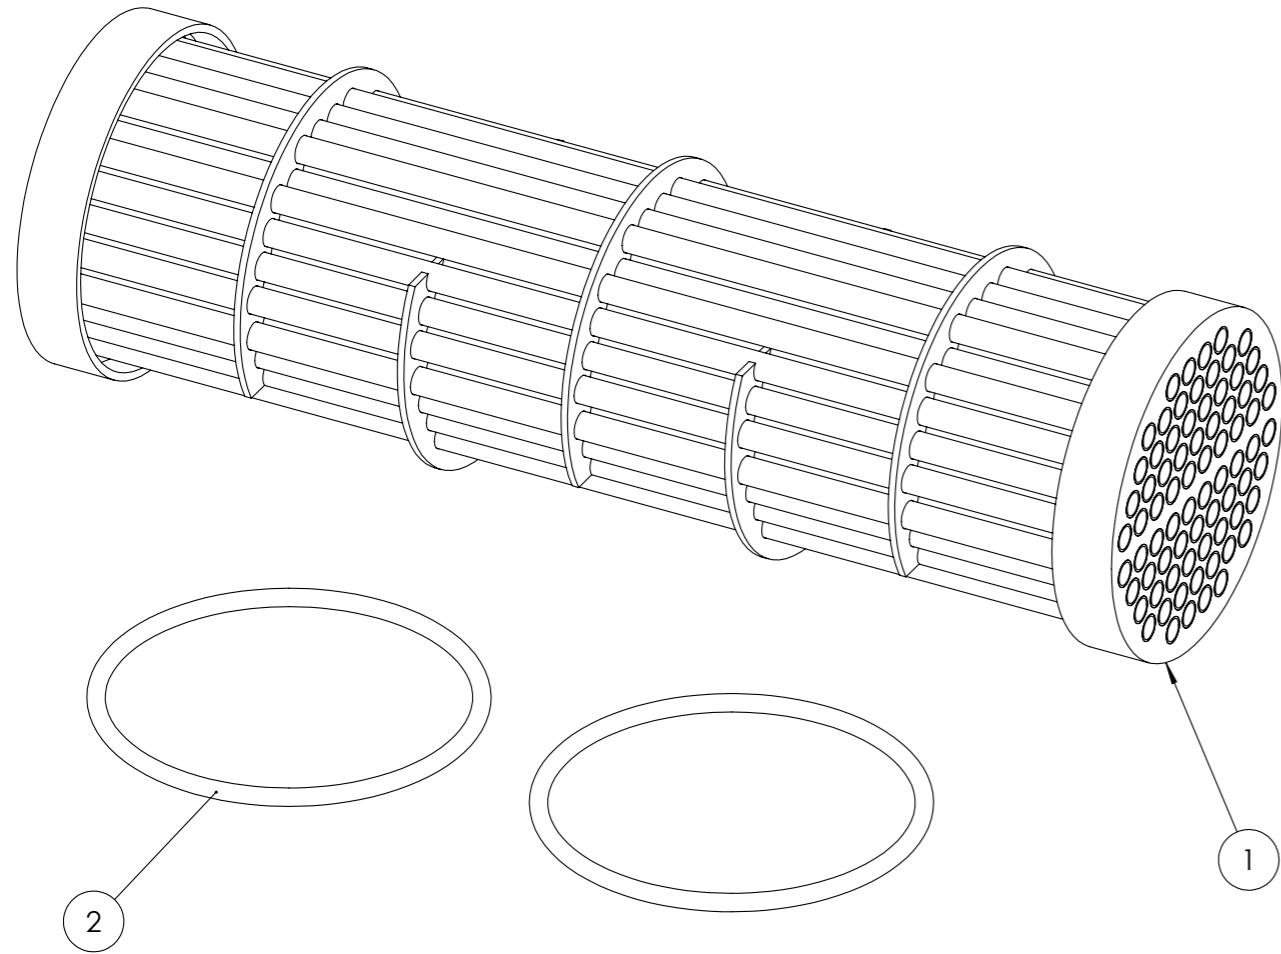


**1.9.5 HYDRAULIC COOLER
CORE KIT**

30-0190-911

OXE DIESEL PARTS CATALOGUE


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-401	Hydraulic oil cooler bundle	1
2	30-0121-067	Hydraulic oil cooler o-ring	2

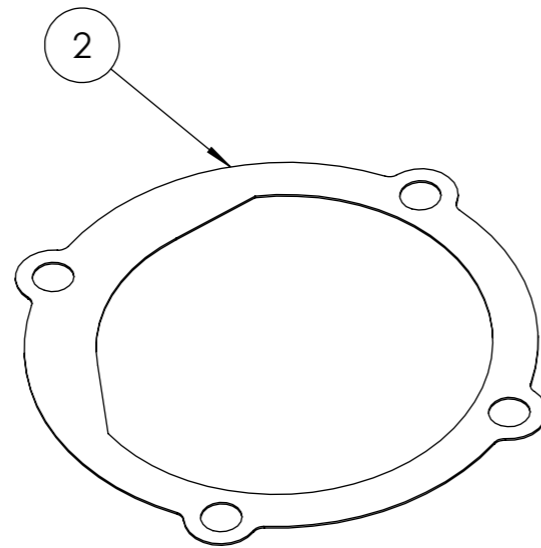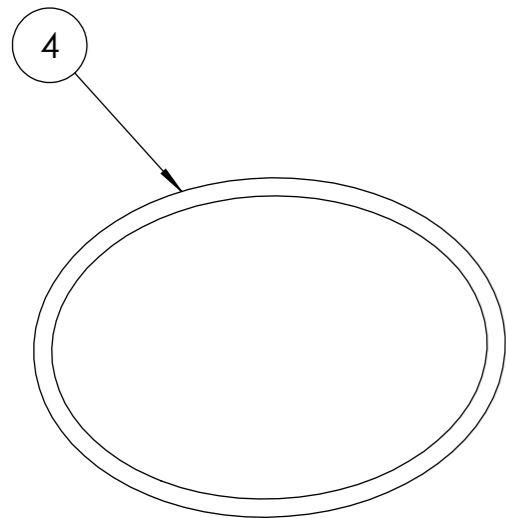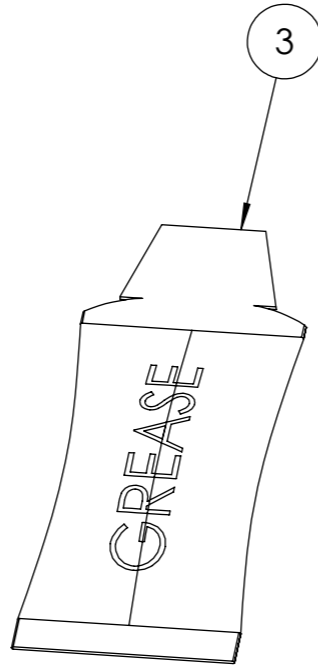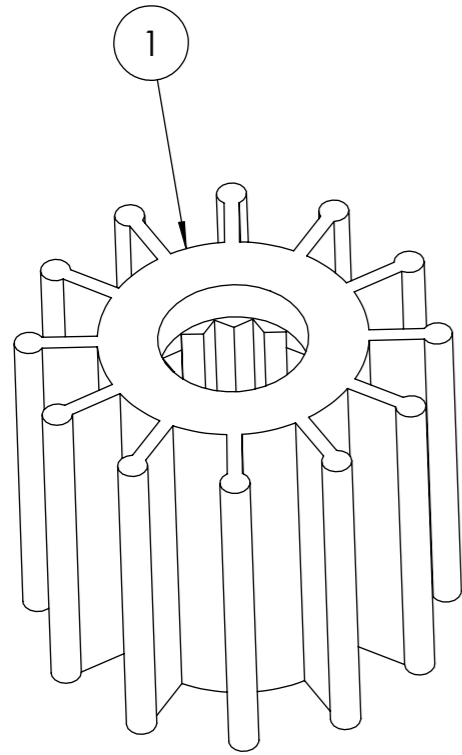    

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-334	Water pump impeller	1
2	30-0114-446	SWP gasket	1
3	30-0122-263	SWP impeller grease	1
4	30-0122-264	SWP impeller o-ring	1

**1.9.7 TURBOCHARGER
SERVICE KIT**

 30-0190-914
OXE DIESEL PARTS CATALOGUE

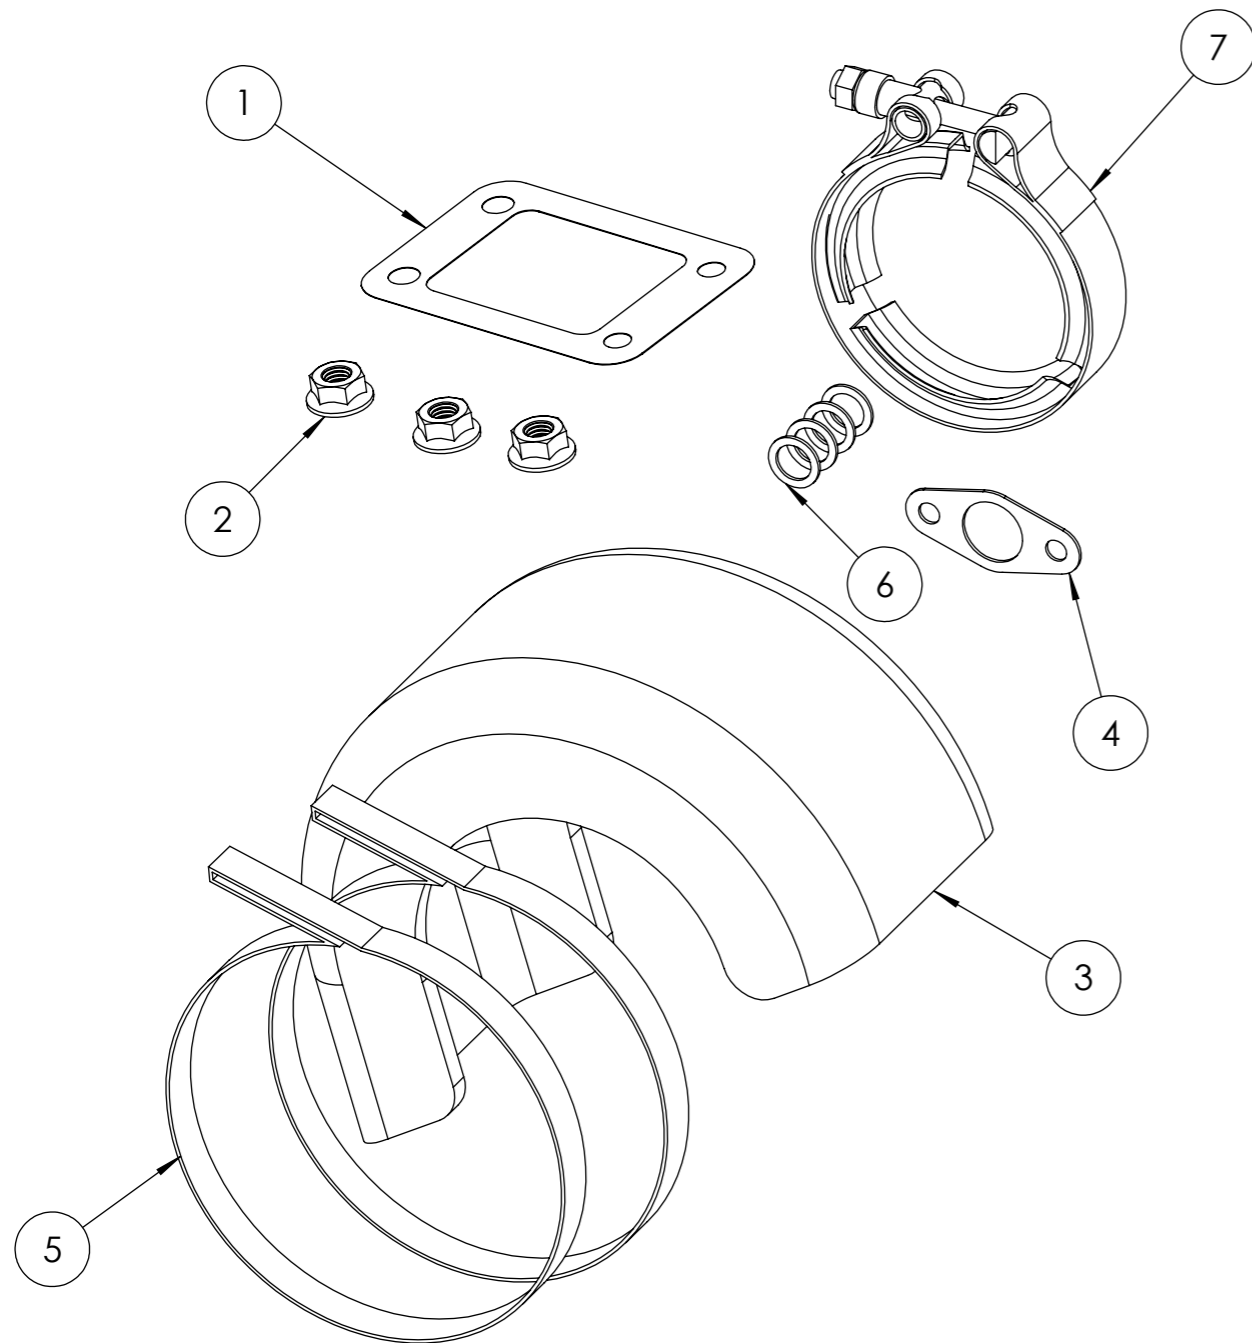


**1.9.7 TURBOCHARGER
SERVICE KIT**

30-0190-914
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-076	Gasket	1
2	30-0114-298	Nut	3
3	30-0114-340	Heat Cover	1
4	30-0114-428	Seal	1
5	30-0114-441	Cable tie	2
6	30-0121-052	Copper washer	4
7	30-0122-102	V-band clamp	1

1.9.8 UPPER BELT SERVICE KIT

 
30-0190-915
OXE DIESEL PARTS CATALOGUE

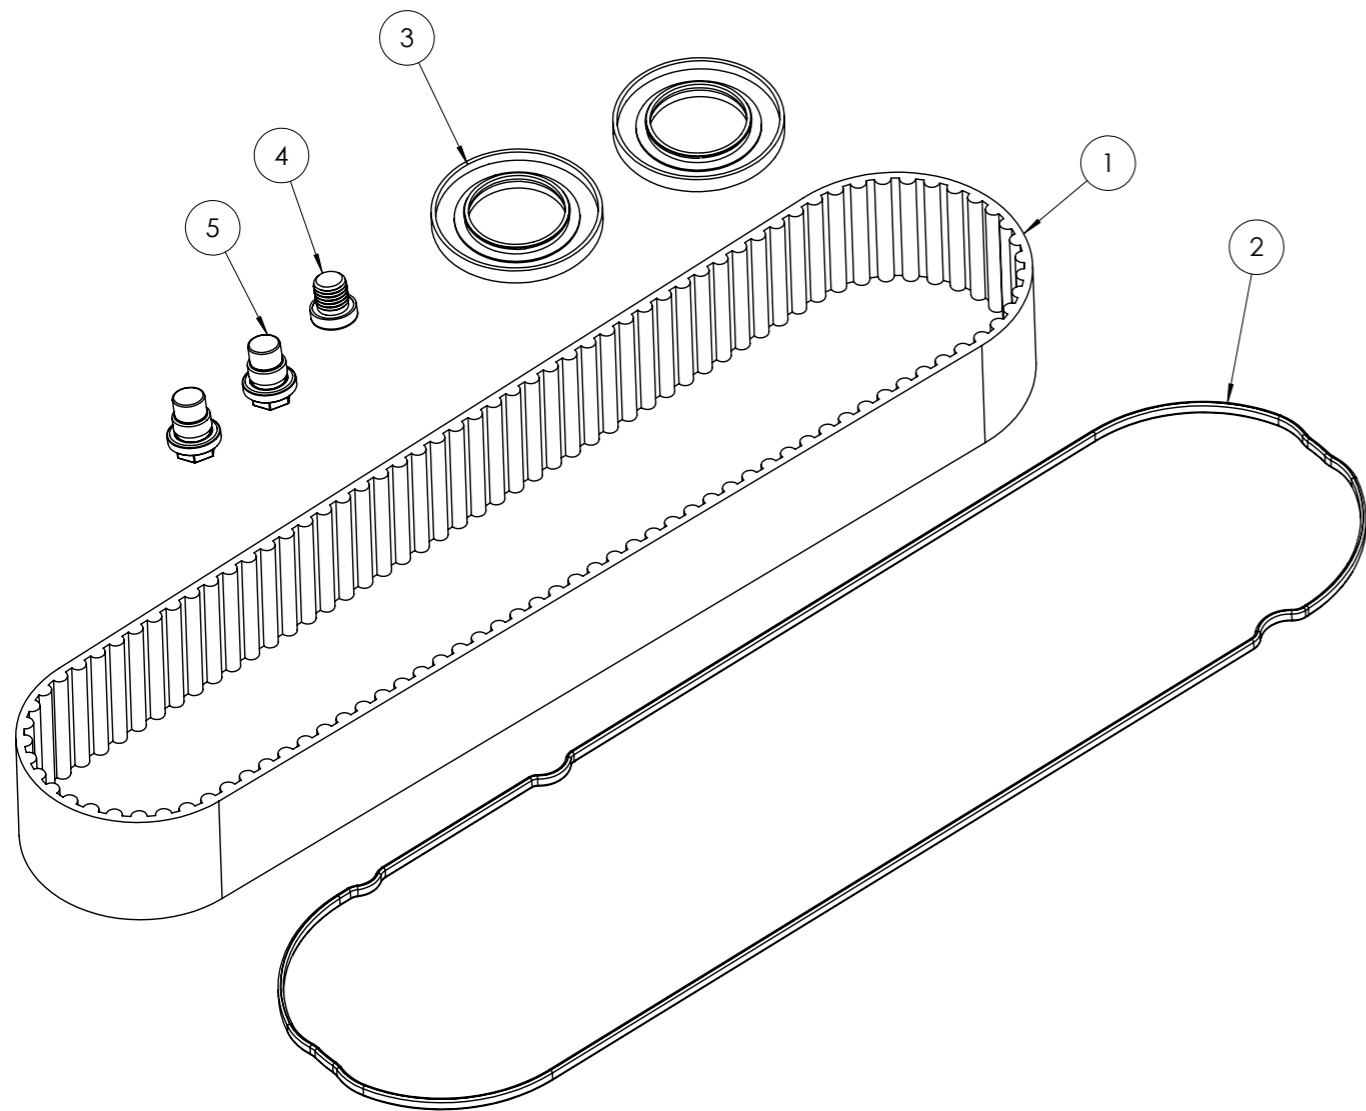


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0110-062	Upper belt	1
2	30-0110-083	Seal	1
3	30-0121-031	Radial seal	2
4	30-0122-135	Plug	1
5	30-0122-234	Anode	2

1.9.9 UPPER BELT BEARING KIT

 30-0190-916
OXE DIESEL PARTS CATALOGUE

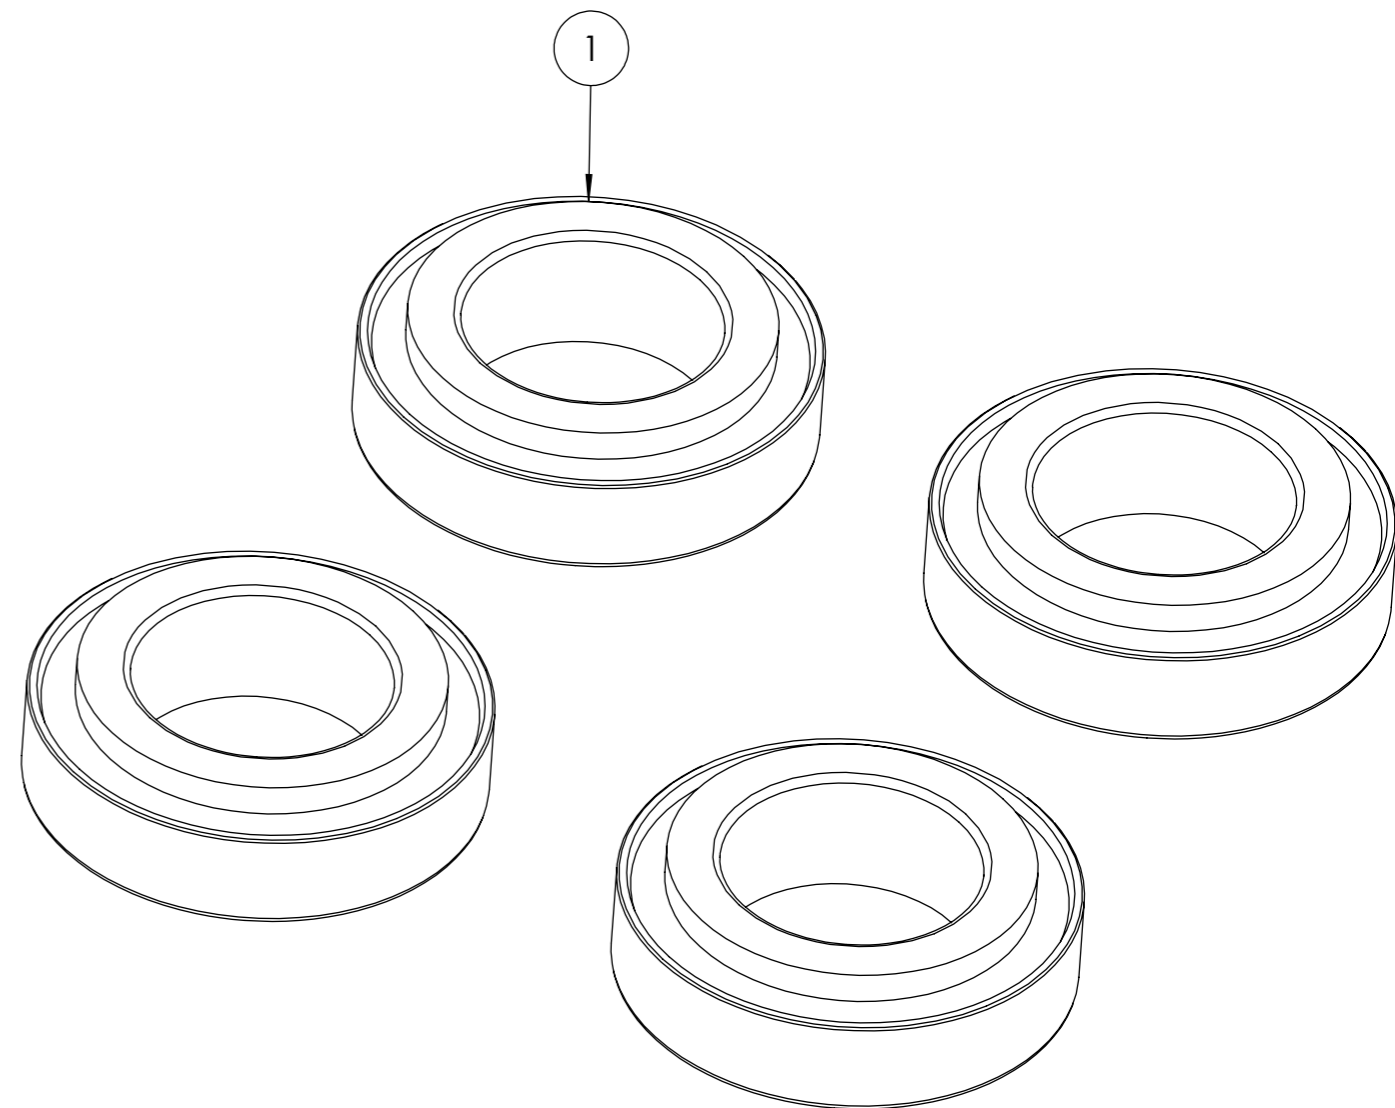

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0120-019	Bearing	4

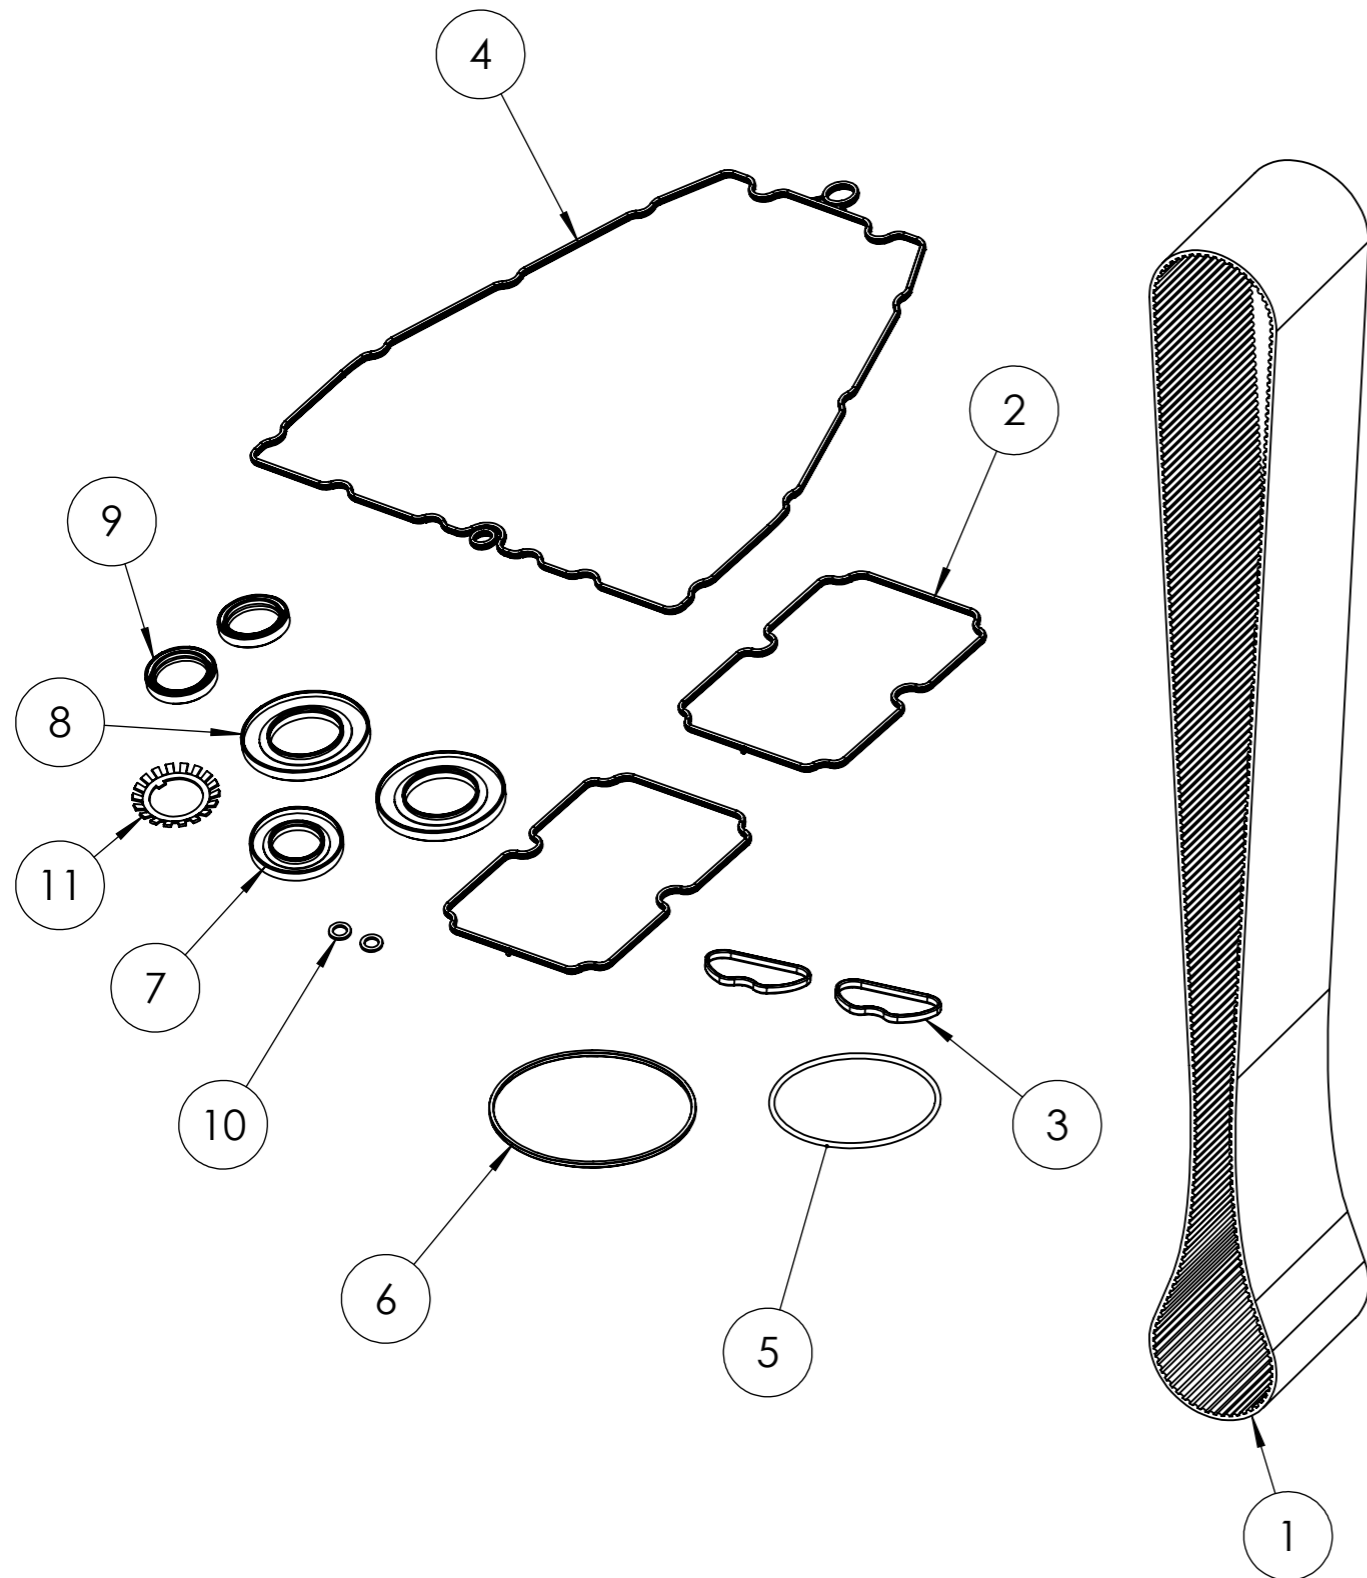 


PART LIST XL			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-002	Lower belt	1
2	30-0111-121	Seal	2
3	30-0111-124	Seal	2
4	30-0111-125	Seal	1
5	30-0121-008	O-ring	1
6	30-0121-009	O-ring	1
7	30-0121-014	Radial seal	1
8	30-0121-018	Radial seal	2
9	30-0121-071	Radial seal	2
10	30-0122-218	Fiber Seal	2
11	30-0130-195	Locking ring	1

PART LIST XXL 30-0190-936			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-143	Lower belt - long rig	1
2	30-0111-121	Seal	2
3	30-0111-124	Seal	2
4	30-0111-125	Seal	1
5	30-0121-008	O-ring	1
6	30-0121-009	O-ring	1
7	30-0121-014	Radial seal	1
8	30-0121-018	Radial seal	2
9	30-0121-071	Radial seal	2
10	30-0122-218	Fiber Seal	2
11	30-0130-195	Locking ring	1

**1.9.11 LOWER BELT
BEARING KIT**

 30-0190-918
OXE DIESEL PARTS CATALOGUE

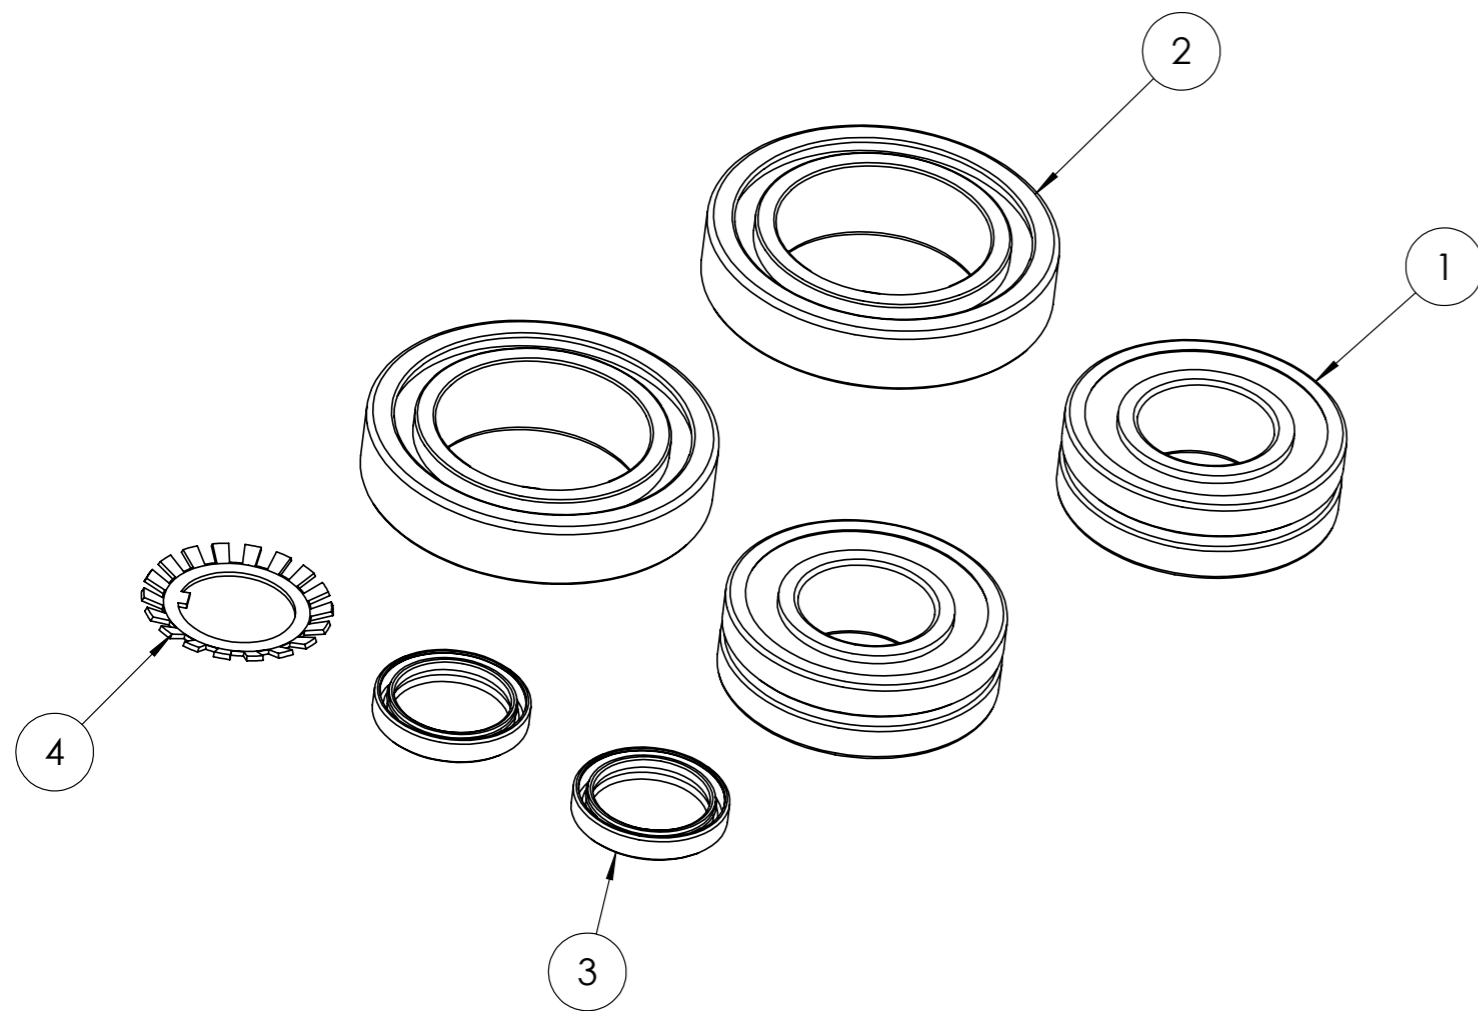


**1.9.11 LOWER BELT
BEARING KIT**

30-0190-918
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0120-001	Bearing	2
2	30-0120-008	Bearing	2
3	30-0121-071	Radial seal	2
4	30-0130-195	Locking ring	1

**1.9.12 LOWER HOUSING
ASSEMBLY KIT**

 30-0190-920
OXE DIESEL PARTS CATALOGUE

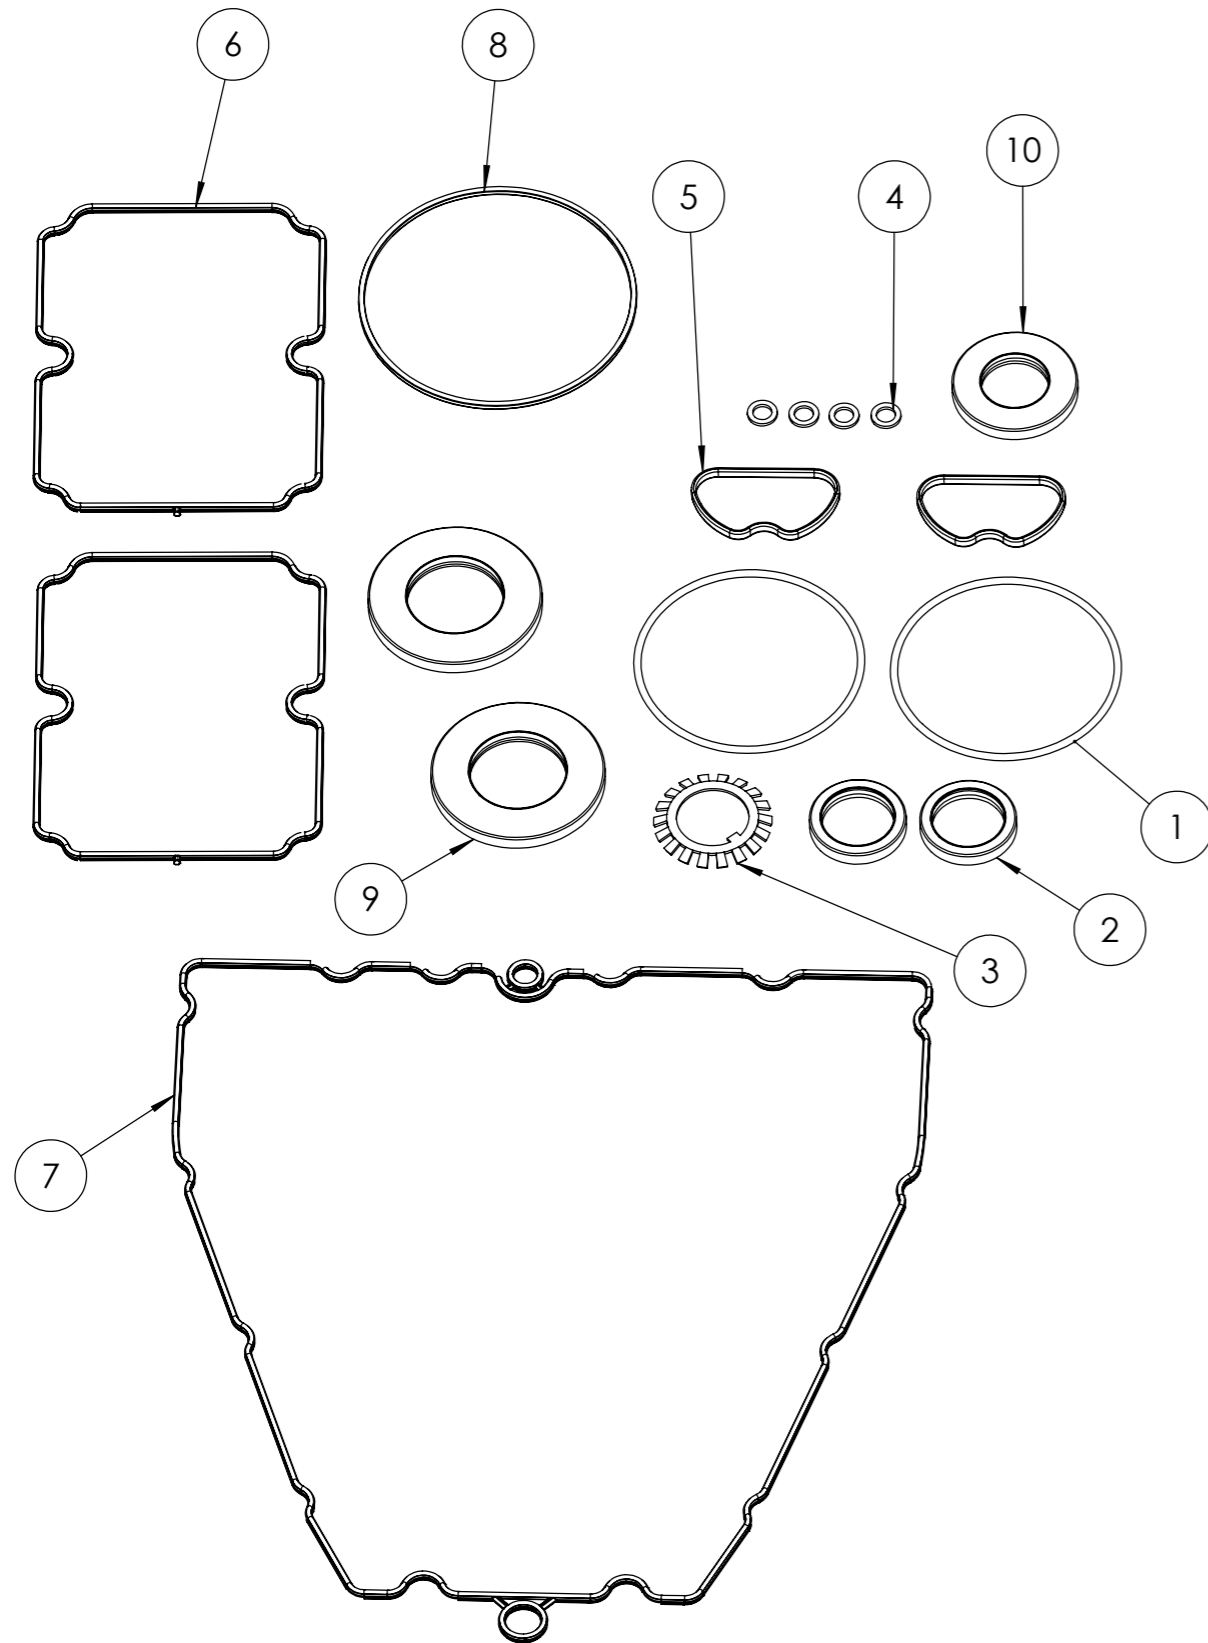


**1.9.12 LOWER HOUSING
ASSEMBLY KIT**

30-0190-920
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0121-008	O-ring	2
2	30-0121-071	Radial seal	2
3	30-0130-195	Locking ring	1
4	30-0122-218	Fiber seal	4
5	30-0111-124	Seal	2
6	30-0111-121	Seal	2
7	30-0111-125	Seal	1
8	30-0121-009	O-ring	1
9	30-0121-018	Radial seal	2
10	30-0121-014	Radial seal	1

**1.9.13 HYDRAULIC OIL
FILTER KIT**

 
30-0190-921
OXE DIESEL PARTS CATALOGUE

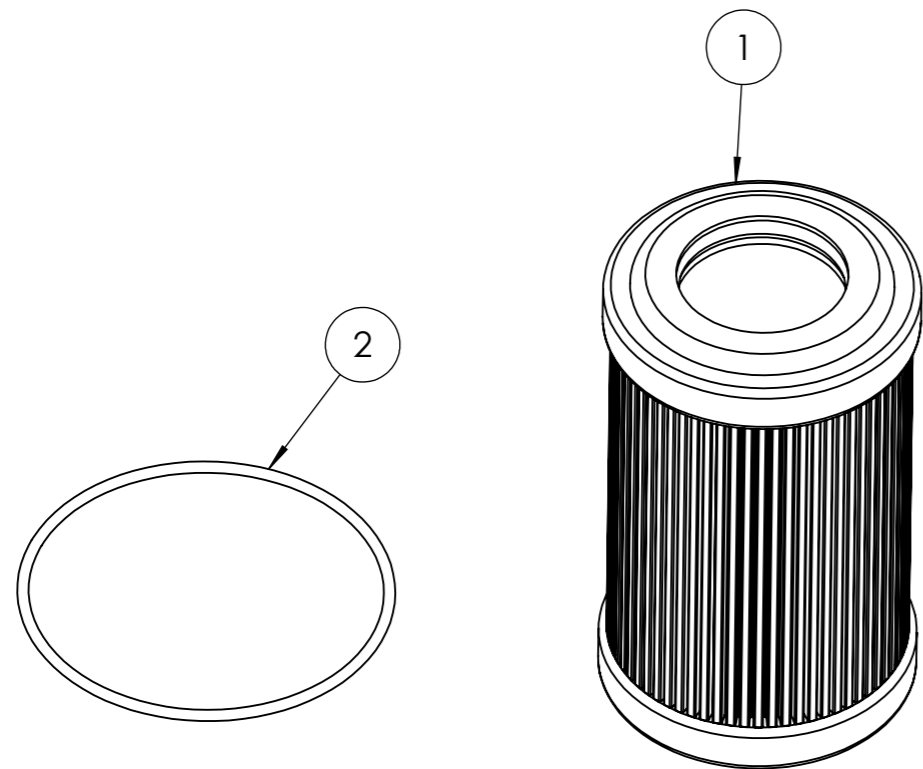


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0115-028	Hydraulic filter	1
2	30-0121-042	O-ring	1

**1.9.14 HYDRAULIC PUMP
SERVICE KIT**

 30-0190-922
OXE DIESEL PARTS CATALOGUE

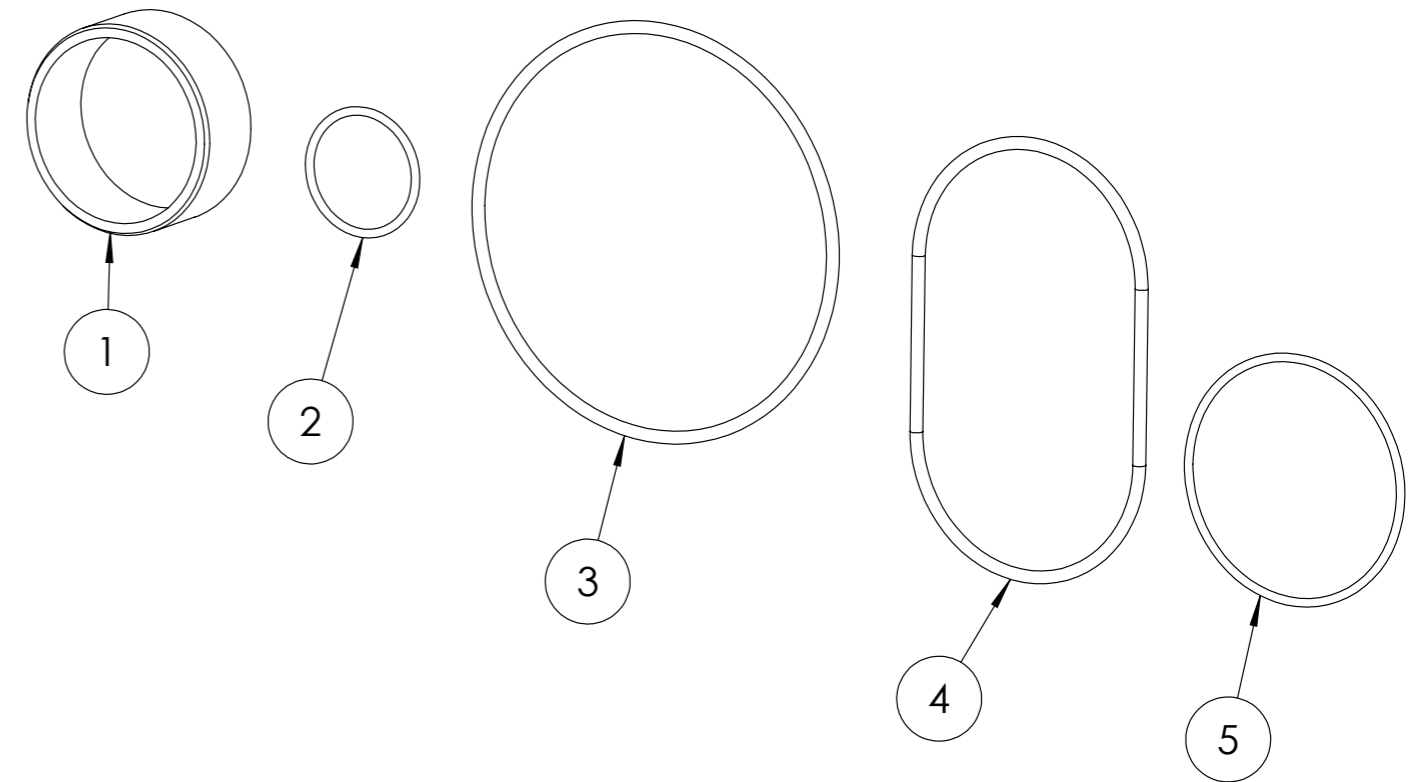

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0120-037	Bushing	1
2	30-0121-002	O-ring	1
3	30-0121-042	O-ring	1
4	30-0121-043	O-ring	1
5	30-0121-044	O-ring	1

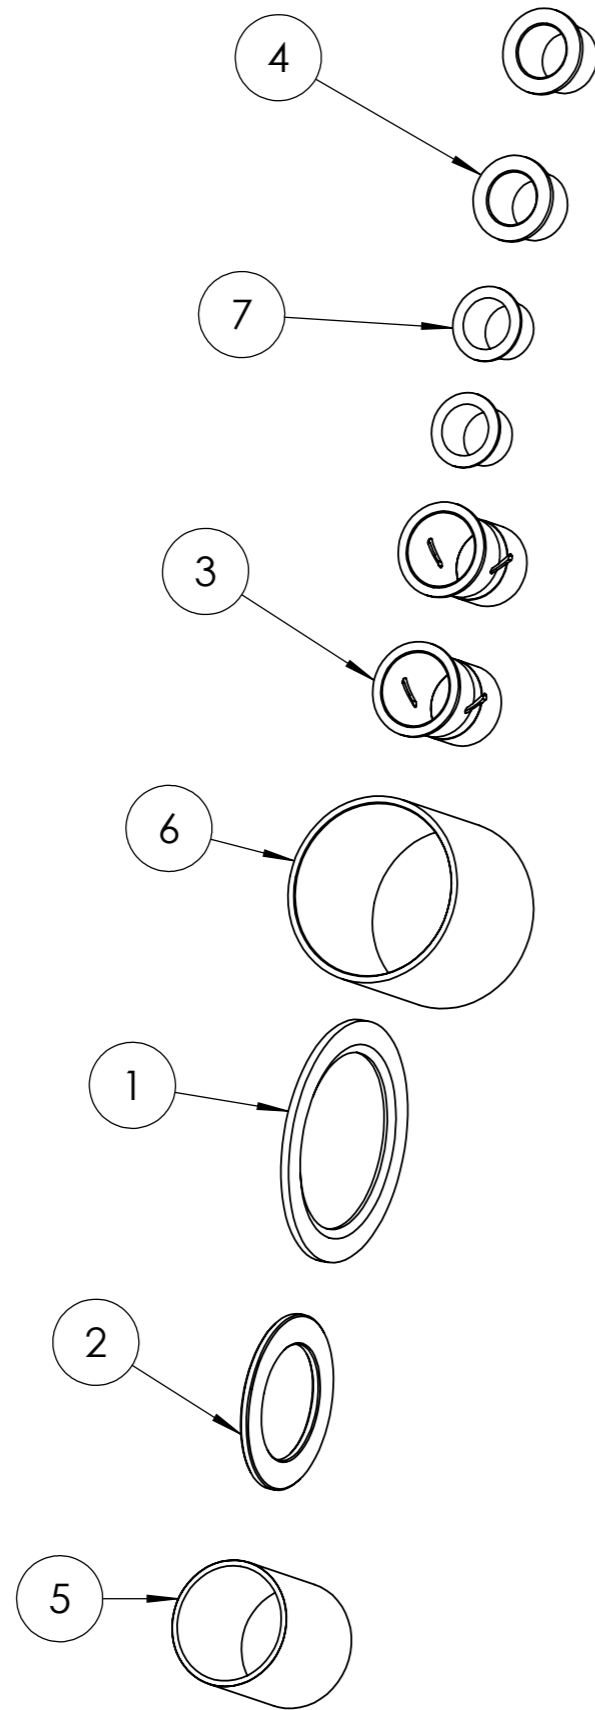 

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0113-009	Upper axial bearing	1
2	30-0113-011	Lower axial bearing	1
3	30-0113-083	Swivel bush	2
4	30-0113-084	Tilt piston bearing	2
5	30-0120-014	Bushing	1
6	30-0120-015	Bushing	1
7	30-0120-018	Bushing	2

1.9.16 GEARBOX REPAIR KIT

 
30-0190-925

OXE DIESEL PARTS CATALOGUE

1.9.16 GEARBOX REPAIR KIT

30-0190-925


OXE DIESEL PARTS CATALOGUE

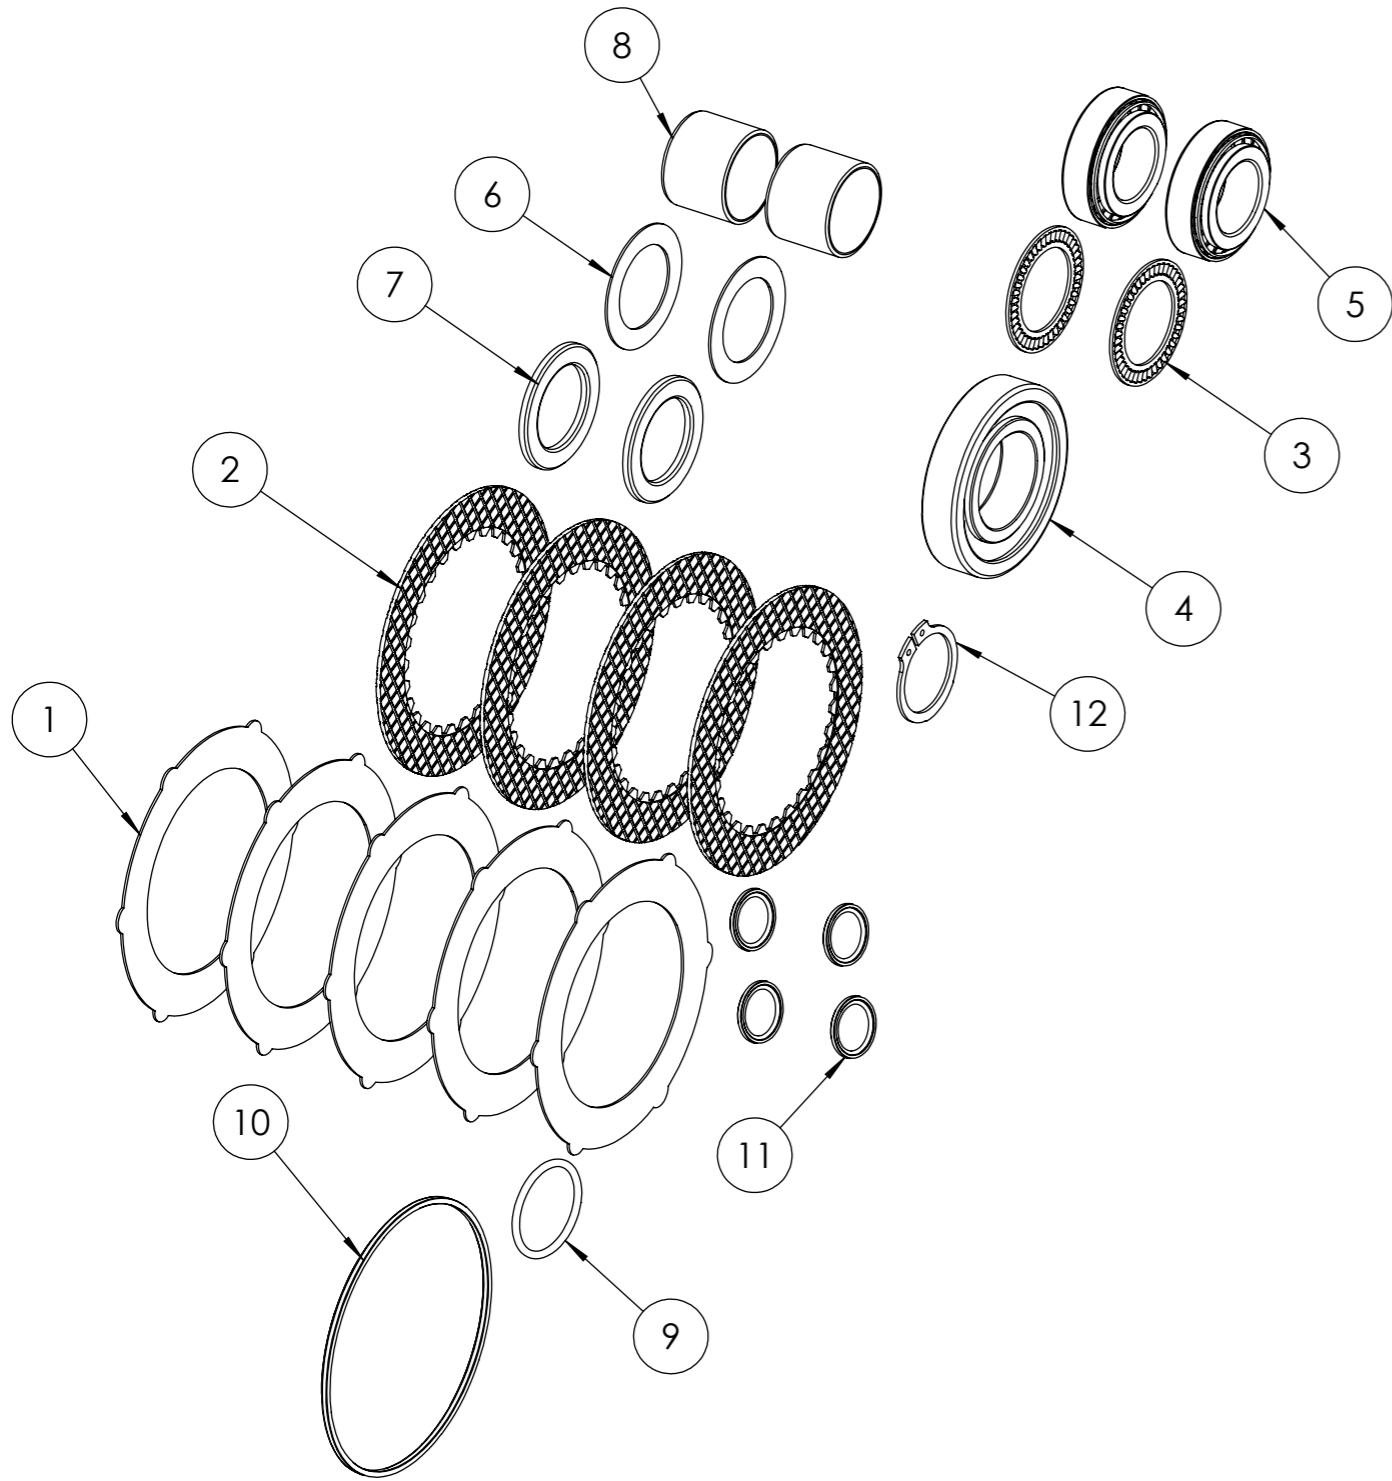

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0112-012	Steel friction disc	5
2	30-0112-013	Sintered friction disc	4
3	30-0120-003	Bearing	2
4	30-0120-006	Tapered roller bearing	1
5	30-0120-007	Tapered roller bearing	2
6	30-0120-009	Washer	2
7	30-0120-010	Washer	2
8	30-0120-011	Gear bushing	2
9	30-0121-006	O-ring	1
10	30-0121-009	O-ring	1
11	30-0121-021	Hydraulic shaft seal	4
12	30-0122-003	Locking ring	1

1.9.17 GEARBOX SERVICE KIT

 
30-0190-926
OXE DIESEL PARTS CATALOGUE

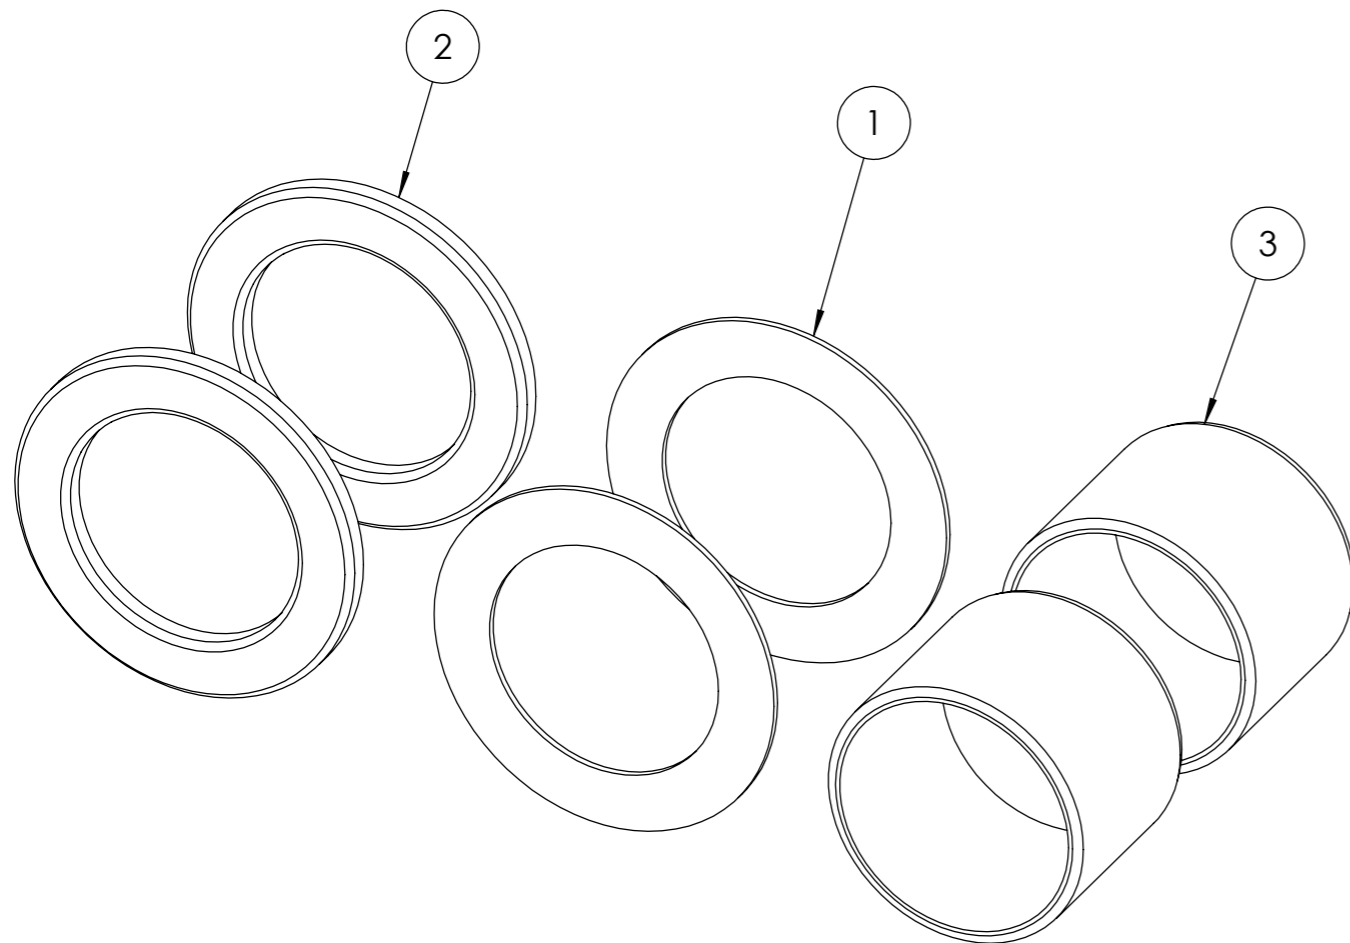

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0120-009	Washer	2
2	30-0120-010	Washer	2
3	30-0120-011	Gear bushing	2

1.9.18 GEARBOX BEARING KIT

 
30-0190-927
OXE DIESEL PARTS CATALOGUE

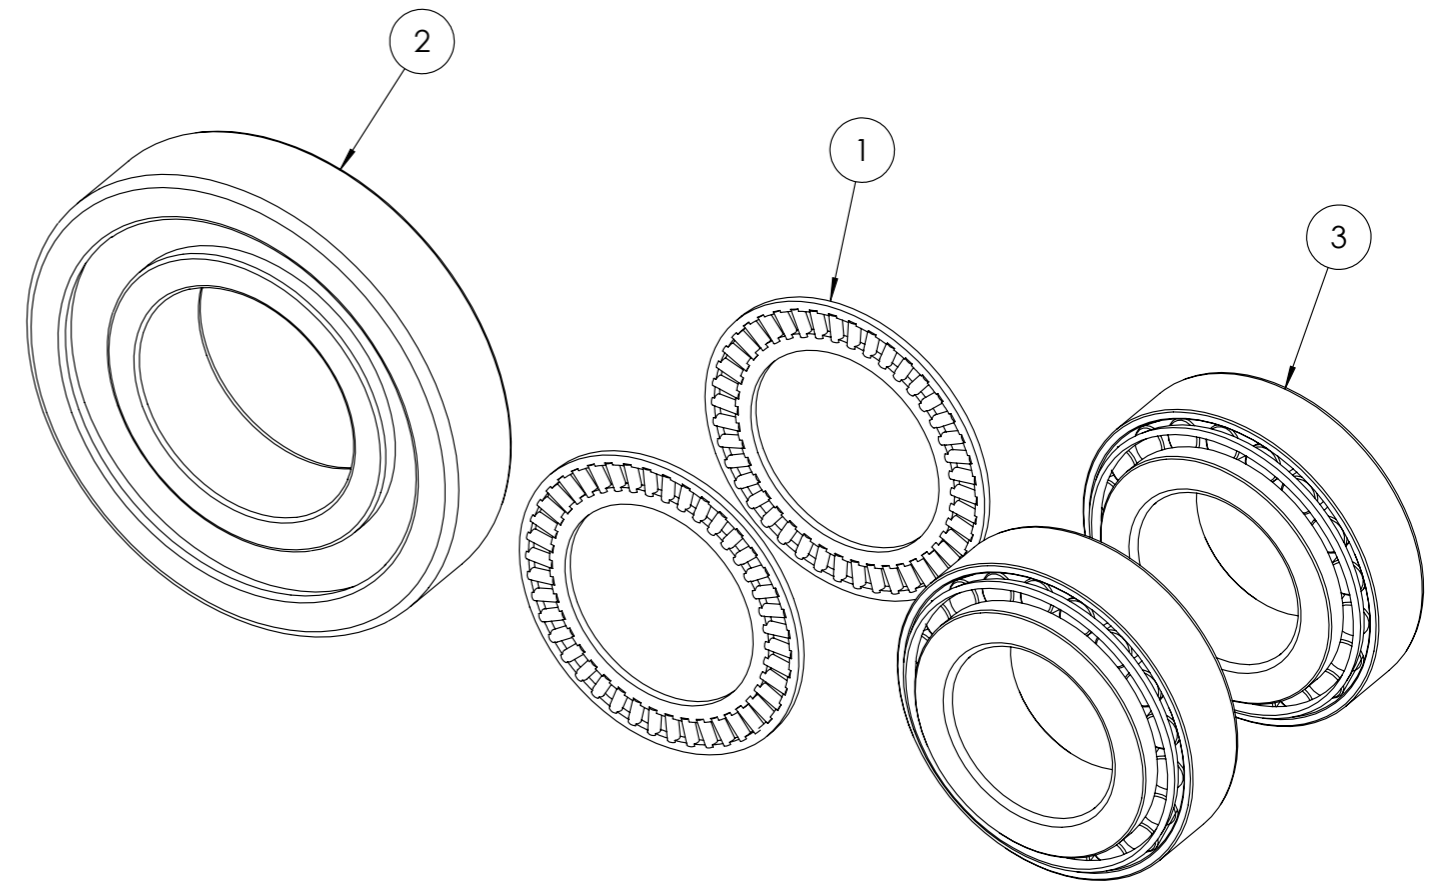

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0120-003	Bearing	2
2	30-0120-006	Tapered roller bearing	1
3	30-0120-007	Tapered roller bearing	2

**1.9.19 PROPELLER SHAFT
REPAIR KIT**

 
30-0190-928
OXE DIESEL PARTS CATALOGUE

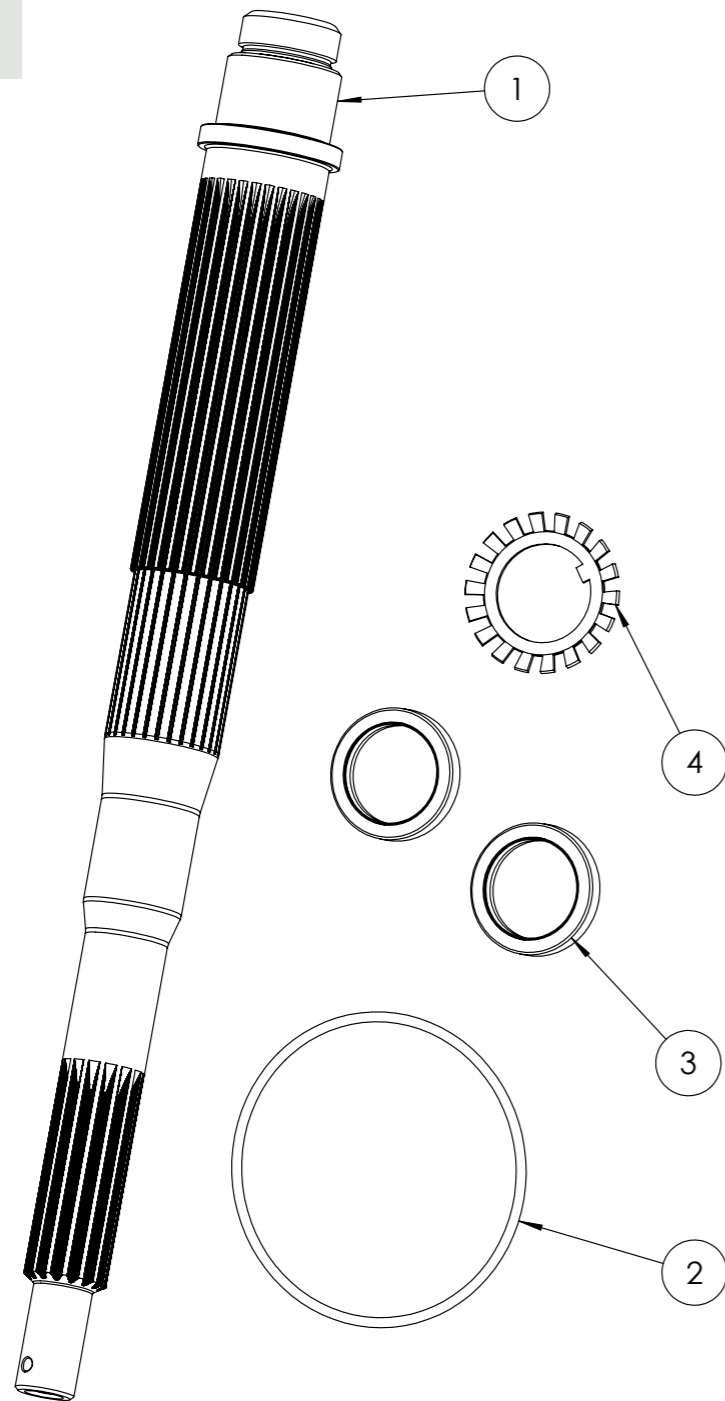

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-005	Propeller shaft	1
2	30-0121-008	O-ring	1
3	30-0121-071	Radial seal	2
4	30-0130-195	Locking ring	1

**1.9.20 PROPELLER SHAFT
BEARING KIT**

 30-0190-929
OXE DIESEL PARTS CATALOGUE

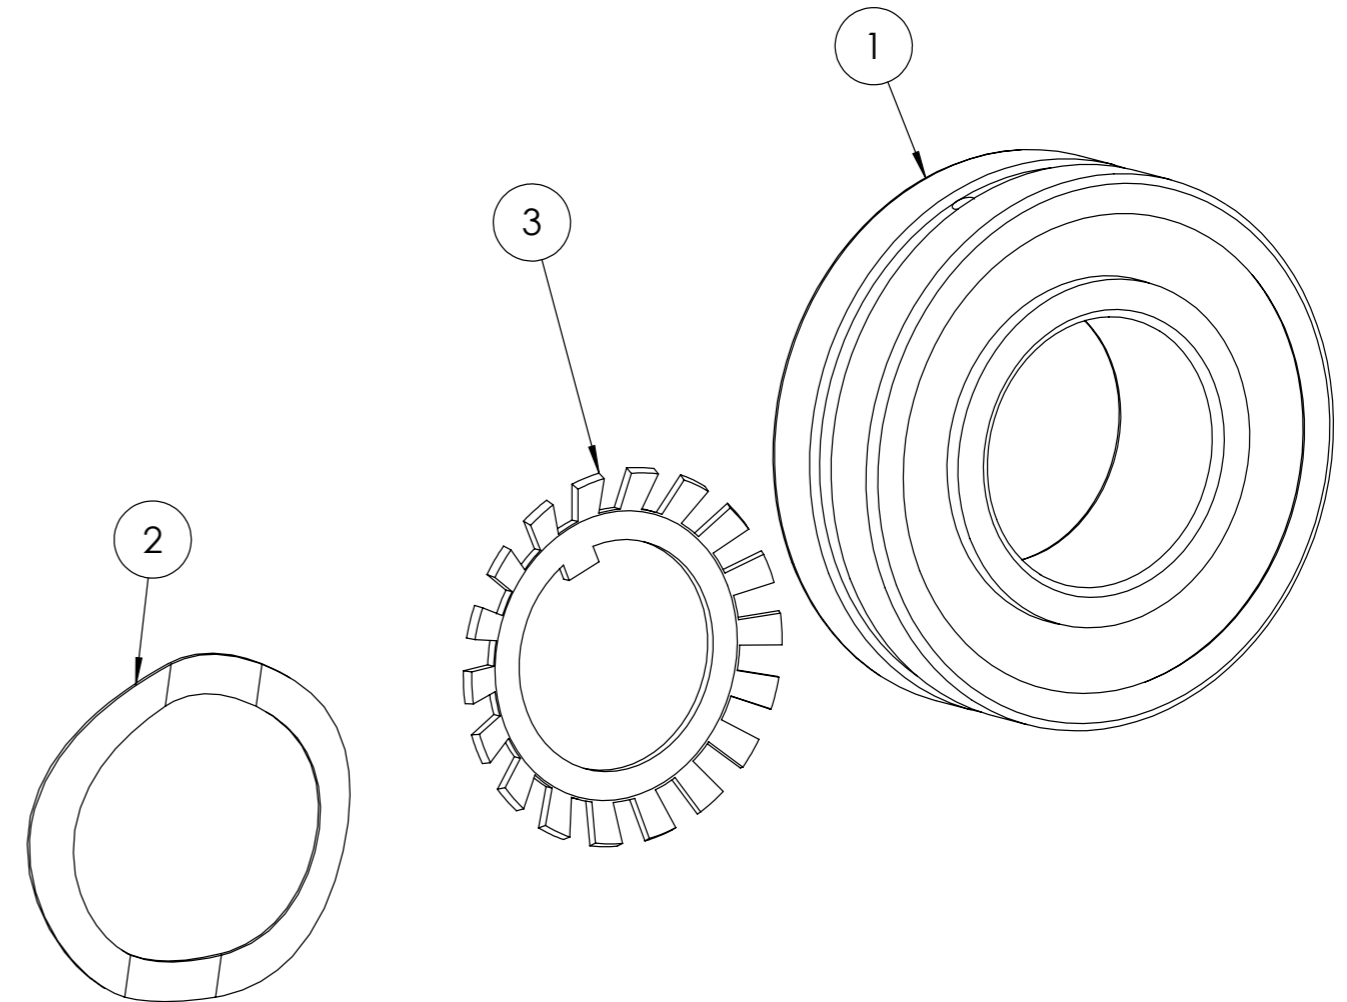


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0120-001	Bearing	1
2	30-0122-071	Washer	1
3	30-0130-195	Locking ring	1

1.9.21 ANODE KIT

30-0190-930

 OXE DIESEL PARTS CATALOGUE

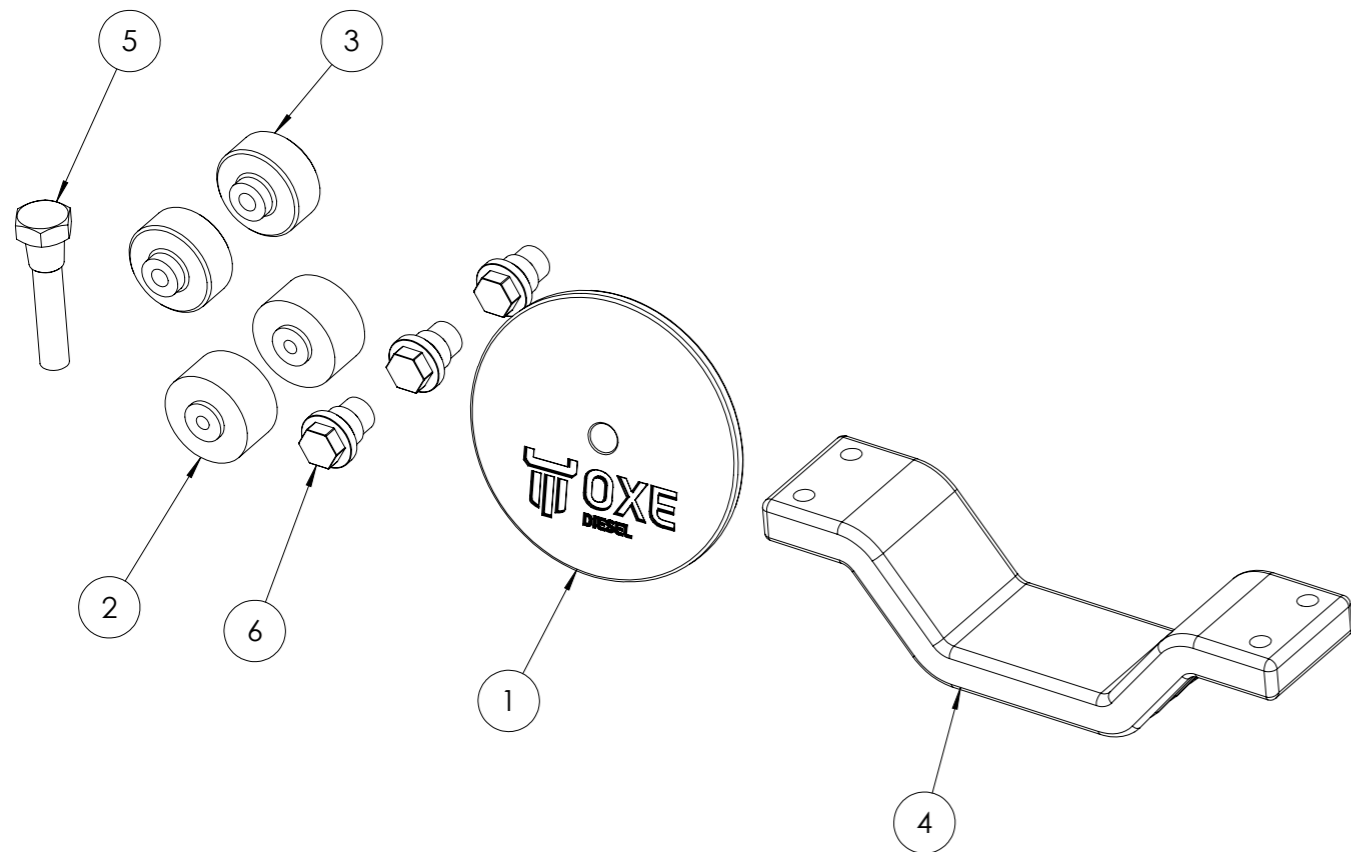


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0111-066	Zinc anode fin	1
2	30-0113-043	Anode	2
3	30-0113-044	Anode	2
4	30-0113-032	Anode	1
5	30-0122-226	Cooler anode	1
6	30-0122-234	Anode	3

1.9.22 SENSOR KIT

30-0190-931

 OXE DIESEL PARTS CATALOGUE

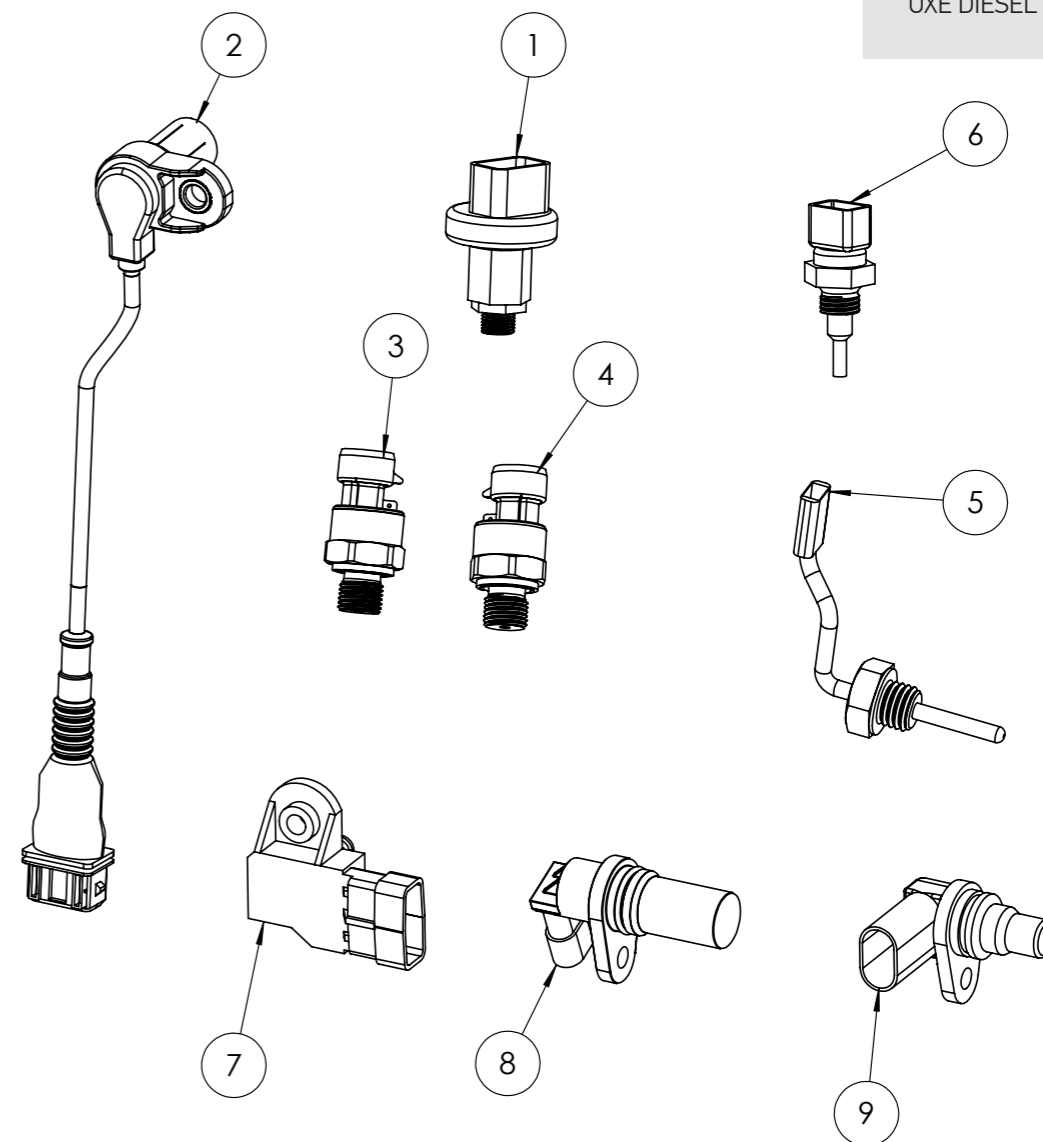


PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0116-020	Air filter restriction sensor	1
2	30-0116-034	Propeller speed sensor	1
3	30-0116-050	Engine oil pressure sensor	1
4	30-0116-052	Gearbox oil pressure sensor	1
5	30-0116-053	EGT Sensor	1
6	30-0116-080	Fluid temp sensor	1
7	30-0116-904	T-MAP Sensor	1
8	30-0116-905	Crankshaft sensor	1
9	30-0116-906	Camshaft Sensor	1

1.9.23 FUEL PUMP KIT

30-0190-935

 OXE DIESEL PARTS CATALOGUE

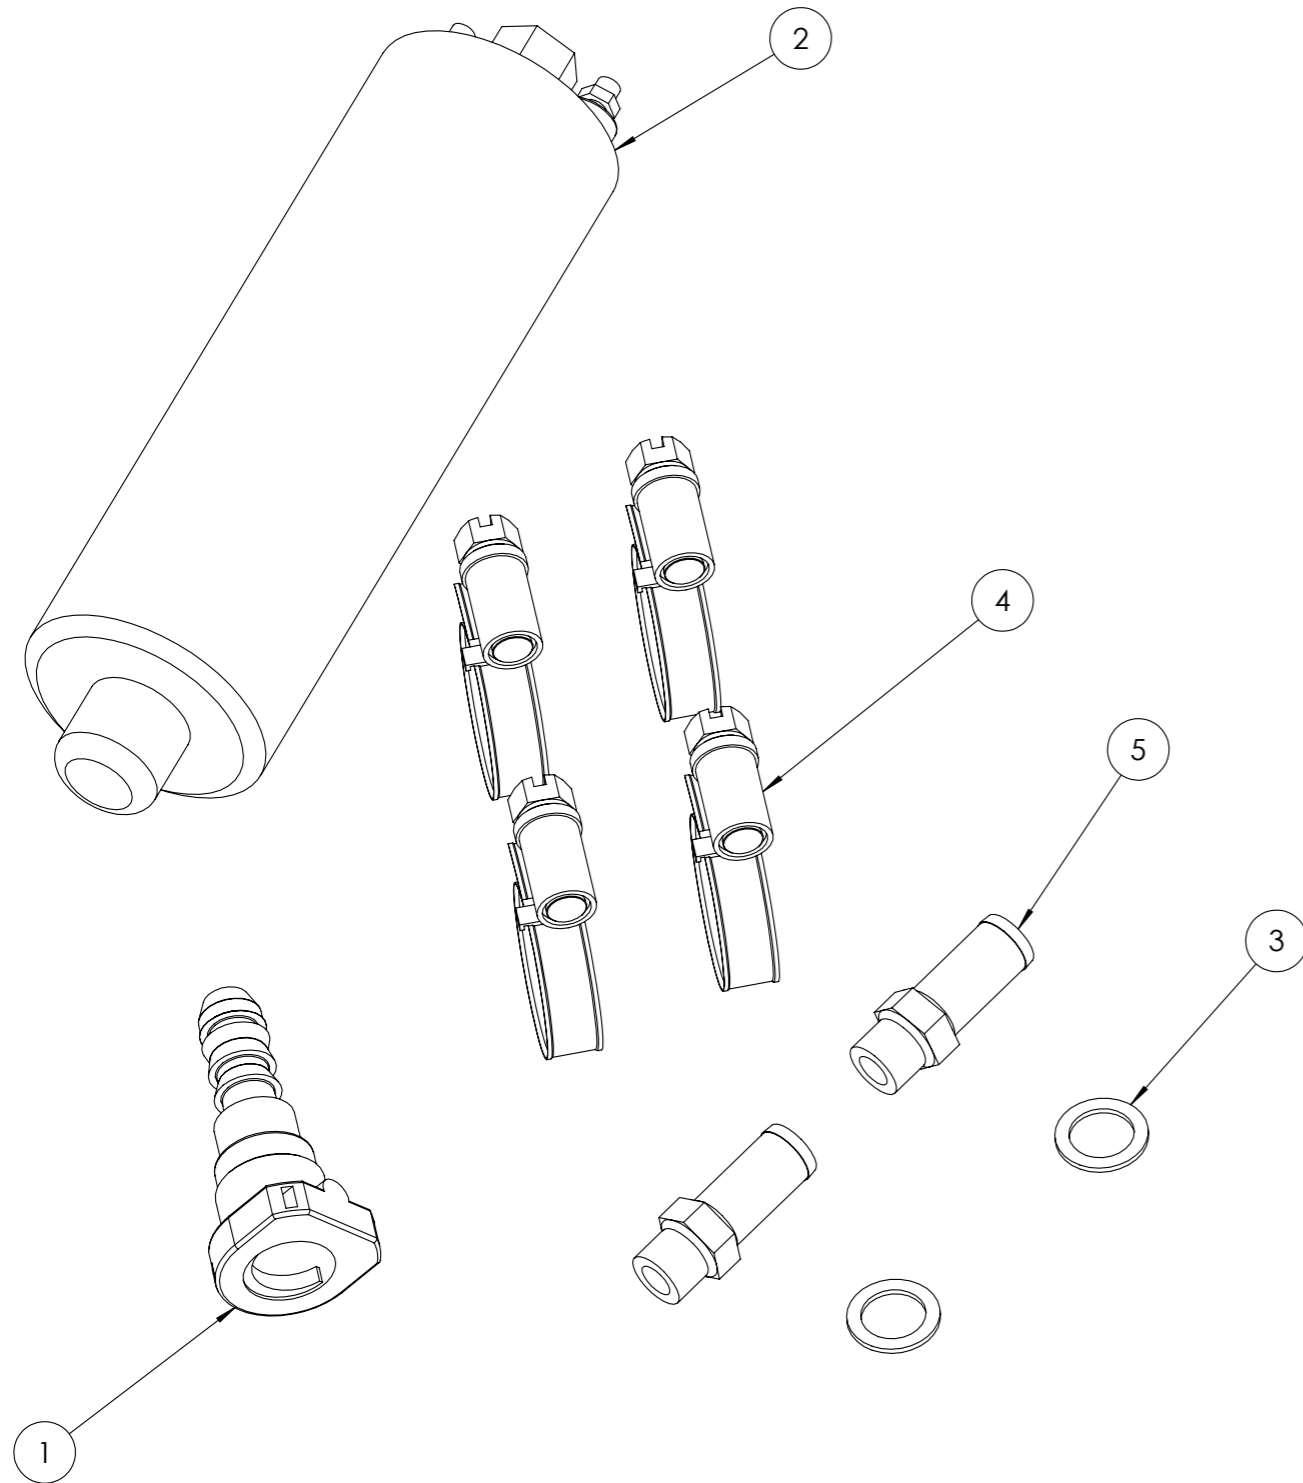

1.9.23 FUEL PUMP KIT

30-0190-935

OXE DIESEL PARTS CATALOGUE

PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-140	Quick connector	1
2	30-0114-444	Fuel pump	1
3	30-0121-052	Copper washer	2
4	30-0122-049	Hose clamp	4
5	30-0122-254	Hose connector	2
6	30-0122-234	Anode M14x1.5 zink short	3

**WHEN RELIABILITY
IS KEY.**

CIMCO
Endurance by Engineering

Cimco Marine AB, Metallgatan 19 A Ängelholm, SE-262 72 Ängelholm, SWEDEN, +46 (0)431-37 11 30, www.oxe-diesel.com
Copyright © 2017 Cimco Marine AB.