

# DULON TEAK DEGREASER 41



## TEAK DEEP-CLEANER & DEGREASER

### DESCRIPTION

Phase 1 of the 3-STEP TEAK CARE SYSTEM

Powerful detergent to remove (winch) grease, oils, diesel spatters, suntan oil etc. from teak (deck) and furniture.

- Removes stains caused by grease, oil, lubricants, fuel, coffee, food etc.
- Cleans deep into wood.
- Water-based formula.
- Safe to use.
- Biodegradable.

### INSTRUCTIONS

1. Apply DULON TEAK DEGREASER 41 pure or diluted (1:1) to the teak(deck) or furniture.
2. Allow 5 minutes to take effect (prevent drying).
3. Scrub with soft brush or fine scrubpad.
4. Rinse off with water.

Follow the process with phase 2 of the DULON 3-STEP TEAK CARE SYSTEM: clean and restore to the original colour with DULON TEAK CLEAN & BRIGHTENER 42.

### AVAILABLE PACKAGING

Article number	Product	Packaging	Content
6-41010	Dulon Teak Degreaser 41	Flacon	1L
6-41050	Dulon Teak Degreaser 41	Can	5L
6-41250	Dulon Teak Degreaser 41	Can	25L

### TIPS & TRICKS

- Also excellent to use on wooden garden furniture.
- Follow the process with phase 2 of the DULON 3-STEP TEAK CARE SYSTEM: clean and restore to the original colour with DULON TEAK CLEAN & BRIGHTENER 42.

### C.R.P. INDICATOR

- Clean.

### STORAGE & USE

- DULON TEAK DEGREASER 41 (1l) treats a maximum of 10m<sup>2</sup>.
- Store frost-free, in a dark and dry place .
- Apply above 0°C.
- do not use in direct sun light.

### YOU MAY ALSO LIKE

- 



# DULON TEAK DEGREASER 41

TEAK DEEP-CLEANER & DEGREASER

---



## RELATED PRODUCTS

- Dulon Teak Clean & Brightener 42.
- Dulon Teak Protector 43.

