


ADD WATER

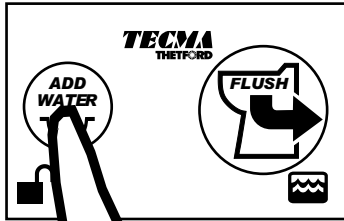


Press and Release
(approx. 1 sec.)

Adds approx. .5L of water.

Can be repeated, but only until max amount is reached.


FLUSH - Marine Mode

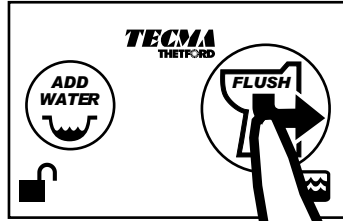

Press and Release
(approx. 1 sec.)

- Starts FLUSH sequence**
- Adds water- (the amount of water is set in Residential Mode)
 - Macerates
 - Approx. 8 second delay
 - Macerates
 - A small amount of water is added

FLUSH - Residential Mode

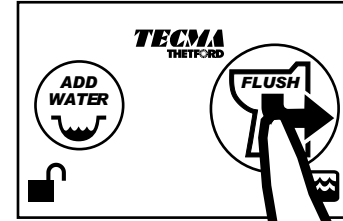


Press and Release
(approx. 1 sec.)

- Starts FLUSH sequence**
- Adds water
 - Macerates
 - Refills

The amount of water refilled into the bowl can be adjusted.
See: "Setting Flush Mode".

Setting Flush Mode

Set the water refill to the desired level.

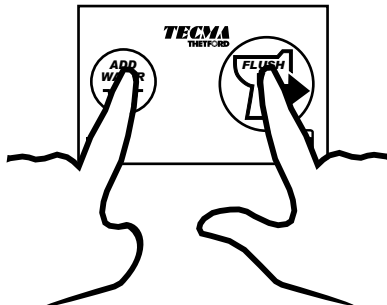

Press & hold both buttons for 3 seconds

The bowl empties, no water is added.

Lighting will begin to flash and programming mode will be entered.


MARINE MODE

Sets an empty bowl after flush.

RESIDENTIAL MODE

Sets the water level in the bowl after flush.


Remove both fingers when the lighting begins to flash.

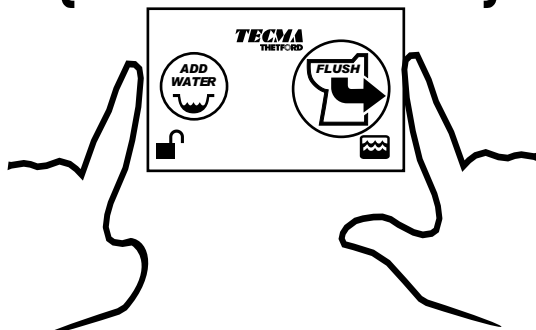

The lighting stops flashing

Toilet will now refill only the trap at the bottom of the bowl.

Continue to press and hold both buttons, until water reaches the desired level, then release both buttons.

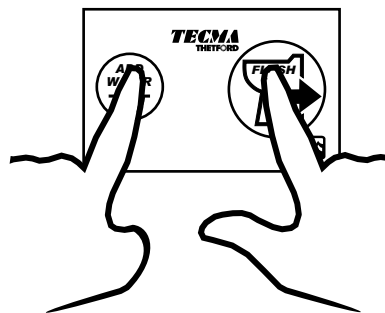


The lighting stops flashing


This sets the amount of water that will be used in future flushes.

Recommended water level depth

Approximately 1/2 inch or 12 millimeters above the outfall opening

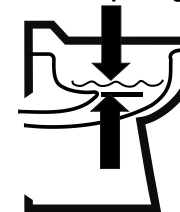

Emptying the Bowl

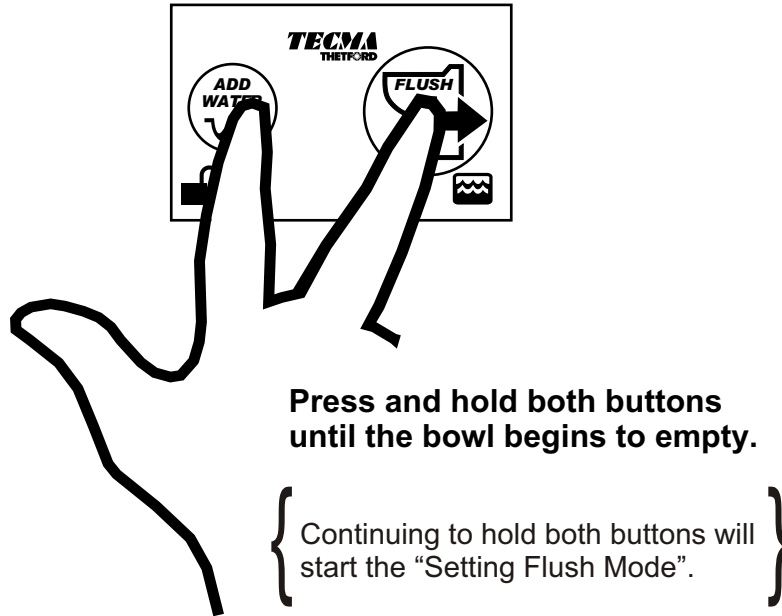


**Press and hold both buttons
until the bowl begins to empty.**

{ Continuing to hold both buttons will
start the "Setting Flush Mode". }


The toilet empties, but no water is added.

(Emptying the bowl will not work
if the tank sensor reads full (🚰)
and the lockout mode (🔒) is not disabled.)

DISABLING OR RE-ENABLING LOCKOUT PROTECTION

When the holding tank becomes full the tank icon will turn red. 
During this time the toilet will not flush. See: "Tank Lockout Override".

Enabling Lockout:

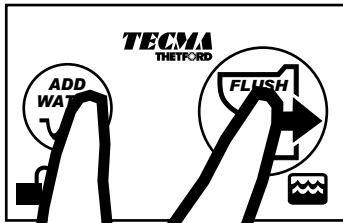


Quickly press both buttons twice

Lockout
ENABLED

 Unlock symbol light
turns OFF

Disabling Lockout:

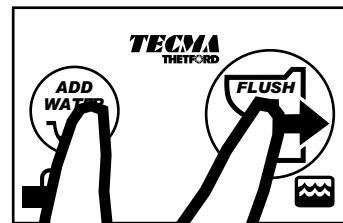

Quickly press both buttons twice

Lockout
DISABLED

 Unlock symbol light
turns ON

All functions are available, even if the tank is full.

Note: This red symbol will remain on as long as lockout is disabled, even if the holding tank is emptied.


 **CAUTION**

**Disabling the Lockout
can cause over filling
of a holding tank.**

Tank Lockout Override

Toilet will not flush
when tank sensor sends a tank full signal
and the tank level indicator is red. 

(The Water Add function is not locked out.)

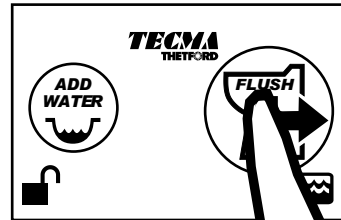

To flush-
Press and Hold
the FLUSH button
for more than
6 seconds to
override the
lockout.

Tank and Lock icons will flash.

Flush Lockout remains active.




CAUTION

Overriding the Lockout
can cause over filling
of a holding tank.

Sleep Mode

Lighting turns off after 8 hours of non-use.

In Sleep Mode the wall switch lighting will turn off until the next use.

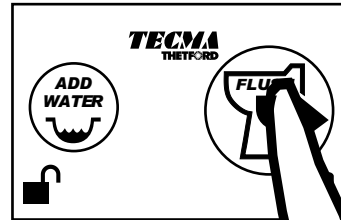


Pushing either button will return lighting to full brightness.


After control is re-lit, pressed buttons will perform selected functions .

During Sleep Mode, the processor continues to communicate with the Wall Switch performing systems checks and update.


Lighting of tank Icon

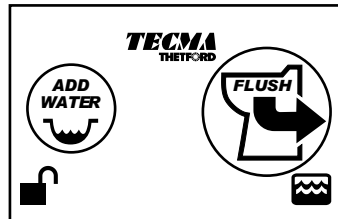

Icon not lighted-toilet system is OFF, or not receiving power.

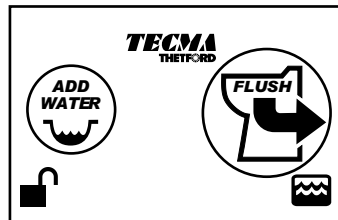


Icon lighted Green-toilet system is ON, and the holding tank is less than half full.

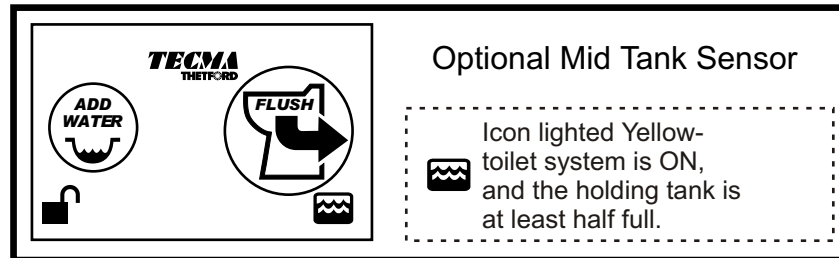

Optional Mid Tank Sensor

Icon lighted Yellow-toilet system is ON, and the holding tank is at least half full.

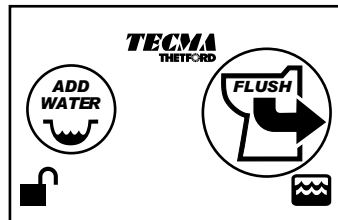

Icon lighted Red-toilet system is ON, and the holding tank is full.

 **CAUTION**

A full tank signal is indicated by the red tank icon. Flushing can over fill the holding tank.